JVC

SERVICE MANUAL

WIDE LCD PANEL TELEVISION

LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S, LT-Z26SX4S/S

BASIC CHASSIS
FL

D.I.S.T. Digital Image Scaling Technology

CINEMA SURROUND

BBE



TABLE OF CONTENTS

1 PRECAUTION 1-3
2 SPECIFIC SERVICE INSTRUCTIONS 1-6
3 DISASSEMBLY 1-10
4 ADJUSTMENT 1-16
5 TROUBLESHOOTING 1-23

COPYRIGHT © 2004 Victor Company of Japan, Limited

No.YA208
2004/12

SPECIFICATION

Items		Contents
Dimensions (W × H × D)		70.3cm × 55.5 cm × 30.0 cm [Included stand] 70.3cm × 49.1 cm × 10.7 cm [TV only]
Mass		16.1kg [Included stand] 12.8kg [TV only]
Power Input		AC110V - AC240 V, 50 Hz / 60 Hz
Power Consumption		125W (Standby: 2.8W)
TV RF System		B, G, I, D, K, K1, M
Colour System		PAL / SECAM / NTSC 3.58 / NTSC 4.43
Stereo System		A2 (B/G, D/K), NICAM (B/G, I, D/K)
Teletext System		FLOF (Fastext), TOP, WST (World Standard System)
Receiving Frequency	VHF Low	46.25MHz - 168.25MHz
	VHF High	175.25MHz - 463.25MHz
	UHF	471.25MHz - 863.25MHz
	CATV	Mid (X - Z+2, S1 - S10) / Super (S11 - S20) / Hyper (S21 - S41) bands
Intermediate Frequency	VIF	38.0MHz (B, G, I, D, K, L)
	SIF	32.26MHz (5.74MHz: B), 32.15MHz (5.85MHz: G), 31.45MHz (6.55MHz: I) 31.75MHz (6.25MHz: D), 32.15MHz (5.85MHz: K)
Colour Sub Carrier	PAL	4.43MHz
	SECAM	4.40625MHz / 4.25MHz
	NTSC	3.58MHz / 4.43MHz
LCD panel		26V-inch wide aspect (16:9)
Screen Size		Diagonal : 66cm (H:57.6cm × V : 32.4cm)
Display Pixels		Horizontal : 1366 dots × Vertical : 768 dots (W-XGA)
Audio Power Output		10W + 10W
Speaker		6.6cm, round type × 2 (Oblique corn)
Aerial terminal (VHF/UHF)		75Ω unbalanced, coaxial
Video / Audio Input-1/2/3	Component Video	Component connector (2-row 14-pn × 1) (Input-1)
	[Input-1/3]	RCA pin jack × 3 (Input-3)
	1125i	Y : 1V (p-p) (Sync signal: ±0.35V(p-p), 3-value sync.), 75 Ω Pb/Pr : ±0.35V(p-p), 75 Ω
	625p / 525p	Y : 1V (p-p), Positive (Negative sync provided), 75 Ω
	625i / 525i	Pb/Pr : 0.7V(p-p), 75 Ω
	S-Video	Mini-DIN 4 pin connector × 2
	[Input-1/2]	Y: 1V (p-p), Positive (Negative sync provided), 75 Ω C: 0.286V (p-p) (Burst signal), 75 Ω
	Video	1V (p-p), Positive (Negative sync provided), 75 Ω, RCA pin jack × 3
	Audio	500mV (rms), High impedance, RCA pin jack × 6
Video / Audio Output	S-Video	Mini-DIN 4 pin connector × 1 Y: 1V (p-p), Positive (Negative sync provided), 75 Ω C: 0.286V (p-p) (Burst signal), 75 Ω
	Video	1V (p-p), Positive (Negative sync provided), 75 Ω, RCA pin jack × 1
	Audio	500mV (rms), Low impedance, RCA pin jack × 2
PC (RGB) Input		D-sub 15pin × 1 R/G/B : 0.7V (p-p), 75Ω HD / VD : 1V (p-p) to 5V (p-p), high impedance < Available signal > VGA : 640 pixels × 480 pixels (Horizontal : 31.5kHz / Vertical : 60Hz) XGA : 1024 pixels × 768 pixels (Horizontal : 48.4kHz / Vertical : 60Hz)
Audio Output		500mV (rms), Low impedance, RCA pin jack × 2
Headphone		3.5mm stereo mini jack × 1
Remote Control Unit		RM-C1830H (AA/R6 dry cell battery × 2)

Design & specifications are subject to change without notice.

SECTION 1
PRECAUTION

1.1 SAFETY PRECAUTIONS

(1) The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.

(2) Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.

(3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (⚠) on the parts list in Service manual**. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.

(4) **Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND, the ISOLATED (NEUTRAL) : (⏚) side GND and EARTH : (⏚) side GND.
Don't short between the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND and never measure the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND at the same time with a measuring apparatus (oscilloscope etc.). If above note will not be kept, a fuse or any parts will be broken.


(5) When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

(6) **Isolation Check (Safety for Electrical Shock Hazard)**
After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screw heads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

a) **Dielectric Strength Test**
The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 3000V AC (r.m.s.) for a period of one second. (. . . Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)
This method of test requires a test equipment not generally found in the service trade.

b) **Leakage Current Check**
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).


Alternate Check Method
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000Ω per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

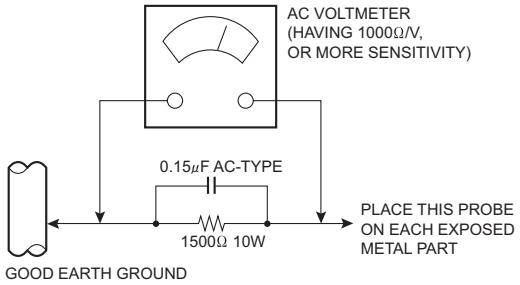

1.2 INSTALLATION


1.2.1 HEAT DISSIPATION

If the heat dissipation vent behind this unit is blocked, cooling efficiency may deteriorate and temperature inside the unit will rise. The temperature sensor that protects the unit will be activated when internal temperature exceeds the pre-determined level and power will be turned off automatically.Therefore, please make sure pay attention not to block the heat dissipation vent as well as the ventilation outlet behind the unit and ensure that there is room for ventilation around it.

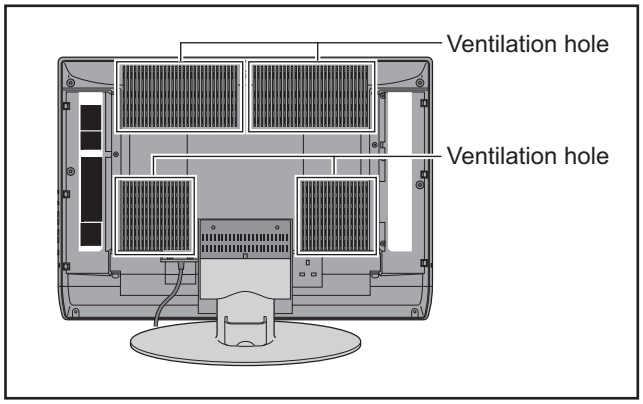

1.2.2 INSTALLATION REQUIREMENTS


Ensure that the minimal distance is maintained, as specified below, between the unit with and the surrounding walls, as well as the floor etc.Install the unit on stable flooring or stands.Take precautionary measures to prevent the unit from tipping in order to protect against accidents and earthquakes.

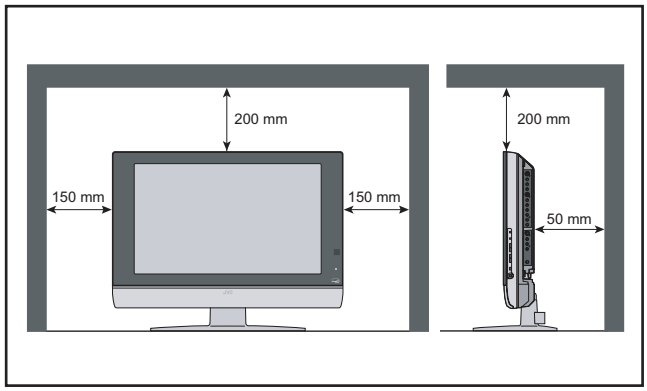

1.2.3 INSTALLATION REQUIREMENTS

To ensure safety in an emergency such as an earthquake, and to prevent accidents, ensure that measures are taken to prevent the TV dropping or falling over.

Use the supplied screws to firmly attach the supplied hooks (OPTION) to the back of the TV, and use commercially available cord to fix the TV to rigid components such as walls and columns.

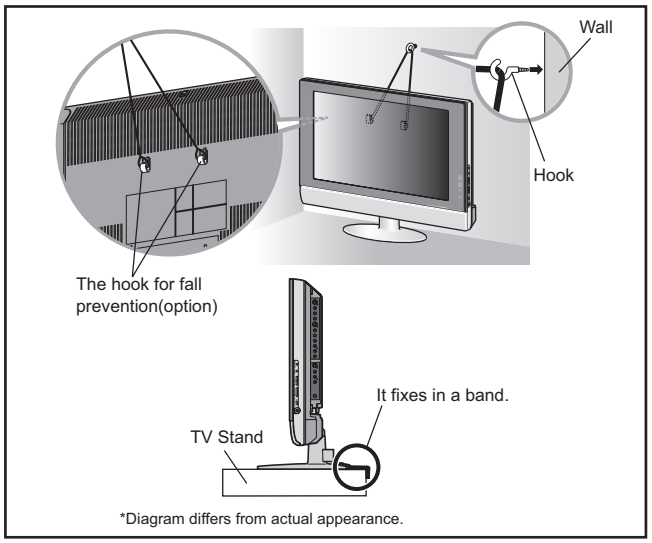

1.2.4 NOTES ON HANDLING

(1) WHEN TAKING UNIT OUT OF A PACKING CASE

When taking the unit out of a packing case, do not grasp the upper part of the unit. If you take the unit out while grasping the upper part, the LCD PANEL may be damaged because of a pressure. Instead of grasping the upper part, put your hands on the lower backside or sides of the unit.

(2) AS FOR PRESSING OR TOUCHING A SPEAKER

Be careful not to press the opening of the speaker in the lower part of the unit and around them since the decorative sheet on the surface of the openings may be deformed.

1.3 HANDLING LCD PANEL

1.3.1 PRECAUTIONS FOR TRANSPORTATION

When transporting the unit, pressure exerted on the internal LCD panel due to improper handling (such as tossing and dropping) may cause damages even when the unit is carefully packed. To prevent accidents from occurring during transportation, pay careful attention before delivery, such as through explaining the handling instructions to transporters.

Ensure that the following requirements are met during transportation, as the LCD panel of this unit is made of glass and therefore fragile:

(1) USE A SPECIAL PACKING CASE FOR THE LCD PANEL
When transporting the LCD panel of the unit, use a special packing case (packing materials). A special packing case is used when a LCD panel is supplied as a service spare part.

(2) ATTACH PROTECTION SHEET TO THE FRONT
Since the front (display part) of the panel is vulnerable, attach the protection sheet to the front of the LCD panel before transportation. Protection sheet is used when a LCD panel is supplied as a service spare part.

(3) AVOID VIBRATIONS AND IMPACTS
The unit may be broken if it is toppled sideways even when properly packed. Continuous vibration may shift the gap of the panel, and the unit may not be able to display images properly. Ensure that the unit is carried by at least 2 persons and pay careful attention not to exert any vibration or impact on it.

(4) DO NOT PLACE EQUIPMENT HORIZONTALLY
Ensure that it is placed upright and not horizontally during transportation and storage as the LCD panel is very vulnerable to lateral impacts and may break. During transportation, ensure that the unit is loaded along the traveling direction of the vehicle, and avoid stacking them on one another. For storage, ensure that they are stacked in 2 layers or less even when placed upright.

1.3.2 OPTICAL FILTER (ON THE FRONT OF THE LCD PANEL)

(1) Avoid placing the unit under direct sunlight over a prolonged period of time. This may cause the optical filter to deteriorate in quality and COLOUR.

(2) Clean the filter surface by wiping it softly and lightly with a soft and lightly fuzz cloth (such as outing flannel).

(3) Do not use solvents such as benzene or thinner to wipe the filter surface. This may cause the filter to deteriorate in quality or the coating on the surface to come off. When cleaning the filter, usually use the neutral detergent diluted with water. When cleaning the dirty filter, use water-diluted ethanol.

(4) Since the filter surface is fragile, do not scratch or hit it with hard materials. Be careful enough not to touch the front surface, especially when taking the unit out of the packing case or during transportation.

1.3.3 PRECAUTIONS FOR REPLACEMENT OF EXTERIOR PARTS

Take note of the following when replacing exterior parts (REAR COVER, FRONT PANEL, etc.):

(1) Do not exert pressure on the front of the LCD panel (filter surface). It may cause irregular COLOUR.

(2) Pay careful attention not to scratch or stain the front of the LCD panel (filter surface) with hands.

(3) When replacing exterior parts, the front (LCD panel) should be placed facing downward. Place a mat, etc. underneath to avoid causing scratches to the front (filter surface).

SECTION 2
SPECIFIC SERVICE INSTRUCTIONS

2.1 FEATURES

D.I.S.T. (Digital Image Scaling Technology)
This system uses line interpolation to double the number of scanning lines and achieve high resolution, flicker-free picture.

COLOUR MANAGEMENT
This function ensures dull colours are compensated to produce natural hues.

PICTURE MANAGEMENT
This function makes it easier to see the dark areas when a picture has many dark areas, and makes it easier to see the bright areas when a picture has many bright areas.

ZOOM
This function can change the screen size according to the picture aspect ratio.

DIGITAL VNR
This function cuts down the amount of noise in the original picture.

SUPER DIGIPURE
This function uses the latest in digital technology to give you a natural-looking picture.

PULL DOWN
This function displays a cinema film picture more smoothly and naturally on the screen.

3D CINEMA SOUND
You can enjoy sounds with a widerambience.

2.2 MAIN DIFFERENCE LIST

Item	LT-Z26SX4B	LT-Z26SX4B/A	LT-Z26SX4B/S	LT-Z26SX4S/S
FRONT PANEL COLOUR	BLACK	←	←	SILVER
POWER CORD	Round pin (2-pin) type	Australia pin (2-pin) type	UK pin (3-pin) type	←
SHIELD COVER(DIGITAL SIGNAL PWB)	Not used	←	Used	←
TOP SHIELD CASE(DIGITAL SIGNAL PWB)	Not used	Not used	Used	←
SIDE SHIELD CASE(DIGITAL SIGNAL PWB)	Not used	Not used	Used	←
DIGITAL SIGNAL P.W.B	SFL0D301A-H2	SFL0D303A-H2	SFL0D302A-H2	←

2.3 TECHNICAL INFORMATION

2.3.1 LCD PANEL

This unit uses the flat type panel LCD (Liquid Crystal Display) panel that occupies as little space as possible, instead of the conventional CRT (Cathode Ray Tube), as a display unit.
Since the unit has the two polarizing filter that are at right angles to each other, the unit adopts "normally black" mode, where light does not pass through the polarizing filter and the screen is black when no voltage is applied to the liquid crystals.

2.3.1.1 SPECIFICATIONS

The following table shows the specifications of this unit.

Item	Specifications	Remarks
Maximum dimensions (W × H × D)	627mm × 374mm × 52mm	
Weight	4.5kg	
Effective screen size	Diagonal: 660.4mm (H:575.7mm × V : 323.7mm)	26V type
Aspect ratio	16 : 9	
Drive device / system	a-Si-TFT, active matrix system	
Resolution	Horizontally 1366 × Vertically 768 × RGB <W-XGA>	3147264 dots in total
Pixel pitch (pixel size)	Horizontally:0.4215mm, Vertically:0.4215mm	
Displayed colour	16777216 colours	256 colours for R, G, and B
Brightness	500cd/m^2	
Contrast ratio	800: 1	
Response time	8ms	
View angle	Horizontally: 170°, Vertically: 170°	
Surface polarizer	Anti-Glare type, Low reflective coat	
Colour filter	Vertical stripe	
Backlight	U-type Cold cathode fluorescent lamp × 8	
Power supply voltage in LCD	6.5V	
Power supply voltage in inverter	18V	
Panel interface system	LVDS (Low Voltage Differential Signaling)	

2.3.1.2 PIXEL FAULT

There are three pixel faults - bright fault , dark fault and flicker fault - that are respectively defined as follows.

■ **BRIGHT FAULT**

In this pixel fault, a cell that should not light originally is lighting on and off.
For checking this pixel fault, input ALL BLACK SCREEN and find out the cell that is lighting on and off.

■ **DARK FAULT**

In this pixel fault, a cell that should light originally is not lighting or lighting with the brightness twice as brighter as originally lighting.
For checking this pixel fault, input 100% of each R/G/B colour and find out the cell that is not lighting.

■ **FLICKER FAULT**

In the pixel fault, a cell that should light originally or not light originally is flashing on and off.
For checking this pixel fault, input ALL BLACK SCREEN signal or 100% of each RGB colour and find out the cell that is flashing on and off.

2.3.2 MAIN CPU PIN FUNCTION [IC7501 : DIGITAL SIGNAL PWB ASS'Y]

Pin	Pin name	I/O	Function	Pin	Pin name	I/O	Function
1	TCK	I	Test purpose	65	D2	I/O	Program ROM data for main CPU
2	TMS	I	Test purpose	66	D12	I/O	Program ROM data for main CPU
3	TDI	I	Test purpose	67	D10	I/O	Program ROM data for main CPU
4	TDO	O	Test purpose	68	VSS33	-	GND
5	P2.8	O	Not used	69	VDD33	I	3.3V
6	P2.9	O	Blue for OSD	70	D4	I/O	Program ROM data for main CPU
7	P2.10	O	Blue for OSD	71	D3	I/O	Program ROM data for main CPU
8	P2.11	O	Blue for OSD	72	D11	I/O	Program ROM data for main CPU
9	P2.12	O	Blue for OSD	73	RSTIN	I	Reset
10	P2.13	O	Blue for OSD	74	POWER	O	Sleep state release for chassis CPU [Relese : L]
11	P2.14	I	Not used	75	P3.1	O	Not used
12	P2.15	O	Request for chassis CPU communication	76	REMOCON	I	Remote control
13	VSS33	-	GND	77	P3.3	I	Clock for OSD
14	VDD33	I	3.3V	78	P3.4	O	Red for OSD
15	P4.5	O	Not used	79	P3.5	O	Red for OSD
16	A20	O	Program ROM address for main CPU	80	P3.6	O	Red for OSD
17	A19	O	Program ROM address for main CPU	81	P3.7	O	Red for OSD
18	A18	O	Program ROM address for main CPU	82	MTST	O	Data transmission for chassis CPU communication
19	A17	O	Program ROM address for main CPU	83	MTSR	I	Data receive for chassis CPU communication
20	VSS25	-	GND	84	VSS33	-	GND
21	VDD25	I	2.5V	85	VDD33	I	3.3V
22	A16	O	Program ROM address for main CPU	86	VSS25	-	GND
23	A8	O	Program ROM address for main CPU	87	VDD25	I	2.5V
24	A7	O	Program ROM address for main CPU	88	TXD0	O	Communication for adjustment
25	A9	O	Program ROM address for main CPU	89	RXD0	O	Communication for adjustment
26	A6	O	Program ROM address for main CPU	90	P3.12	O	Red for OSD
27	A5	O	Program ROM address for main CPU	91	CLK	O	Clock for chassis CPU communication
28	A10	O	Program ROM address for main CPU	92	P3.15	O	Green for OSD
29	A11	O	Program ROM address for main CPU	93	P5.14	O	Green for OSD
30	A12	O	Program ROM address for main CPU	94	P5.15	O	Green for OSD
31	VSS33	-	GND	95	TRIG_IN	O	Green for OSD
32	VDD33	I	3.3V	96	TRIG_OUT	O	Green for OSD
33	A4	O	Program ROM address for main CPU	97	P6.2	O	Green for OSD
34	A3	O	Program ROM address for main CPU	98	P6.3	O	I^2C bus clock (for main memory)
35	A2	O	Program ROM address for main CPU	99	P6.4	I/O	I^2C bus Data (for main memory)
36	A1	O	Program ROM address for main CPU	100	P6.5	O	Teletext signal select [Analog RGB : H / Digital RGB : L]
37	A0	O	Program ROM address for main CPU	101	IRQ	O	Not used
38	A13	O	Program ROM address for main CPU	102	VSYNC	I	Vertical sync
39	ARAS/A14	O	Program ROM address for main CPU	103	HSYNC	I	Horizontal sync
40	CAS/A15	O	Program ROM address for main CPU	104	COR/RSTOUT	O	Not used
41	VSS33	-	GND	105	BLANK	O	Ys for OSD / Teletext
42	VDD33	I	3.3V	106	VDD33	I	3.3V
43	MEMCLK	O	Clock for memory	107	VSS33	-	GND
44	CSSDRAM	O	Chip select for memory	108	XTAL1	I	6MHz for system clock
45	CLKEN	O	Clock enable for memory	109	XTAL2	O	6MHz for system clock
46	CSROM	O	Chip select for memory	110	VSSA	-	GND
47	RD	O	Read for memory	111	VDDA	I	2.5V
48	UDQM	O	Control buffer of memory	112	R	O	R for OSD / Teletext
49	LDQM	O	Control buffer of memory	113	G	O	G for OSD / Teletext
50	WR	O	Write for memory	114	B	O	B for OSD / Teletext
51	D15	I/O	Program ROM data for main CPU	115	VSSA	-	GND
52	VSS33	-	GND	116	VDDA	I	2.5V
53	VDD33	I	3.3V	117	CVBS2	I	Video for Teletext
54	D7	I/O	Program ROM data for main CPU	118	VSSA	-	GND
55	D0	I/O	Program ROM data for main CPU	119	VDDA	I	2.5V
56	D14	I/O	Program ROM data for main CPU	120	CVBS1B	I	Video for Teletext
57	D8	I/O	Program ROM data for main CPU	121	CVBS1A	I	Video for Teletext
58	D6	I/O	Program ROM data for main CPU	122	VSSA	-	GND
59	D1	I/O	Program ROM data for main CPU	123	VDDA	I	2.5V
60	VSS33	-	GND	124	KEY1	I	Key scan data 1 [ON : H]
61	VDD33	I	3.3V	125	KEY2	I	Key scan data 2 [ON : H]
62	D13	I/O	Program ROM data for main CPU	126	MECA_SW	I	Main power ON / OFF control [ON : L]
63	D9	I/O	Program ROM data for main CPU	127	P5.3	I	Not used
64	D5	I/O	Program ROM data for main CPU	128	TMODE	I	Test purpose

2.3.3 SUB (CHASSIS) CPU PIN FUNCTION [IC7001 : DIGITAL SIGNAL PWB ASS'Y]

Pin	Pin name	I/O	Function	Pin	Pin name	I/O	Function
1	LB_PRO	O	Not used	51	BS_TXD	O	Not used : Data transmission for digital tuner communication
2	P_MU	O	Picture muting [Muting = H]	52	BS_RXD	I	Not used : Data receive for digital tuner communication
3	JP_CSB	O	Not used (NC)	53	NC	O	Not used (NC)
4	A_MU	O	Audio muting [Muting = H]	54	VREF+	I	3.3V power supply
5	M_MU	O	Audio muting (for AUDIO OUT) [Muting = H]	55	PDP_TX	O	Data transmission for SUB (DRIVE) CPU communication
6	PC_SEL	O	RGB(PC) INPUT select	56	PDP_RX	I	Data receive for SUB (DRIVE) CPU communication
7	ON_TIMER	O	POWER INDICATOR (LED) brightness [LOW = L]	57	SDA0	I/O	Data for Inter IC (serial) bus : EEP-ROM (IC7002)
8	ILA0	O	Not used : LCD back light lighting	58	SCL0	O	Clock for Inter IC (serial) bus : EEP-ROM (IC7002)
9	ILA1	O	Not used : LCD panel overshoot refresh timing	59	SDA_DVI	I/O	Not used : Data for Inter IC (serial) bus for panel communication
10	ILA2	O	Not used	60	SCL_DVI	O	Not used : Clock for Inter IC (serial) bus for panel communication
11	POW_LED	O	POWER LED lighting [ON = H]	61	AVSS	-	GND
12	WORD	O	Not used	62	DIGII_PHOT	I	Not used: Photo sensor for DIGITAL-IN illegal copy protection
13	MI_CK	I	Clock for main CPU communication	63	AGC	I	Not used
14	MI_TX	I	Data receive for main CPU communication	64	EXT_YS1	I	Not used
15	MI_RX	O	Data transmission for MAIN CPU communication	65	EXT_YS2	I	Not used
16	MI_REQ	O	Data request for main CPU communication [Request = L]	66	VDD	I	3.3V power supply
17	VDD	I	3.3V power supply	67	DIGI_PRO	O	Not used : For DIGITAL-IN (HDMI)
18	FOSC	O	Not used (NC)	68	GCR_RST	O	Not used (NC)
19	VSS	-	GND	69	GR_ON	O	Not used (NC)
20	X1	I	Not used : Low speed oscillatior	70	SYNC_SEL	O	Not used : Sync select for digital tuner
21	X0	O	Not used : Low speed oscillatior	71	NC	O	Not used (NC)
22	VDD	I	3.3V power supply	72	NC	O	Not used (NC)
23	OSC1	I	System clock osillation (crystal) : 16MHz	73	SBD5	I/O	Not used : Data for writing on board (connect CN01P : for Frash ROM type)
24	OSC0	O	System clock osillation (crystal) : 16MHz	74	SBT5	I	Not used : Clock for writing on board (connect CN01P : for Frash ROM type)
25	MODE	I	Single chip mode	75	NMI	I	3.3V power supply
26	BS1.5CTL	O	Not used : Digital tuner power / reset control	76	COMP	I	Not used : AV COMPULINK III control
27	A92RES	O	Reset for IC1001(3D YC SEP / COLOUR DEMODULAT) [Reset = H]	77	REMO	I	Remote control
28	BS_RST	O	Not used: Reset for Digital tuner power / reset control	78	VSYNC	I	V. sync pulse
29	LIP_RST	O	Not used: Reset for Sound delay (Lip sync)	79	WAKE	I	Reset for sub(chassis) CPU
30	SOFT_OFF	O	Not used	80	POWERGOOD	I	Power error detection [NG = H]
31	VMUTE	I	Not used: Picture muting request from digital tuner	81	NC	O	Not used (NC)
32	VOUTENB	O	Not used: Video cutoff for digital tuner	82	RST	I	Reset for MAIN CPU [Reset = L]
33	MDR_CON	I	Not used: System cable connection monitor for PDP	83	VDD	I	3.3V power supply
34	AVDD	I	3.3V power supply	84	SCL3A	O	Clock for Inter IC (serial) bus control
35	BS_POW	O	Not used : Digital tuner power control	85	SDA3A	I/O	Data for Inter IC (serial) bus control
36	DsyncSW2	O	Sync select for DIGITAL-IN [Cotrolled with 99-pin]	86	SCL3B	O	Clock for Inter IC (serial) bus control
37	LB_POW	O	Not used : Power control for low bias line	87	SDA3B	I/O	Data for Inter IC (serial) bus control
38	NC	O	Not used (NC)	88	DIGI_SYNCSEL	O	Not used
39	HOTPLUG	I	Not used : Video communiation monitor for receiver unit (PDP)	89	DIGI_LRSW	O	Not used : For DIGITAL-IN (HDMI)
40	MECA_SW	I	Mechanical monitor for POWER switch [Push = L]	90	DIGI_INT	I	Not used : Reset for HDMI process [Reset = L]
41	MAIN_POW	O	Main power control [ON = L]	91	DVI_RST	O	Not used : Reset for DVI format conversion
42	MSP_RST	O	AUDIO OUT output mode select [VARIABLE = L]	92	VSS	-	GND
43	VREF-	I	Not used	93	SCL5055	O	Clock for Inter IC (serial) bus : JCC5055 (DIST process)
44	AFT2	I	Not used : AFT voltage for sub tuner	94	VFORMATSEL	O	Not used : Digital tuner clock control
45	AFT1	I	AFT voltage for VHF/UHF tuner	95	SDA5055	I/O	Data for Inter IC (serial) bus : JCC5055 (DIST process)
46	KEY2	I	Key scan data for front switch (MENU/CH+/CH-)	96	OSD_MODE_SEL	O	Not used : OSD mode select
47	KEY1	I	Key scan data for front switch (VOL+/VOL-)	97	NC	O	Not used (NC)
48	NC	O	Not used (NC)	98	15K/OTH	O	Main video select [Fixed = H]
49	NC	O	Not used (NC)	99	DsyncSW1	O	Not used : Sync select for DIGITAL-IN [Cotrolled with 36-pin]
50	AC_IN	I	AC power pulse for timer clock	100	57 BUSY	I	Busy monitor for JCC5057 (New DIST process)

SECTION 3
DISASSEMBLY

3.1 DISASSEMBLY PROCEDURE

NOTE:

- Make sure that the power cord is disconnected from the outlet.
- Pay special attention not to break or damage the parts.
- When removing each board, remove the connectors as required. Taking notes of the connecting points (connector numbers) makes service procedure manageable.
- Make sure that there is no bent or stain on the connectors before inserting, and firmly insert the connectors.

3.1.1 REMOVING THE STAND (Fig.1)

(1) Remove the 2 screws **[A]**, then remove the STAND COVER.
(2) Remove the 4 screws **[B]**, then remove the STAND.

3.1.2 REMOVING THE REAR COVER (Fig.1)

- Remove the STAND.
  (1) Remove the JACK COVER (L/R).
  (2) Remove the 7 screws **[C]**, the 4 screws **[D]**, and the 1 screws **[E]** .
  (3) Remove the REAR COVER.

3.1.3 REMOVING THE POWER PWB / REGULATOR PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
  (1) Remove the 5 screws **[F]**, then remove the FAN BRACKET.
  (2) Remove the 1 screw **[G]**, then remove the POWER CORD HOLDER.
  (3) Remove the POWER CORD from the POWER PWB.
  (4) Remove the REGULATOR PWB.
  (5) Remove the 5 screw **[H]**, then remove the POWER PWB.

3.1.4 REMOVING THE ANALOG SYGNAL PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
- Remove the FAN BRACKET.
  (1) Remove the 6 screws **[J]** then remove the TERMINAL BASE.
  (2) Remove the 6 screws **[K]** and the 2 hex screws **[W]** then remove the ANALOG SYGNAL PWB.

3.1.5 REMOVING THE FRONT CONTROL PWB CONTROL / FRONT SENSOR PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
  (1) Remove the 2 screws **[L]**, then remove the CONTROL KNOB ASSY.
  (2) Remove the 2 screws **[M]**, then remove the FRONT CONTROL PWB.
  (3) Remove the FRONT SENSOR PWB.

3.1.6 REMOVING THE RECEIVER PWB / CONNECTOR PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
  (1) Remove the 3 screws **[U]**, then remove the TUNER BASE and SIDE SHIELD CASE.
  (2) Remove the 4 screws **[O]** then remove the RECEIVER PWB.
  (3) Remove the 4 screws **[P]** then remove the RECEIVER PWB BRACKET.
  (4) Remove the 2 screws **[Q]** then remove the CONNECTOR PWB.

3.1.7 REMOVING THE DIGITAL SIGNAL PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
- Remove the TUNER BASE.
  (1) Remove the 9 screws **[S]** and the 3screws **[T]**, then remove the SHIELD COVER.
  (2) Remove the 5 screws **[V]**, then remove the DIGITAL SIGNAL PWB.

3.1.8 REMOVING THE SPEAKER (Fig.2)

- Remove the STAND.
- Remove the REAR COVER.
  (1) Remove the 5 screws **[a]**, then remove the SPEAKER BOX.
  (2) Remove the 4 screws **[b]**, then remove the SPEAKER (L /R).
  (3) Remove the 4 screws **[c]**, then remove the DUCT(L/R).

NOTE:

Since the speaker is attached in a certain direction, attach the speaker in the same correct direction as it has been attached.

3.1.9 REMOVING THE LCD PANEL UNIT (Fig.2)

- Remove the STAND.
- Remove the REAR COVER.
  (1) Remove the 6 screws **[d]** and the 4 screws **[e]**.
  (2) Remove the LCD PANEL UNIT.
  (3) Remove the 7 screws **[f]**. then remove the MAIN BASE.
  (4) Remove the 2 screws **[g]**. then remove the TOP FRAME.
  (5) Remove the 2 screws **[h]**. then remove the BOTTOM FRAME.

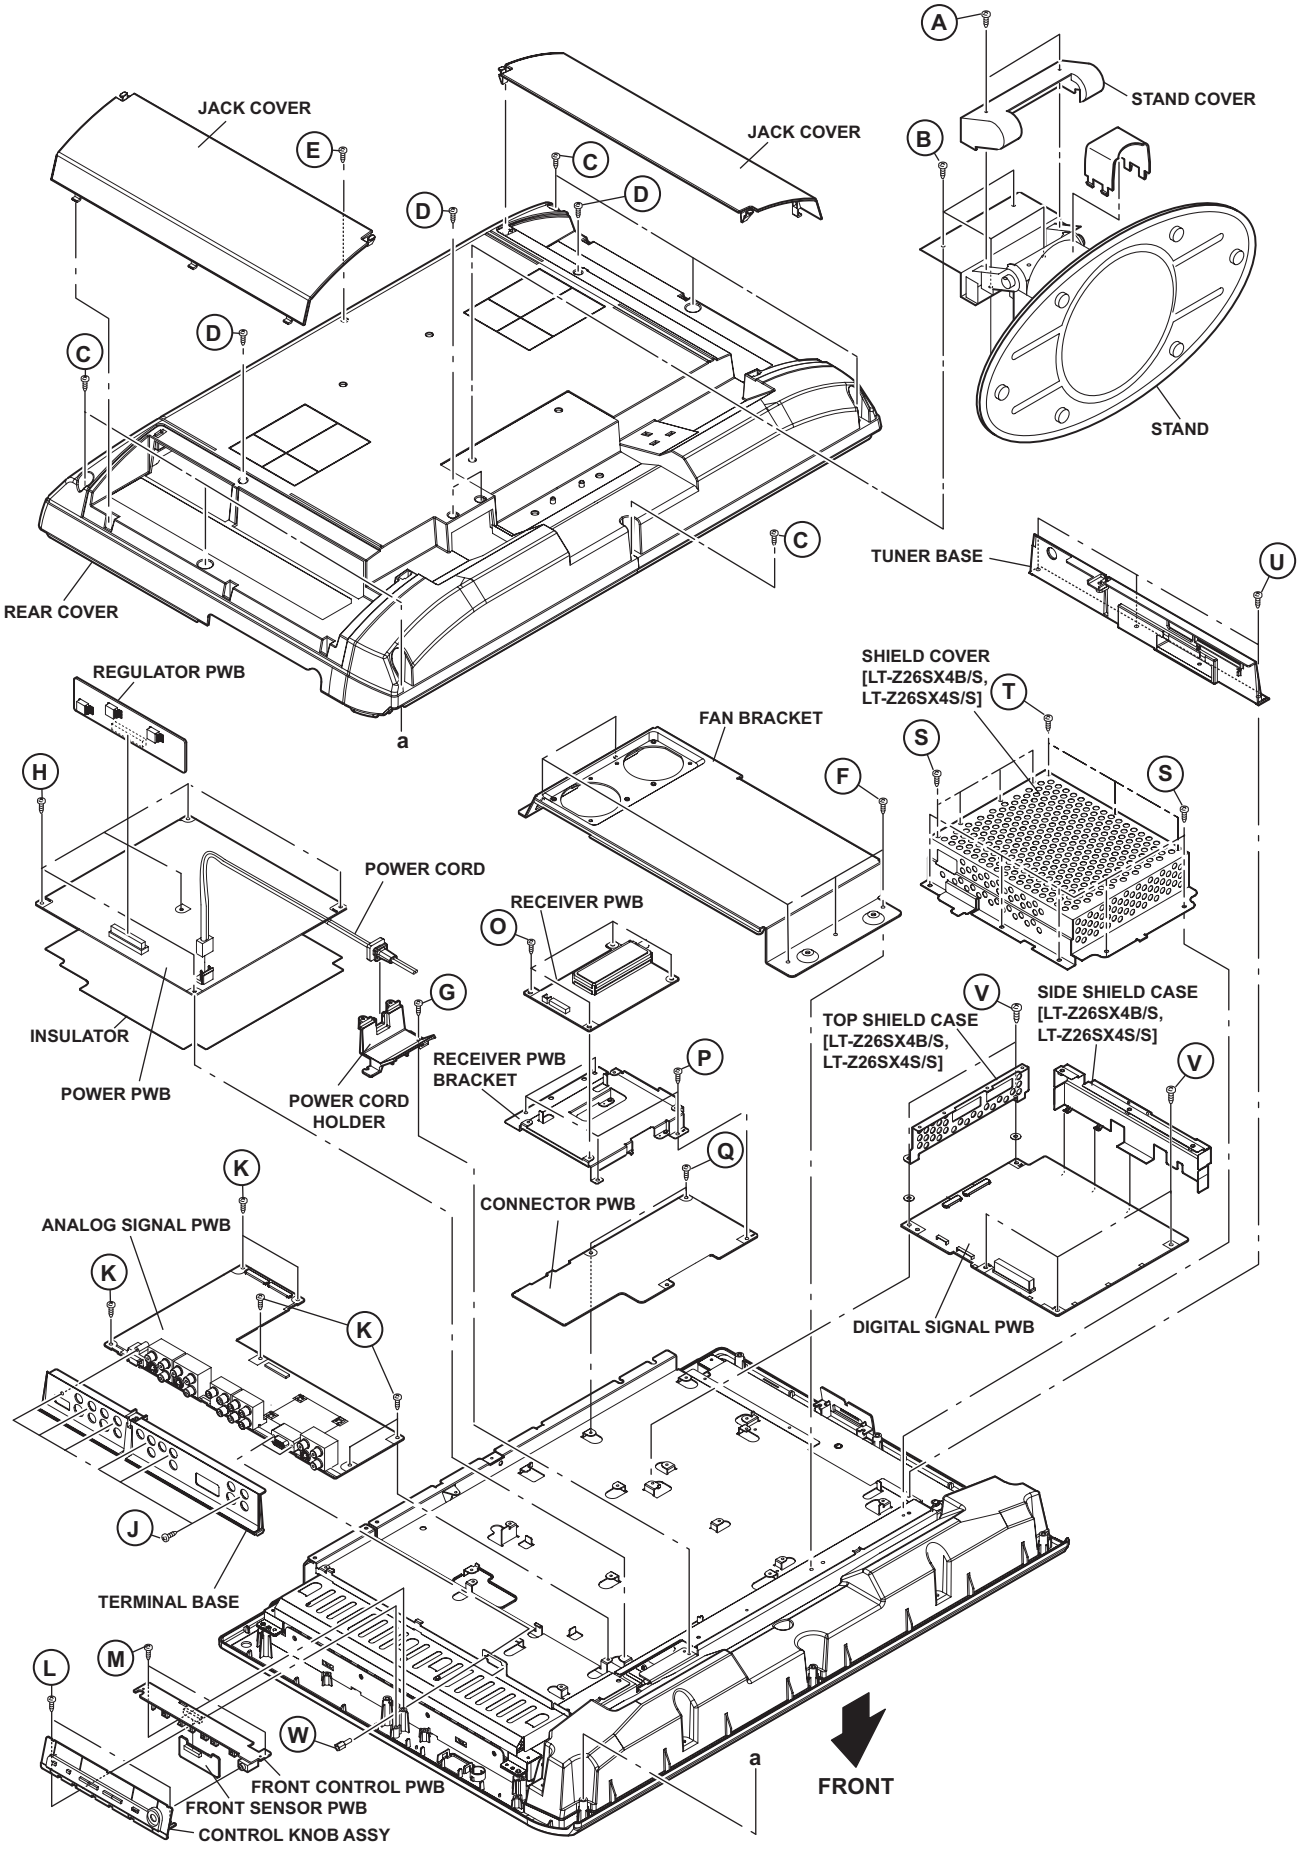

A
STAND COVER
B
STAND
JACK COVER
E
JACK COVER
C
D
D
D
C
C
REAR COVER
a
TUNER BASE
U
REGULATOR PWB
SHIELD COVER
[LT-Z26SX4B/S,
LT-Z26SX4S/S]
T
FAN BRACKET
F
S
S
H
POWER CORD
RECEIVER PWB
O
G
INSULATOR
POWER PWB
POWER CORD
HOLDER
RECEIVER PWB
BRACKET
P
V
TOP SHIELD CASE
[LT-Z26SX4B/S,
LT-Z26SX4S/S]
SIDE SHIELD CASE
[LT-Z26SX4B/S,
LT-Z26SX4S/S]
V
Q
CONNECTOR PWB
K
ANALOG SIGNAL PWB
K
K
DIGITAL SIGNAL PWB
J
TERMINAL BASE
L
M
W
a
FRONT
FRONT CONTROL PWB
FRONT SENSOR PWB
CONTROL KNOB ASSY

Fig.1

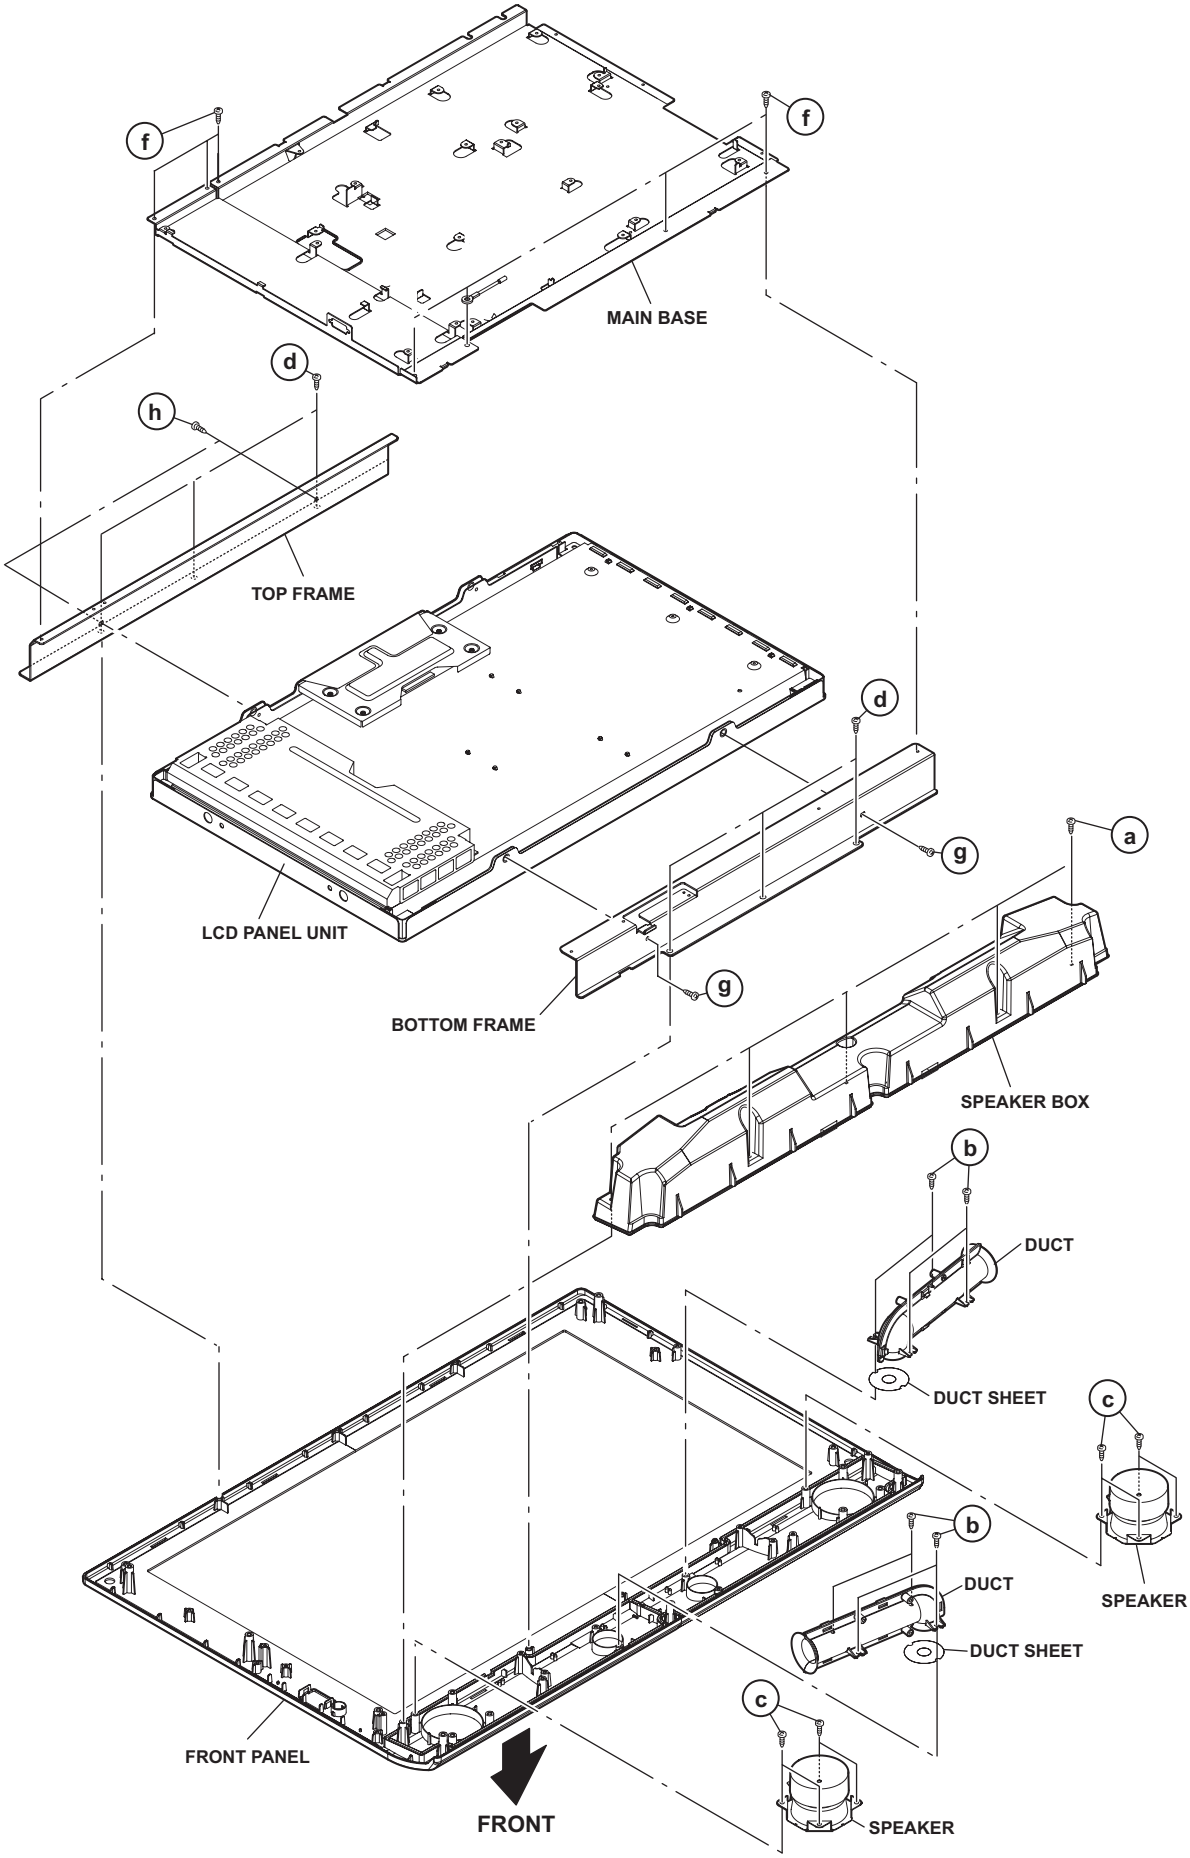

f
f
MAIN BASE
d
h
TOP FRAME
d
LCD PANEL UNIT
g
a
g
BOTTOM FRAME
SPEAKER BOX
b
DUCT
DUCT SHEET
c
b
DUCT
SPEAKER
DUCT SHEET
c
FRONT PANEL
FRONT
SPEAKER

Fig.2

3.2 MEMORY IC REPLACEMENT

- This model uses the memory IC.
- This memory IC stores data for proper operation of the video and drive circuits.
- When replacing, be sure to use an IC containing this (initial value) data.

3.2.1 MEMORY IC REPLACEMENT PROCEDURE

1. Power off
Switch off the power and disconnect the power plug from the AC outlet.

2. Replace the memory IC
Be sure to use the memory IC written with the initial setting values.

3. Power on
Connect the power plug to the AC outlet and switch on the power.

4. Receiving channel setting
Refer to the OPERATING INSTRUCTIONS and set the receive channels (Channels Preset) as described.

5. User setting
Check the user setting items according to the given in page later. Where these do not agree, refer to the OPERATING INSTRUCTIONS and set the items as described.

6. SERVICE MODE setting
Verify what to set in the SERVICE MODE, and set whatever is necessary (Fig.1). Refer to the SERVICE ADJUSTMENT for setting.

3.2.2 SERVICE MODE SETTING

■SERVICE MODE SCREEN

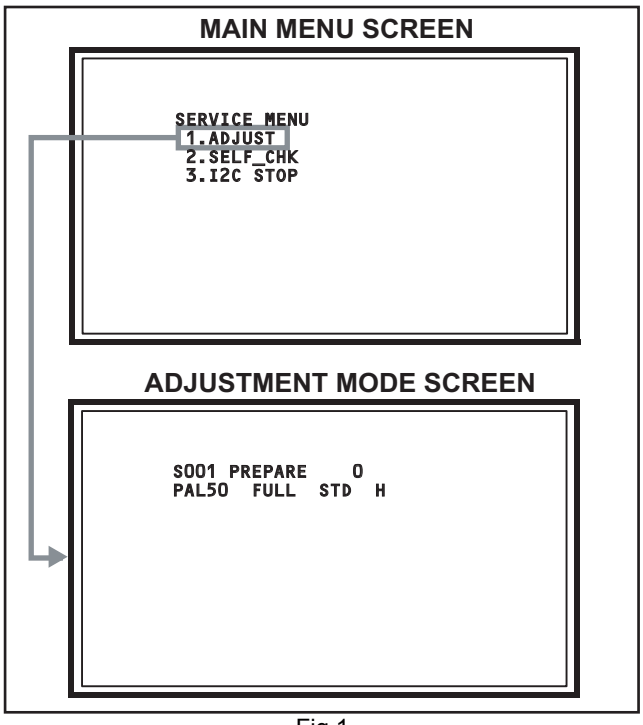


Fig.1

■SETTING ITEM

Setting items	Settings	Item No.
Video system setting	Adjust	S001 - S039
Audio system setting	Fixed	T001 - T010
Panel control system setting	Fixed	P001 - P010
Drive system setting	Fixed	D001 - D187
Main CPU system setting	Fixed	Z001 - Z010

3.2.3 SETTINGS OF FACTORY SHIPMENT

3.2.3.1 BUTTON OPERATION

Setting item	Setting position
POWER	Off
CHANNEL	PR1
VOLUME	10
TV/VIDEO	TV
STANDBY MODE	OFF

3.2.3.2 REMOTE CONTROL DIRECT OPERATION

Setting item	Setting position
CHANNEL	PR1
VOLUME	10
ZOOM	PANORAMIC
CINEMA	OFF
SUB PICTURE	VIDEO-1

3.2.3.3 REMOTE CONTROL MENU OPERATION

(1) PICTURE

Setting item		Setting position
PICTURE MODE		BRIGHT
WHITE BALANCE		COOL
FEATURES		
DIGITAL VNR		AUTO (LOW)
Super DigiPure		AUTO
PULL DOWN		AUTO
COLOUR MANAGEMENT		ON
PICTURE MANAGEMENT		ON
COLOUR SYSTEM	MAIN	Depends on PR/CH
	SUB	AUTO
4:3 AUTO ASPECT		PANORAMIC

(2) SOUND

Setting item	Setting position
STEREO / I•II	Stereo sound
BASS	Centre
TREBLE	Centre
BALANCE	Centre
CINEMA SURROUND	OFF
A.H.B.	ON
BBE	ON

(4) FEATURES

Setting item	Setting position
SLEEP TIMER	OFF
APPEARANCE	TYPE D
CHILD LOCK	ID NO.0000, All CH off
BLUE BACK	ON
AUTO SHUTOFF	OFF
FAVORITE SETTING	RESET

(5) SET UP

Setting item	Setting position
AUTO PROGRAM	TV channel automatically set
EDIT/MANUAL	PRESET CH only
LANGUAGE	ENGLISH
VIDEO-1 SETTING	COMPONENT
VIDEO-3 SETTING	COMPONENT
AI VOLUME	ON
TELETEXT LANGUAGE	GROUP-1

3.3 REPLACEMENT OF CHIP COMPONENT

3.3.1 CAUTIONS

(1) Avoid heating for more than 3 seconds.
(2) Do not rub the electrodes and the resist parts of the pattern.
(3) When removing a chip part, melt the solder adequately.
(4) Do not reuse a chip part after removing it.

3.3.2 SOLDERING IRON


(1) Use a high insulation soldering iron with a thin pointed end of it.
(2) A 30w soldering iron is recommended for easily removing parts.

3.3.3 REPLACEMENT STEPS


1. How to remove Chip parts

[Resistors, capacitors, etc.]

(1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

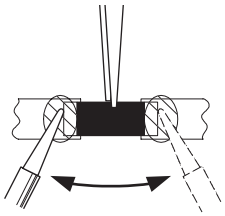

(2) Shift with the tweezers and remove the chip part.

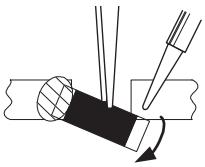


[Transistors, diodes, variable resistors, etc.]

(1) Apply extra solder to each lead.



(2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

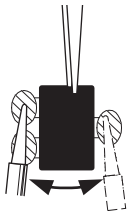


NOTE :
After removing the part, remove remaining solder from the pattern.


2. How to install Chip parts

[Resistors, capacitors, etc.]

(1) Apply solder to the pattern as indicated in the figure.

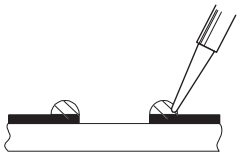


(2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

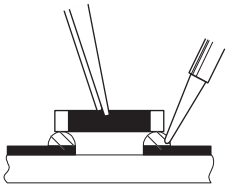


[Transistors, diodes, variable resistors, etc.]

(1) Apply solder to the pattern as indicated in the figure.
(2) Grasp the chip part with tweezers and place it on the solder.
(3) First solder lead **A** as indicated in the figure.

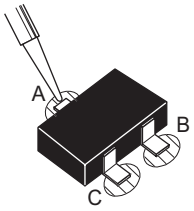

(4) Then solder leads **B** and **C**.

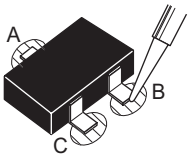

SECTION 4
ADJUSTMENT

4.1 ADJUSTMENT PREPARATION

(1) **There are 2 ways of adjusting this TV : One is with the REMOTE CONTROL UNIT and the other is the conventional method using adjustment parts and components.**
(2) **The adjustment using the REMOTE CONTROL UNIT is made on the basis of the initial setting values. The setting values which adjust the screen to the optimum condition can be different from the initial setting values.**
(3) Make sure that connection is correctly made AC to AC power source.
(4) Turn on the power of the TV and measuring instruments for warning up for at least 30 minutes before starting adjustments.
(5) If the receive or input signal is not specified, use the most appropriate signal for adjustment.
(6) Never touch the parts (such as variable resistors, transformers and condensers) not shown in the adjustment items of this service adjustment.

4.2 PRESET SETTING BEFORE ADJUSTMENTS

Unless otherwise specified in the adjustment items, preset the following functions with the REMOTE CONTROL UNIT.

Setting item	Settings position
PICTURE MODE	STANDARD
PICTURE adjustments	Centre
WHITE BALANCE	MID
DIGITAL VNR	MIN
Super DigiPure	AUTO
PULL DOWN	AUTO
COLOUR MANAGEMENT	ON
PICTURE MANAGEMENT	ON
SOUND adjustments	Centre
BBE	OFF
CINEMA SORROUND	OFF
A.H.B	OFF
ZOOM	FULL

4.3 MEASURING INSTRUMENT AND FIXTURES

- Oscilloscope
- Signal generator (Pattern generator)
  [PAL / 625i / 625p / 1125i(50Hz)]
- Remote control unit

4.4 ADJUSTMENT ITEMS

■ **VIDEO CIRCUIT**

- 625i A-D OFFSET adjustment
- 1125i(50Hz) BRIGHTNESS adjustment
- 1125i(50Hz) A-D OFFSET adjustment
- SUB SCREEN A-D OFFSET adjustment
- WHITE BALANCE (HIGH LIGHT) adjustment


4.5 BASIC OPERATION OF SERVICE MODE

4.5.1 HOW TO ENTER THE SERVICE MODE

(1) Press [DISPLAY] key and [MUTING] key on the remote control unit simultaneously to enter the SERVICE MODE SCREEN.
(2) In the SERVICE MENU, press the [1] key to display ADJUSTMENT MODE SCREEN.

NOTE:


- Before entering the SERVICE MODE, confirm that the setting of PIP/TV/DVD switch is at the "TV" side. If the switches have not been properly set, you cannot enter the SERVICE MODE.
- When a number key other than the [1] to [3] key is pressed in the SERVICE MODE SCREEN, the other relevant screen may be displayed.
  This is not used in the adjustment procedure. Press the [MENU] key to return to the SERVICE MODE SCREEN.

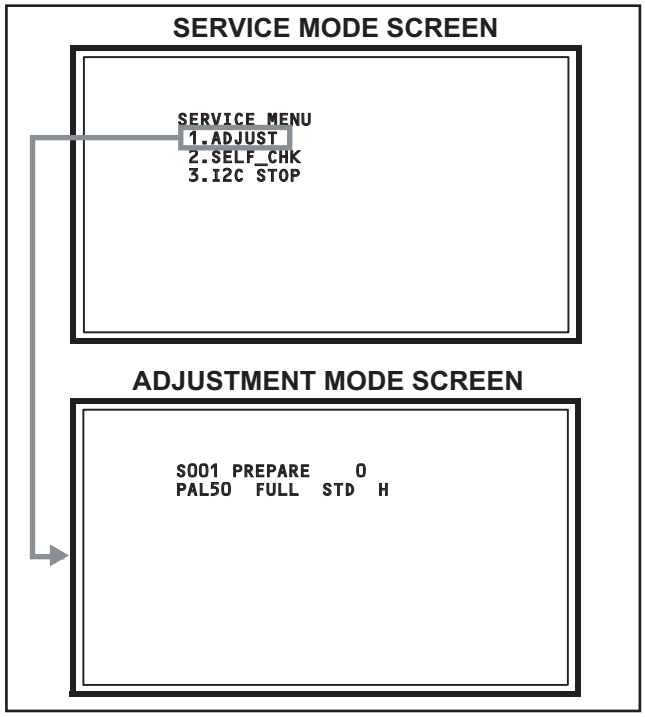

4.5.2 HOW TO EXIT THE SERVICE MODE

Press the [MENU] key to exit the Service mode.

4.5.3 DESCRIPTION OF STATUS DISPLAY

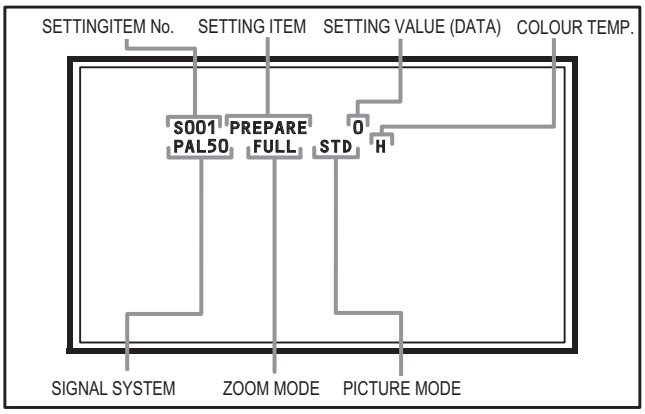

(1) SIGNAL SYSTEM

The signal displayed on the screen is displayed.

PAL50 : PAL50Hz (Composite / S-video)
PAL60 : PAL60Hz (Composite / S-video)
SECAM : SECAM
NTSC3 : NTSC3.58
NTSC4 : NTSC4.43
525I : 525i (Component)
525P : 525p
625I : 625i (Component)
625P : 625p
1125I5 : 1125i 50Hz
1125I6 : 1125i 60Hz
PCVGA : PC (VGA)
PCXGA : PC (XGA)

(2) ZOOM MODE

State of the SCREEN SIZE or MULTI PICTURE is displayed.

SINGLE SCREEN

FULL : FULL
PANO : PANORAMIC
1609 : 16:9 ZOOM
1609S : 16:9 ZOOM SUBTITLE
1409 : 14:9 ZOOM
REGU : REGULAR

MULTI SCREEN

M2 : 2-pictures multi
M12 : 12-pictures multi

(3) PICTURE MODE

STD : STANDARD
BRI : BRIGHT
SOFT : SOFT

(4) WHITE BALANCE

L : WARM
H : MID, COOL

(5) SETTING ITEM NAME

Setting item name are displayed. The setting item numbers to be displayed are listed below.

Item No.	Setting item
S001 - S039	Video system setting
T001 - T010	Audio system setting
P001 - P010	Panel control system setting
D001 - D187	Drive system setting
Z001 - Z010	Main CPU system setting

(6) SETTING ITEM NO.

Setting item numbers are displayed. For the setting item names to be displayed, refer to "INITIAL SETTING VALUES IN THE SERVICE MODE".

(7) SETTING VALUE (DATA)

The SETTING VALUE is displayed.

4.5.4 CHANGE AND MEMORY OF SETTING VALUE

SELECTION OF SETTING ITEM

- [FUNCTION ▲/▼] key.
  For scrolling up / down the setting items.

S001... ↔ T001... ↔ P001... ↔ D001... ↔ Z001...


CHANGE OF SETTING VALUE (DATA)

- [FUNCTION ◀ / ▶] key.
  For scrolling up / down the setting values.

MEMORY OF SETTING VALUE (DATA)

Changed setting value is memorized by pressing [MUTING] key.

4.5.5 SERVICE MODE SELECT KEY LOCATION

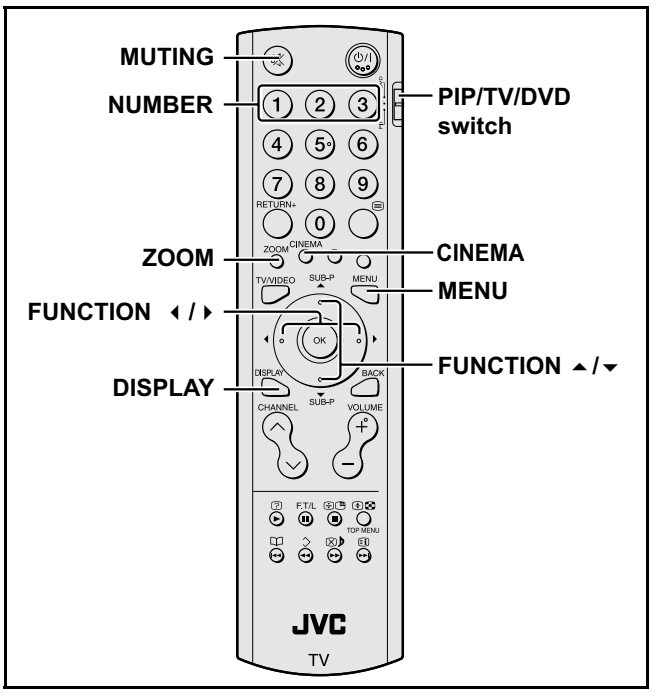

4.6 INITIAL SETTING VALUES IN THE SERVICE MODE

- Perform fine-tuning based on the "initial values" using the remote control when in the Service mode.
- The "initial values" serve only as an indication rough standard and therefore the values with which optimal display can be achieved may be different from the default values. But, don't change the values that are not written in "ADJUSTMENT PROCEDURE". They are fixed values.

4.6.1 VIDEO SYSTEM SETTING

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
S001	PREPARE	0 - 31	0	0	0
S002	NTSC BL	0 - 15	0	0	0
S003	NTSC CNT	0 - 255	36	36	36
S004	NT CR OF	0 - 15	6	6	6
S005	NT CB OF	0 - 15	6	6	6
S006	525i BL	0 - 15	0	0	0
S007	525i CNT	0 - 255	36	36	36
S008	5i CB OF	0 - 15	0	0	0
S009	5i CR OF	0 - 15	0	0	0
S010	5i CR GN	0 - 15	6	6	6
S011	5i CB GN	0 - 15	6	6	6
S012	HD BL	0 - 63	55	55	55
S013	HD CB OF	0 - 63	56	56	56
S014	HD CR OF	0 - 63	58	58	58
S015	RT CONT	0 - 15	7	7	7
S016	RT CB OF	0 - 15	5	5	5
S017	RT CR OF	0 - 15	6	6	6
S018	RT CL GA	0 - 15	12	12	12
S019	PC CL MB	0 - 7	0	0	0
S020	PC CL LB	0 - 31	0	0	0
S021	PC CL MR	0 - 71	0	0	0
S022	PC CL LR	0 - 31	0	0	0
S023	(Not display)	0 - 255	0	0	0
S024	(Not display)	0 - 255	0	0	0
S025	(Not display)	0 - 255	0	0	0
S026	(Not display)	0 - 255	0	0	0
S027	(Not display)	0 - 255	0	0	0
S028	(Not display)	0 - 255	0	0	0
S029	(Not display)	0 - 255	0	0	0
S030	R DRIVE	0 - 255	133	133	133
S031	G DRIVE	0 - 255	130	130	130
S032	B DRIVE	0 - 255	132	132	132
S033	(Not display)	0 - 255	0	0	0
S034	(Not display)	0 - 255	0	0	0
S035	(Not display)	0 - 255	0	0	0
S036	(Not display)	0 - 255	0	0	0
S037	(Not display)	0 - 255	0	0	0
S038	(Not display)	0 - 255	0	0	0
S039	ILA COM	0 - 1	0	0	0

4.6.2 AUDIO SYSTEM SETTING (*Fixed values)

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
T001	IN LEVEL	0 - 255	0	0	0
T002	LOW SEP	0 - 255	0	0	0
T003	HIGH SEP	0 - 255	0	0	0
T004	AFC	0 - 255	4	4	4
T005	(Not display)	0 - 255	0	0	0
T006	ATT V ON	0 - 1	0	0	0
T007	ATT U ON	0 - 1	0	0	0
T008	ATT C ON	0 - 1	0	0	0
T009	(Not display)	0 - 255	0	0	0
T010	(Not display)	0 - 255	0	0	0

4.6.3 PANEL CONTOROL SYSTEM SETTING (*Fixed values)

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
P001	TM HOR H	00 - FF	00	00	00
P002	TM HOR L	00 - FF	00	00	00
P003	TM MIN	00 - FF	00	00	00
P004	TEMP0	0 - 255	0	0	0
P005	(Not display)	0 - 255	0	0	0
P006	(Not display)	0 - 255	0	0	0
P007	(Not display)	0 - 255	0	0	0
P008	(Not display)	0 - 255	0	0	0
P009	(Not display)	0 - 255	0	0	0
P010	(Not display)	0 - 255	0	0	0

4.6.4 DRIVE SYSTEM SETTING (*Fixed values)

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
D001	SLV GN	00 - 3F	15	15	15
D002	SLVH GN	00 - 3F	13	13	13
D003	SLH GN	00 - 3F	15	15	15
D004	SLV Pf	00 - 03	01	01	01
D005	SLH Pf H	00 - 01	01	01	01
D006	SLH Pf L	00 - 03	01	01	01
D007	SL EGCON	00 - 3F	08	08	08
D008	SL EGONF	00 - 01	01	01	01
D009	SL CRGON	00 - 3F	06	06	06
D010	SL CRGON	00 - 01	01	01	01
D011	SL ON OF	00 - 01	01	01	01
D012	SV GN	00 - 3F	1A	1A	1A
D013	SVH GN	00 - 3F	1B	1B	1B
D014	SH GN	00 - 3F	2E	2E	2E
D015	SV Pf	00 - 03	00	00	00
D016	SV PfH	00 - 01	01	01	01

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
D017	SV PfL	00 - 03	00	00	00
D018	SYL CON	00 - 3F	30	30	30
D019	SYL CONF	00 - 01	01	01	01
D020	SYH CON	00 - 3F	00	00	00
D021	SYH CONF	00 - 01	01	01	01
D022	SC CON	00 - 3F	1A	1A	1A
D023	SC CNONF	00 - 01	01	01	01
D024	SPM BLC	00 - 3F	0B	0B	0B
D025	SPM BLCO	00 - 01	01	01	01
D026	SLIM	00 - 3F	20	20	20
D027	SLIMONF	00 - 01	01	01	01
D028	SCRG	00 - 3F	10	10	10
D029	SRGONF	00 - 01	01	01	01
D030	S ONF	00 - 01	01	01	01
D031	pb GN	00 - 3F	15	15	15
D032	pb PfH	00 - 01	01	01	01
D033	pb PfL	00 - 03	00	00	00
D034	pb CRG	00 - 3F	04	04	04
D035	pb CRGON	00 - 01	01	01	01
D036	pb ONF	00 - 01	01	01	01
D037	pr GN	00 - 3F	15	15	15
D038	pr PfH	00 - 01	01	01	01
D039	pr PfL	00 - 03	00	00	00
D040	pr CRG	00 - 3F	05	05	05
D041	pr CRGON	00 - 01	01	01	01
D042	pr ONF	00 - 01	01	01	01
D043	ENH ONF	00 - 01	01	01	01
D044	(Not display)	00 - FF	00	00	00
D045	(Not display)	00 - FF	00	00	00
D046	(Not display)	00 - FF	00	00	00
D047	(Not display)	00 - FF	00	00	00
D048	(Not display)	00 - FF	00	00	00
D049	(Not display)	00 - FF	00	00	00
D050	(Not display)	00 - FF	00	00	00
D051	(Not display)	00 - FF	00	00	00
D052	(Not display)	00 - FF	00	00	00
D053	(Not display)	00 - FF	00	00	00
D054	(Not display)	00 - FF	00	00	00
D055	(Not display)	00 - FF	00	00	00
D056	(Not display)	00 - FF	00	00	00
D057	(Not display)	00 - FF	00	00	00
D058	(Not display)	00 - FF	00	00	00
D059	(Not display)	00 - FF	00	00	00
D060	(Not display)	00 - FF	00	00	00
D061	(Not display)	00 - FF	00	00	00
D062	(Not display)	00 - FF	00	00	00
D063	(Not display)	00 - FF	00	00	00
D064	(Not display)	00 - FF	00	00	00
D065	(Not display)	00 - FF	00	00	00

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
D066	(Not display)	00 - FF	00	00	00
D067	(Not display)	00 - FF	00	00	00
D068	(Not display)	00 - FF	00	00	00
D069	(Not display)	00 - FF	00	00	00
D070	(Not display)	00 - FF	00	00	00
D071	(Not display)	00 - FF	00	00	00
D072	(Not display)	00 - FF	00	00	00
D073	(Not display)	00 - FF	00	00	00
D074	(Not display)	00 - FF	00	00	00
D075	(Not display)	00 - FF	00	00	00
D076	(Not display)	00 - FF	00	00	00
D077	(Not display)	00 - FF	00	00	00
D078	(Not display)	00 - FF	00	00	00
D079	(Not display)	00 - FF	00	00	00
D080	(Not display)	00 - FF	00	00	00
D081	(Not display)	00 - FF	00	00	00
D082	(Not display)	00 - FF	00	00	00
D083	(Not display)	00 - FF	00	00	00
D084	(Not display)	00 - FF	00	00	00
D085	(Not display)	00 - FF	00	00	00
D086	(Not display)	00 - FF	00	00	00
D087	(Not display)	00 - FF	00	00	00
D088	(Not display)	00 - FF	00	00	00
D089	(Not display)	00 - FF	00	00	00
D090	(Not display)	00 - FF	00	00	00
D091	(Not display)	00 - FF	00	00	00
D092	(Not display)	00 - FF	00	00	00
D093	(Not display)	00 - FF	00	00	00
D094	(Not display)	00 - FF	00	00	00
D095	(Not display)	00 - FF	00	00	00
D096	(Not display)	00 - FF	00	00	00
D097	(Not display)	00 - FF	00	00	00
D098	(Not display)	00 - FF	00	00	00
D099	(Not display)	00 - FF	00	00	00
D100	(Not display)	00 - FF	00	00	00
D101	(Not display)	00 - FF	00	00	00
D102	(Not display)	00 - FF	00	00	00
D103	(Not display)	00 - FF	00	00	00
D104	(Not display)	00 - FF	00	00	00
D105	(Not display)	00 - FF	00	00	00
D106	(Not display)	00 - FF	00	00	00
D107	(Not display)	00 - FF	00	00	00
D108	(Not display)	00 - FF	00	00	00
D109	(Not display)	00 - FF	00	00	00
D110	(Not display)	00 - FF	00	00	00
D111	(Not display)	00 - FF	00	00	00
D112	(Not display)	00 - FF	00	00	00
D113	(Not display)	00 - FF	00	00	00
D114	(Not display)	00 - FF	00	00	00




Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
D115	(Not display)	00 - FF	00	00	00
D116	(Not display)	00 - FF	00	00	00
D117	(Not display)	00 - FF	00	00	00
D118	(Not display)	00 - FF	00	00	00
D119	(Not display)	00 - FF	00	00	00
D120	(Not display)	00 - FF	00	00	00
D121	(Not display)	00 - FF	00	00	00
D122	(Not display)	00 - FF	00	00	00
D123	(Not display)	00 - FF	00	00	00
D124	(Not display)	00 - FF	00	00	00
D125	(Not display)	00 - FF	00	00	00
D126	(Not display)	00 - FF	00	00	00
D127	(Not display)	00 - FF	00	00	00
D128	(Not display)	00 - FF	00	00	00
D129	(Not display)	00 - FF	00	00	00
D130	(Not display)	00 - FF	00	00	00
D131	(Not display)	00 - FF	00	00	00
D132	(Not display)	00 - FF	00	00	00
D133	(Not display)	00 - FF	00	00	00
D134	(Not display)	00 - FF	00	00	00
D135	(Not display)	00 - FF	00	00	00
D136	(Not display)	00 - FF	00	00	00
D137	(Not display)	00 - FF	00	00	00
D138	(Not display)	00 - FF	00	00	00
D139	(Not display)	00 - FF	00	00	00
D140	(Not display)	00 - FF	00	00	00
D141	(Not display)	00 - FF	00	00	00
D142	(Not display)	00 - FF	00	00	00
D143	(Not display)	00 - FF	00	00	00
D144	(Not display)	00 - FF	00	00	00
D145	(Not display)	00 - FF	00	00	00
D146	(Not display)	00 - FF	00	00	00
D147	(Not display)	00 - FF	00	00	00
D148	(Not display)	00 - FF	00	00	00
D149	(Not display)	00 - FF	00	00	00
D150	(Not display)	00 - FF	00	00	00
D151	(Not display)	00 - FF	00	00	00
D152	(Not display)	00 - FF	00	00	00
D153	(Not display)	00 - FF	00	00	00
D154	(Not display)	00 - FF	00	00	00
D155	(Not display)	00 - FF	00	00	00
D156	(Not display)	00 - FF	00	00	00
D157	(Not display)	00 - FF	00	00	00
D158	(Not display)	00 - FF	00	00	00
D159	(Not display)	00 - FF	00	00	00
D160	(Not display)	00 - FF	00	00	00
D161	(Not display)	00 - FF	00	00	00
D162	(Not display)	00 - FF	00	00	00
D163	(Not display)	00 - FF	00	00	00
D164	(Not display)	00 - FF	00	00	00
D165	(Not display)	00 - FF	00	00	00
D166	(Not display)	00 - FF	00	00	00
D167	(Not display)	00 - FF	00	00	00
D168	(Not display)	00 - FF	00	00	00
D169	(Not display)	00 - FF	00	00	00
D170	(Not display)	00 - FF	00	00	00
D171	(Not display)	00 - FF	00	00	00
D172	(Not display)	00 - FF	00	00	00
D173	(Not display)	00 - FF	00	00	00
D174	(Not display)	00 - FF	00	00	00
D175	(Not display)	00 - FF	00	00	00
D176	(Not display)	00 - FF	00	00	00
D177	(Not display)	00 - FF	00	00	00
D178	(Not display)	00 - FF	00	00	00
D179	(Not display)	00 - FF	00	00	00
D180	(Not display)	00 - FF	00	00	00
D181	(Not display)	00 - FF	00	00	00
D182	(Not display)	00 - FF	00	00	00
D183	(Not display)	00 - FF	00	00	00
D184	(Not display)	00 - FF	00	00	00
D185	(Not display)	00 - FF	00	00	00
D186	(Not display)	00 - FF	00	00	00
D187	(Not display)	00 - FF	00	00	00


4.6.5 MAIN CPU SYETEM SETTING (*Fixed values)

Item No.	Item name	Variable range	Setting value		
			PAL	SECAM	NTSC
Z001	(Not display)	00 - FF	00	00	00
Z002	(Not display)	00 - FF	00	00	00
Z003	(Not display)	00 - FF	00	00	00
Z004	(Not display)	00 - FF	00	00	00
Z005	(Not display)	00 - FF	00	00	00
Z006	(Not display)	00 - FF	00	00	00
Z007	(Not display)	00 - FF	00	00	00
Z008	(Not display)	00 - FF	00	00	00
Z009	(Not display)	00 - FF	00	00	00
Z010	(Not display)	00 - FF	00	00	00

4.7 ADJUSTMENT PROCEDURE

4.7.1 VIDEO CIRCUIT

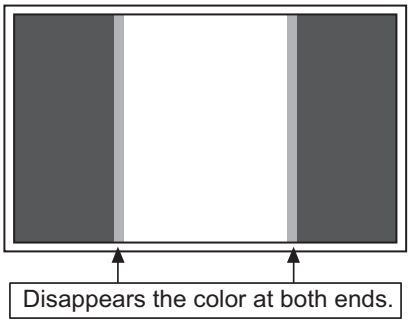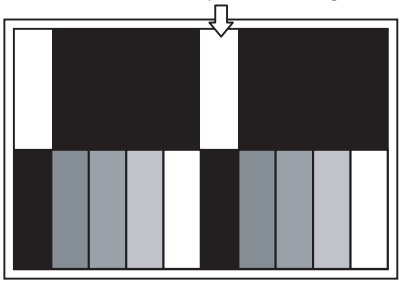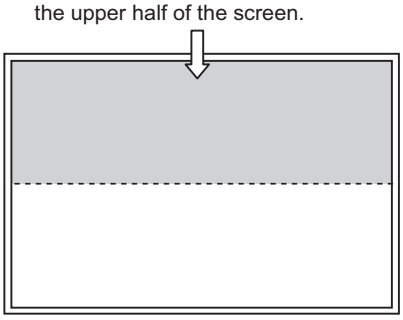Item	Measuring instrument	Test point	Adjustment part	Description
625i A-D OFFSET	Remote control unit Signal generator		[1.ADJUST] S001: PREPARE (Adjustment setting mode change) S008: 5i CB OF(625i cb offset) S009: 5i CR OF(625i cr offset) S030: R DRIVE(Red drive) S031: G DRIVE(Green drive) S032: B DRIVE(Blue drive)	(1) Receive a 625i component ramp pattern signal. (2) Set "PICTURE MODE" to STANDARD. (3) Set "ZOOM" to FULL. (4) Set "WHITE BALANCE" to MID. (5) Select "1.ADJUST" from the SERVICE MODE. (6) Set < S030 > (R DRIVE), < S031> (G DRIVE) and < S032 > (B DRIVE) to "133". (7) Set < S001 >(adjustment setting mode change) to set "8" and it change to the 625i A-D offset adjustment setting mode. (8) Adjust < S008 > (625i Cb offset) and < S009 > (625i Cr offset) to lose the gap (red line, green line and blue line) which appears at both ends of a white part at the centre of the screen. (9) Set < S001 > to set "0" and it change to the normal mode. (10) Press the [MUTING] key to memoirze the set value.
				
1125i (50Hz) BRIGHTNESS	Remote control unit Signal generator		[1.ADJUST] S001: PREPARE (Adjustment setting mode change) S012: HD BL(1125i brightness) S030: R DRIVE(Red drive) S031: G DRIVE(Green drive) S032: B DRIVE(Blue drive)	(1) Receive a 1125i (50Hz) gray scale pattern signal. (2) Set "PICTURE MODE" to STANDARD. (3) Set "ZOOM" to FULL. (4) Set "WHITE BALANCE" to MID. (5) Select "1.ADJUST" from the SERVICE MODE. (6) Set < S030 > (R DRIVE), < S031> (G DRIVE) and < S032 > (B DRIVE) to "133". (7) Set < S001 > (adjustment setting mode change) to set the values "12" and it change to the 1125i black level adjustment setting mode. (8) Adjust < S012 > (1125i brightness) to set the 0% black part in the upper half of the screen to be brightest. (9) Set < S001 > to set "0" and it change to the normal mode. (10) Press the [MUTING] key to memoirze the set value.
Set the 0% black part to be brightest. 				
1125i (50Hz) A-D OFFSET	Remote control unit Signal generator		[1.ADJUST] S001: PREPARE (Adjustment setting mode change) S013: HD CB OF(1125i cb offset) S014: HD CR OF(1125i cr offset) S030: R DRIVE(Red drive) S031: G DRIVE(Green drive) S032: B DRIVE(Blue drive)	(1) Receive a 1125i (50Hz) 30% all white pattern signal. (2) Set "PICTURE MODE" to STANDARD. (3) Set "ZOOM" to FULL. (4) Set "WHITE BALANCE" to MID. (5) Select "1.ADJUST" from the SERVICE MODE. (6) Set < S030 > (R DRIVE), < S031> (G DRIVE) and < S032 > (B DRIVE) to "133". (7) Set < S001 > (adjustment setting mode change) to set "13" and it change to the 1125i A-D offset adjustment setting mode. (8) Adjust < S013 > (1125i Cb offset) to minimize the blue noise in the upper half of the screen. (9) Adjust < S014 > (1125i Cr offset) to minimize the blue noise in the upper half of the screen. (10) Set < S001 > to set "0" and it change to the normal mode. (11) Press the [MUTING] key to memoirze the set value.
Minimize the red and blue noises in the upper half of the screen. 				

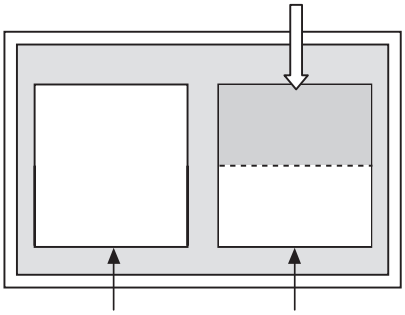Item	Measuring instrument	Test point	Adjustment part	Description
SUB SCREEN A-D OFFSET	Remote control unit Signal generator		[1.ADJUST] S001: PREPARE (Adjustment setting mode change) S016: RT CB OF (Sub screen cb offset) S017: RT CR OF (Sub screen cr offset) S030: R DRIVE(Red drive) S031: G DRIVE(Green drive) S032: B DRIVE(Blue drive)	(1) Set "PICTURE MODE" to STANDARD. (2) Set "ZOOM" to FULL. (3) Set "WHITE BALANCE" to MID. (4) Set "MULTI PICTURE" to 2 pictures. (5) Receive a PAL 30% all white pattern signal on the Right screen. At the same time, set the Left screen in VIDEO-1 mode (No signal). (6) Select "1.ADJUST" from the SERVICE MODE. (7) Set < S030 > (R DRIVE), < S031> (G DRIVE) and < S032 > (B DRIVE) to "133". (8) Set < S001 > (adjustment setting mode change) to set "17" and it change to the sub screen A-D offset adjustment setting mode. (9) Adjust < S016 > (Sub screen cb offset) to minimize the blue noise in the upper half of the screen. **If you select an adjustment item < S016 >, then the screen automatically turn to twin pictures mode.** (10) Set < S017 > (Sub screen cr offset) to minimize the red noise in the upper half of the screen. (11) Readjust < S016 > and < S017 > to set the upper half of the screen to be the blackest. (See Fig.9) (12) Set < S001 > to set "0" and it change to the normal mode. (13) Press the [MUTING] key to memoirze the set value.
Set the 0% block part to be brightest.  VIDEO-1 <NO SIGNAL> TV(RF) <30% all white>				
WHITE BALANCE (HIGHLIGHT)	Remote control unit Signal generator		[1.ADJUST] S030: R DRIVE (Red drive) S031: G DRIVE (Green drive) S032: B DRIVE (Blue drive)	(1) Receive a PAL 75% all white signal. (2) Set "PICTURE MODE" to STANDARD. (3) Set "ZOOM" to FULL. (4) Set "WHITE BALANCE" to MID. (5) Select "1.ADJUST" from the SERVICE MODE. (6) Adjust to keep one of < S030 > (Red drive), < S031 > (Green drive) or < S032 > (Blue drive) unchanged, then lower the other two so that the all-white screen is equally white throughout. **NOTE:** Set one or more of < S030 >, < S031 >, and < S032 > to "85". (7) Check that white balance is properly tracked from low light to high light. If the white balance tracking is deviated, adjust to correct it. (8) Press the [MUTING] key to memoirze the set value.

SECTION 5
TROUBLESHOOTING

5.1 SELF CHECK FEATURE

5.1.1 OUTLINE

This unit comes with the "Self check" feature, which checks the operational state of the circuit and displays/saves it during failure.Diagnosis is performed when power is turned on, and information input to the main microcomputer is monitored at all time.Diagnosis is displayed in 2 ways via screen display and LED flashes. Failure detection is based on input state of I^2C bus and the various control lines connected to the main microcomputer.

5.1.2 HOW TO ENTER THE SELF CHECK MODE

Before entering the SERVICE MODE, confirm that the setting of PIP/TV/ DVD switch is at the "TV" side. If the switches have not been properly set, you cannot enter the SERVICE MODE.

(1) Press [DISPLAY] key and [MUTING] key simultaneously, then enter the SERVICE MODE.
(2) Press the [2] key SELF CHECK MODE.
(3) Press the [ZOOM] key to enter Page 2 of the SELF CHECK MODE.
*Use the [CINEMA] key to toggle between Page 1 and Page 2.

NOTE:

When a number key other than the [1] to [3] key is pressed in the SERVICE MODE screen, the other relevant screen may be displayed.
This is not used in the adjustment procedure. Press the [MENU] key to return to the MAIN MENU SCREEN.

5.1.3 HOW TO EXIT THE SELF CHECK MODE

To Save Failure History:

Turn off the power by unplugging the AC power cord plug when in the Self check display mode.

To Clear (Reset) Failure History:

Turn off the power by pressing the [POWER] key on the remote control unit when in the Self check display mode.

5.1.4 FAILURE HISTORY

Failure history can be counted up to 9 times for each item. When the number exceeds 9, display will remain as 9. Failure history will be stored in the memory unless it has been deleted.

NOTE:

Only SYNC (with/without sync signals) will be neither counted nor stored.

5.1.5 POINTS TO NOTE WHEN USING THE SELF CHECK FEATURE

In addition to circuit failures (abnormal operation), the following cases may also be iagnosed as "Abnormal" and displayed and counted as "NG".

(1) Temporary defective transmissions across circuits due to pulse interruptions
(2) Misalignment in the on/off timing of power for I^2C bus (VCC) when turning on/off the main power.

Diagnosis may be impeded if a large number of items are displayed as "NG". As such, start Self check check only after 3 seconds in the case of receivers and 5 seconds in the case of panels upon turning on the power. If recurrences are expected, ensure to clear (reset) the failure history and record the new diagnosis reults.

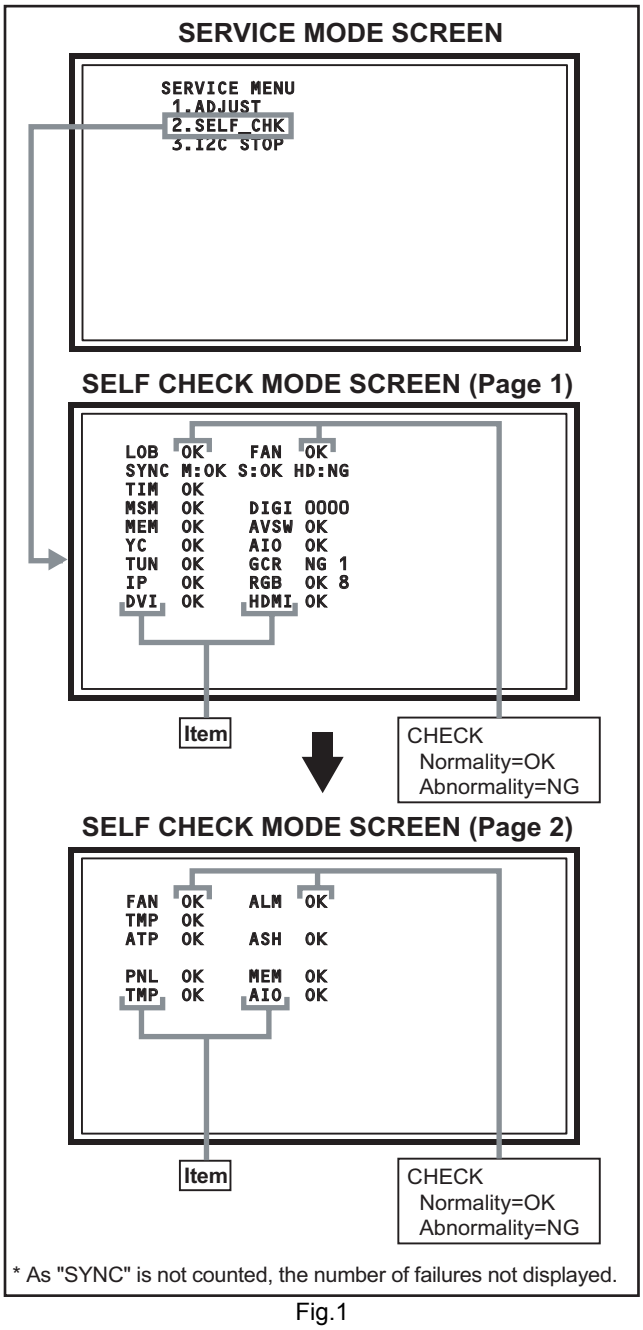


Fig.1

5.1.6 DETAILS

Self check is performed for the following items:

< Page 1 of screen >

Detection item	Display	Detection content	Diagnosis signal (line)	Detection timing
Low bias line short protection	LOB	Confirmation of operation of the low bais (2.5V / 3.3V / 5V / 9V) protection circuit. **Q9822 [REGULATOR PWB]**	LB_PRO	Detection starts 3 seconds after the power is turned on. If error continues between 400ms the power is turned off.
Abnormal rise of temperature in audio circuit	FAN	Confirmation of the temperature of audio circuit. **TH6661 [ANALOG SIGNAL PWB]**	SDA	Detection starts 3 seconds after the power is turned on. If the temperture of 90°C is detected for 3 seconds the power is turned off.
Presence of sync signal	SYNC	Confirmation of presence of video sync signal. M : Main sync signal S : Sub sync signal HD : Component sync signal **IC201 [ANALOG SIGNAL PWB]**	SDA	Confirmation of presence of sync signal in video signal.
AC power input	TIM	Not used.	---	---
Main CPU communication	MSM	Not used.	---	---
Digital tuner	DIGI	Not used.	---	---
Main memory	MEM	Confirmation of reply of ACK signal which uses I^2C communication. **IC7602 [DIGITAL SIGNAL PWB]**	SDA	If it checks whenever I^2C communication is performed and no reply of ACK signal an error will be counted.
AV select switch	AVSW	Same as above. **IC301, IC501 [ANALOG SIGNAL PWB]**	SDA	Same as above.
3 dimensions YC separator	YC	Not used.	---	---
Multi sound process	AIO	Not used.	---	---
RF tuner	TUN	Confirmation of reply of ACK signal which uses I^2C communication. **TU3001 [RECEIVER PWB]**	SDA	If it checks whenever I^2C communication is performed and no reply of ACK signal an error will be counted.
Ghost reduction	GCR	Not used.	---	---
DIST process	IP	Confirmation of reply of ACK signal which uses I^2C communication. **IC3001 [DIGITAL SIGNAL PWB]**	SDA	If it checks whenever I^2C communication is performed and no reply of ACK signal an error will be counted.
RGB process	RGB	Confirmation of reply of ACK signal which uses I^2C communication. **IC3001 [DIGITAL SIGNAL PWB]**	SDA	If it checks whenever I^2C communication is performed and no reply of ACK signal an error will be counted.
DVI (Digital communication)	DVI	Not used.	---	---
Digital input	HDMI	Not used.	---	---

< Page 2 of screen >

Detection item	Display	Detection content	Diagnosis signal (line)	Detection timing
Fan lock	FAN	Not used.	---	---
Abnormal of operation of PANEL	ALM	Not used.	---	---
Abnormal rise oftemperature in PANEL	TMP	Not used.	---	---
Abnormal rise of temperature in audio circuit	ATP	Not used.	---	---
Short circuit detection of audio circuit	ASH	Not used.	---	---
Panel communication	PNL	Not used.	---	---
Sub memory	MEM	Not used.	---	---
Temp. sensor	TMP	Not used.	---	---
Audio control	AIO	Confirmation of reply of ACK signal which uses I^2C communication. **IC6521 [ANALOG SIGNAL PWB]**	SDA	If it checks whenever I^2C communication is performed and no reply of ACK signal an error will be counted.

5.1.7 METHOD OF DISPLAY WHEN A RASTER IS NOT OUTPUT

In the state where a raster is not output by breakdown of the set, an error is displayed by blink of the POWER LED.

Type of error	POWER LED flash cycle
Low bias line short protection	Low luminance blue turnig on and off at 1 second intervals.
Abnormal rise of temperature in audio circuit	High luminance blue turnig on and off at 0.1 second intervals.

< Explanation of operation >

If error is detected, the power is turned off.
Shortly after a power is turned off, POWER LED will be blinked.
Power cannot be turned on until the power cord takes out and inserts, after a power is turned off.

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY VIDEO DISPLAY CATEGORY 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.YA208)

Printed in Japan
VPT

JVC

SERVICE MANUAL

WIDE LCD PANEL TELEVISION

LT-Z26SX4B,
LT-Z26SX4B/A,
LT-Z26SX4B/S,
LT-Z26SX4S/S,
LT-Z26SX4B/C

BASIC CHASSIS
FL

Supplementary

Please be informed that this service manual contains the related matters following the parts replacement in the LCD PANEL UNIT.
For details other than those described in this manual, please refer to the LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S and LT-Z26SX4S/S service manual (No.YA208, 2004/12) LT-Z26SX4B/C service manual (No.YA208B, 2005/1).

SECTION 1
PRECAUTION

Please refer to "LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S and LT-Z26SX4S/S (No.YA208)" about this section.

SECTION 2
SPECIFIC SERVICE INSTRUCTIONS

Please refer to "LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S and LT-Z26SX4S/S (No.YA208)" about this section.

COPYRIGHT © 2005 Victor Company of Japan, Limited

No.YA208C
2005/4

SECTION 3
DISASSEMBLY


CAUTION AT DISASSEMBLY:

- Make sure that the power cord is disconnected from the outlet.
- Pay special attention not to break or damage the parts.
- When removing each board, remove the connectors as required. Taking notes of the connecting points (connector numbers) makes service procedure manageable.
- During the procedure, place a mirror mat etc. under the LCD UNIT and be careful not to damage the PANEL.
- Make sure that there is no bent or stain on the connectors before inserting, and firmly insert the connectors.

3.1 DISASSEMBLY PROCEDURE

3.1.1 CAUTION ON REMOVING THE LCD PANEL UNIT

The LCD PANEL is fixed to the FRONT PANEL (at the back side) by using double-side adhesive tapes. To remove the LCD PANEL UNIT, remove the adhesive tape on the FRONT PANEL slowly.

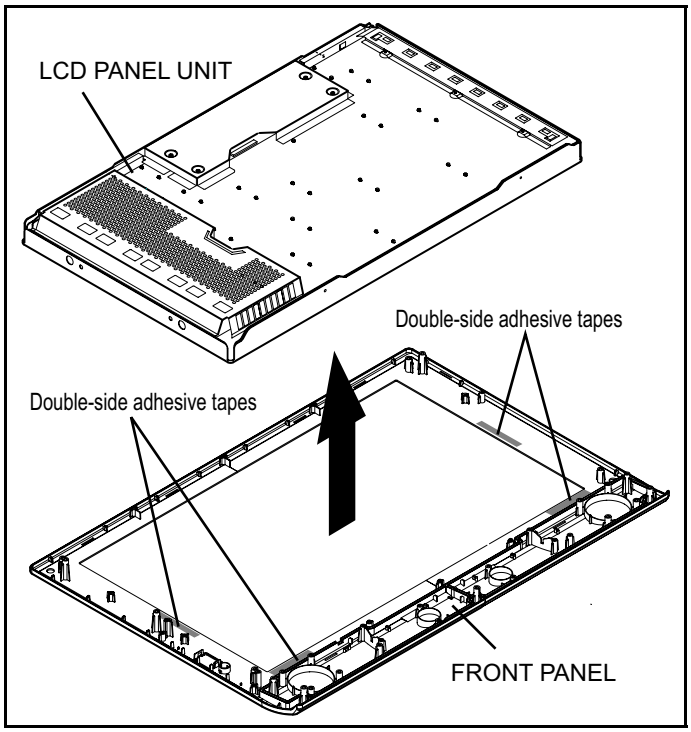

3.1.2 REMOVING THE CONTROL PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
- Remove the LCD PANEL UNIT.

(1) Remove the 4 screws **[A]**, then remove the CONTROL PWB COVER.
(2) Remove the 2 screws **[B]**, then remove the CONTROL PWB.

CAUTION:

Carry out the procedure with extra care as the FERRITE CORE is affixed with double-side adhesive tapes and it may break if extra force is applied.

3.1.3 REMOVING THE INVERTER PWB (Fig.1)

- Remove the STAND.
- Remove the REAR COVER.
- Remove the LCD PANEL UNIT.

(1) Remove the 6 screws **[C]**, then remove the INVERTER PWB COVER.
(2) Remove the 3 screws **[D]**, then remove the INVERTER PWB.
(3) Remove the 8 screws **[E]**, then remove the INVERTER PWB COVER.
(4) Remove the 3 screws **[F]**, then remove the INVERTER COLD PWB.

3.1.4 REMOVING THE BACK LIGHT UINT (Fig.1)

CAUTION:

When replacing the BACK LIGHT UINT, be careful to prevent dust attachment to the UNIT. If dust particles attached to the UNIT, it becomes the cause of uneven brightness.

- Remove the STAND.
- Remove the REAR COVER.
- Remove the LCD PANEL UNIT.
- Remove the CONTROL PWB.
- Remove the INVERTER PWB.
- Remove the INVERTER COLD PWB.

(1) Remove the 14 screws **[G]**, then remove the TOP PANEL FRAME.
(2) Remove the 4 screws **[H]**, then remove the LCD PANEL.

CAUTION:

When removing the LCD PANEL, be careful not to give stress to the FPC which connects the PWB and the LCD PANEL.

CAUTION ON EXCHAGING THE BACK LIGHT UINT

- If the screws that are not specified in this section are removed, the LCD PANEL will be removed and it cannot be reassembled.

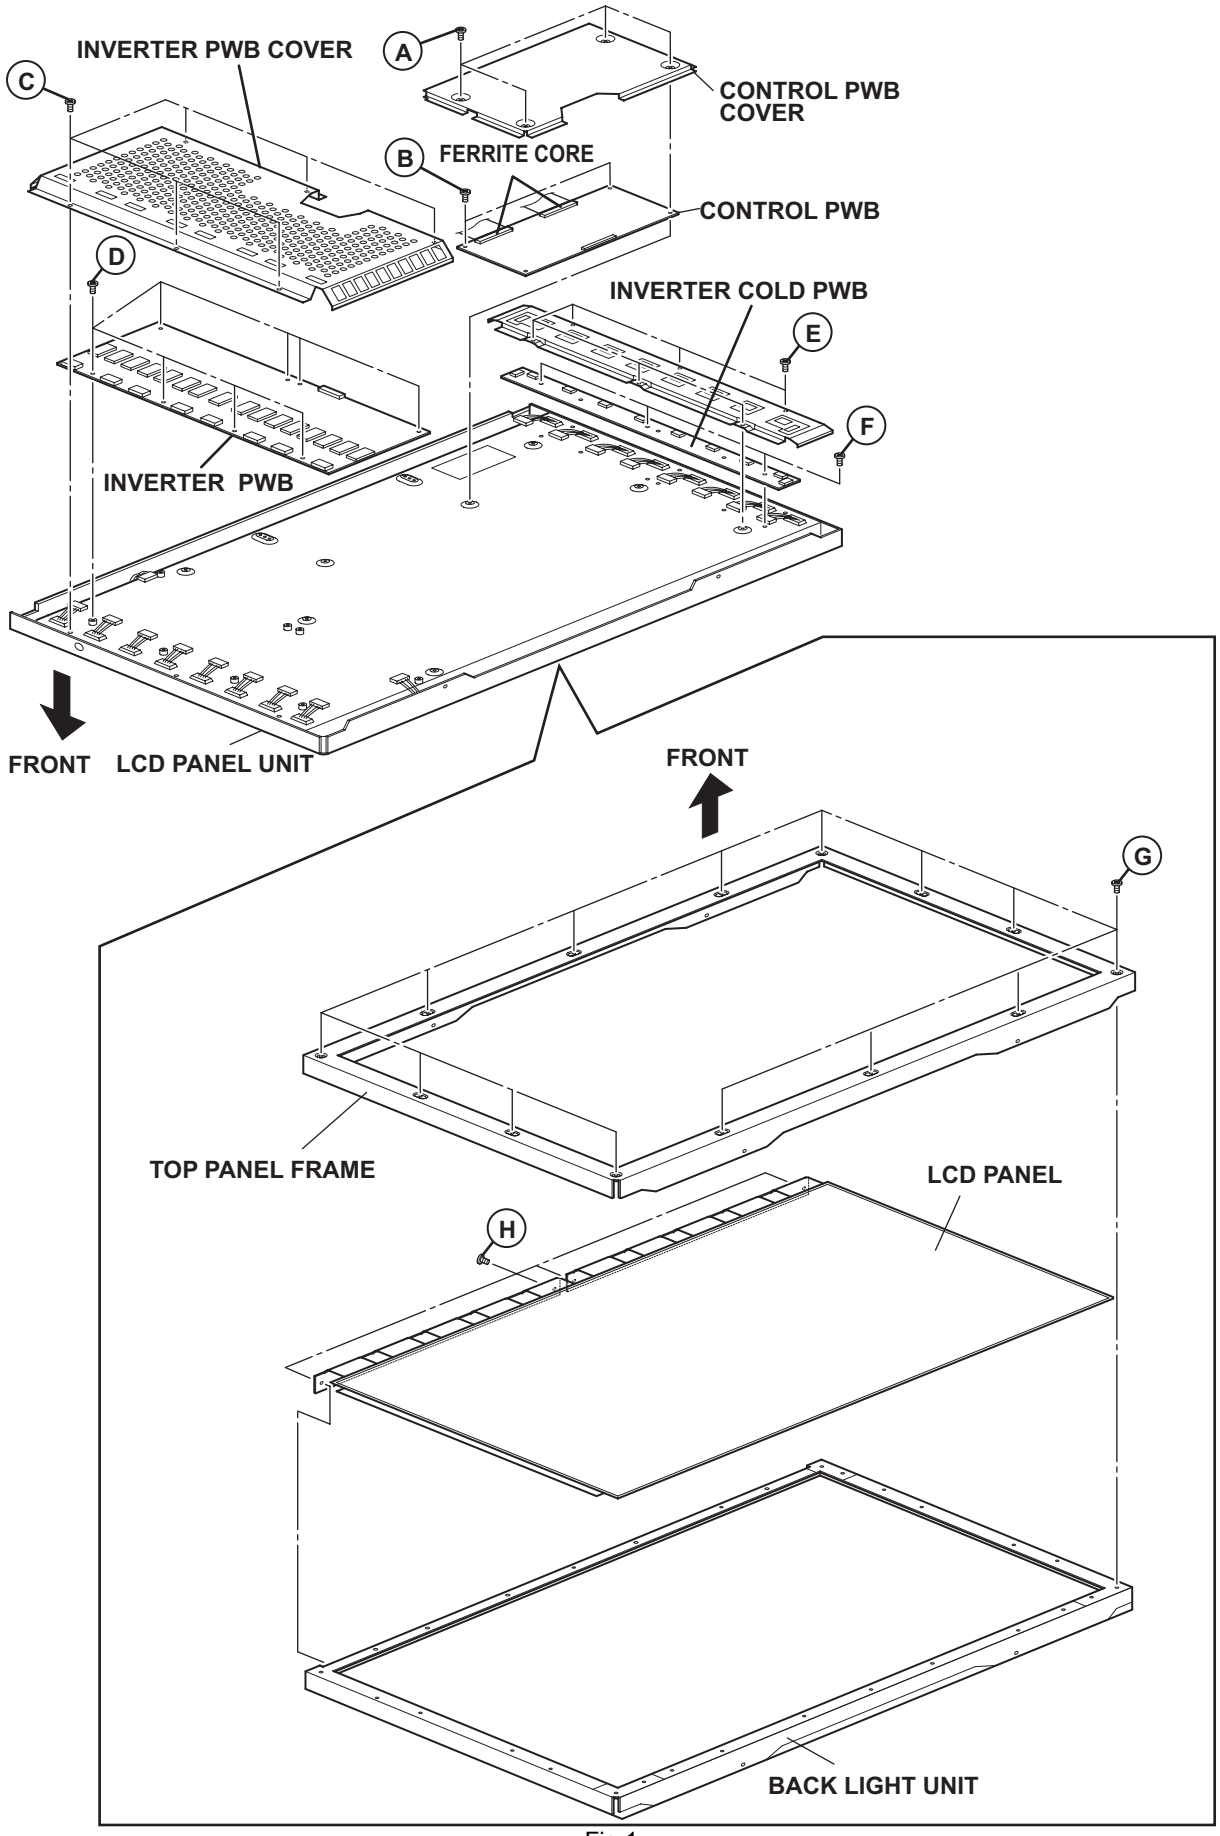

INVERTER PWB COVER
A
CONTROL PWB COVER
C
B
FERRITE CORE
CONTROL PWB
D
INVERTER COLD PWB
E
F
INVERTER PWB
FRONT
LCD PANEL UNIT
FRONT
G
TOP PANEL FRAME
LCD PANEL
H
BACK LIGHT UNIT

Fig.1

SECTION 4
ADJUSTMENT


Please refer to "LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S and LT-Z26SX4S/S (No.YA208)" about this section.

SECTION 5
TROUBLESHOOTING

Please refer to "LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S and LT-Z26SX4S/S (No.YA208)" about this section.

PARTS LIST

EXPLODED VIEW

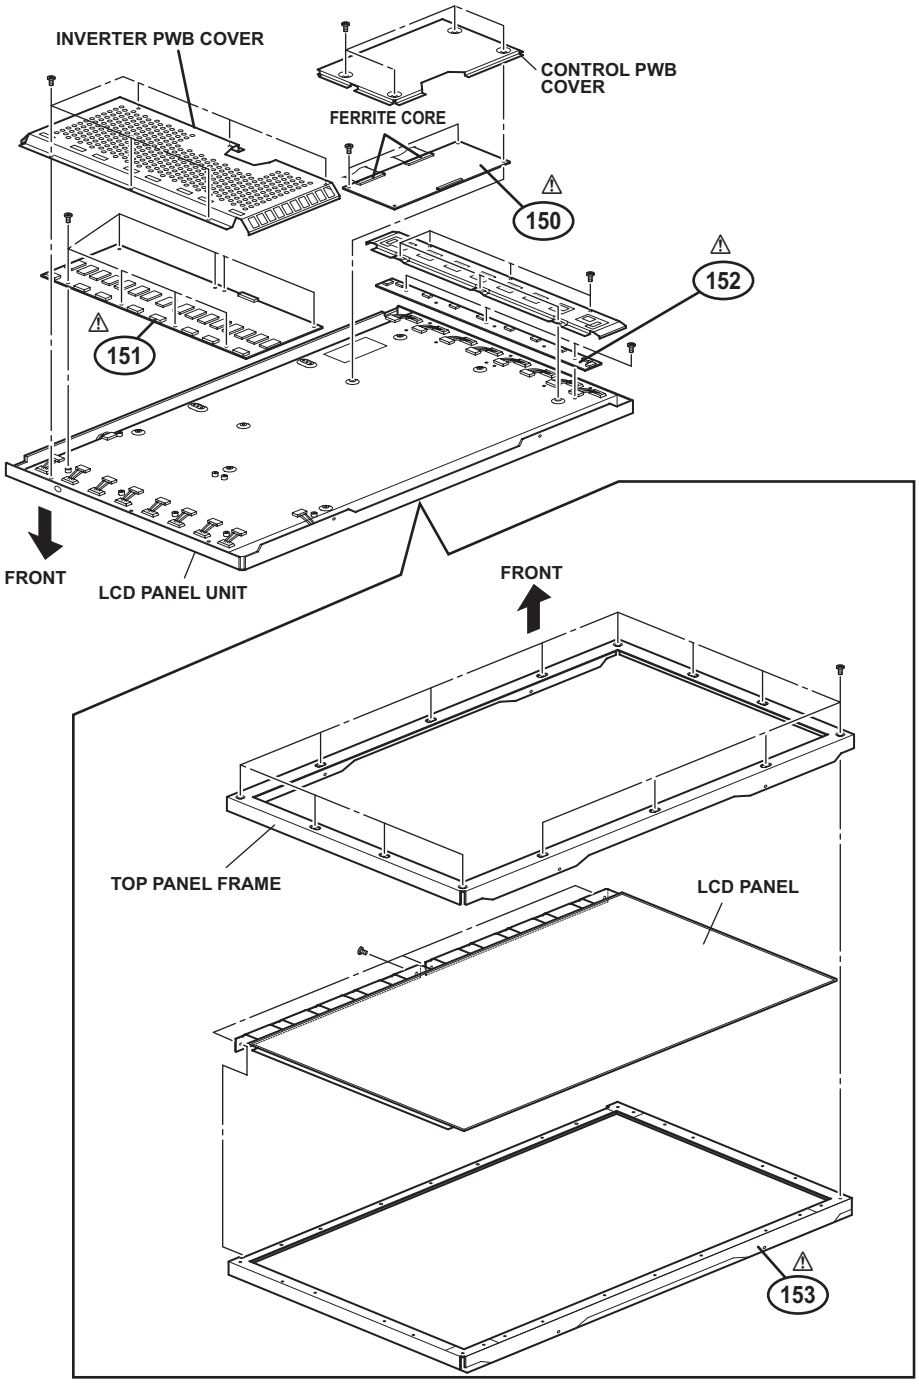

EXPLODED VIEW PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description	Local
⚠	150	LJ94-00414B	CONTOROL PWB		
⚠	151	LJ97-00329A	INVERTER PWB		
⚠	152	LJ97-00378A	INVERTER COLD PWB		
⚠	153	LJ96-01030A	BACK LIGHT UNIT		

JVC

Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY DISPLAY CATEGORY 12, 3-chome, Moriya-cho, Kanagawa-ku, Yokohama-city, Kanagawa-prefecture, 221-8528, Japan

(No.YA208C)

Printed in Japan
VPT

ENGLISH

JVC

D.I.S.T.
Digital Image Scaling Technology

LT-Z32SX4B
LT-Z26SX4B
LT-Z32SX4S
LT-Z26SX4S

CINEMA SURROUND

WIDE LCD PANEL TV

INSTRUCTIONS


LCT1732-001A-H

Thank you for buying this JVC LCD flat television.
To make sure you understand how to use your new TV, please read this manual thoroughly before you begin. (“LCD” stands for Liquid Crystal Display.)

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.


WARNING

- Fingers may be trapped under the TV causing injuries. Hold the TV at the bottom in the middle, and do not allow it to tilt up or down.

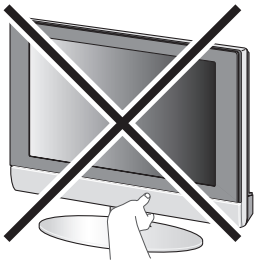


WARNING

- The TV may fall causing injuries. Hold the bottom of the stand with your hand and tilt the TV up and down.
- Do not allow children to hang from the TV, place their elbows on the TV or lean against the TV. Doing so may cause the TV to fall over and lead to injuries.

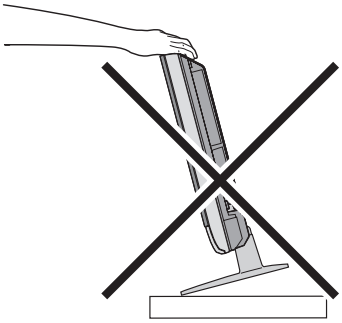

CAUTION

- The TV screen may be damaged if the TV is carried as shown in the diagram below.
  The TV should always be carried by two people.

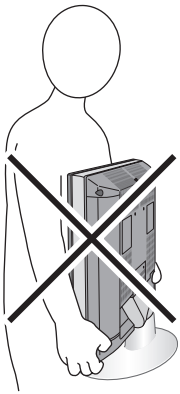


Pixel defects

LCDs use collections of fine points (“pixels”) to display images. While there is no problem with more than 99.99% of these pixels, please understand that a very small number of pixels may not light, or may light all the time.

Distance recommendations

Avoid improper installation and never position the unit where good ventilation is impossible.
When installing this TV, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture.
Keep to the minimum distance guidelines shown for safe operation.

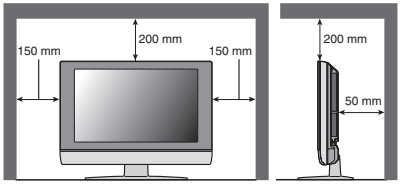

Failure to take the following precautions may cause damage to the television or remote control.

DO NOT block the TV’s ventilation openings or holes.
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

DO NOT place anything on top of the TV.
(such as cosmetics or medicines, flower vases, potted plants, cups, etc.)

DO NOT allow objects or liquid into the cabinet openings.
(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

DO NOT place any naked flame sources, such as lighted candles, on the TV.

DO NOT subject the TV to direct sunlight.

The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.

If there is a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

■ Cleaning the screen

The screen is coated with a special thin film to reduce reflection. If this film is damaged, uneven colours, discolouration, scratches, and other problems that cannot be repaired may occur. Pay attention to the following when handling the screen.

- Do not use glue or adhesive tape on the screen.
- Do not write on the screen.
- Do not allow the screen to come in contact with any hard objects.
- Do not allow condensation to form on the screen.
- Do not use alcohol, thinner, benzene or other solvents on the screen.
- Do not rub the screen hard.

CAUTION:

- Operate only from the power source specified (AC 110 – 240 V, 50/60 Hz) on the unit.
- Avoid damaging the AC plug and power cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the main outlet.

D.I.S.T. demonstration

To start the D.I.S.T. demonstration:
Press the **MENU** button to display the menu bar. Then press the yellow button.
A picture split in two (D.I.S.T. turned on and D.I.S.T. turned off) will appear on the screen.

To quit the D.I.S.T. demonstration:
Press the yellow button, **BACK** button, **CHANNEL** ∨/∧ buttons or any of the number buttons.

CONTENTS

Setting up your TV 5
Installation 5
Using the stand 5
Removing the terminal covers 6
Connecting the aerial and video cassette recorder (VCR) 7
Connecting the power cord to the AC outlet 8
Putting the batteries into the remote control 8
Initial settings (Setup tour) 8

TV buttons and functions 10
Turn the TV on from standby mode 10
Choose a TV channel 10
Adjust the volume 10
Using the Menu 10

Remote control buttons and functions 11
Turn the TV on or off from standby mode ... 11
Choose a TV channel and watch images from external devices 12
Adjust the volume 13
Display function 13
ZOOM function 14
CINEMA SURROUND function 15
Using the “Freeze” function 15
Using the “Multi-picture” function 16
RETURN PLUS function and Return function 17
Favourite channel function 18
Operating a JVC brand DVD player 19

Teletext function 20
Basic operation 20
Using the List Mode 20
Hold 21
Sub-page 21
Reveal 21
Size 21
Index 22
Cancel 22

Using the TV’s menu 23
Basic operation 23

PICTURE menu 25
PICTURE MODE 25
BACK LIGHT 25
CONTRAST 25
BRIGHT 25
SHARP 25
COLOUR 25
TINT 25
WHITE BALANCE 25
FEATURES 26

SOUND menu 29
STEREO / I • II 29
BASS 29
TREBLE 29
BALANCE 29
CINEMA SURROUND 29
A.H.B. (Active Hyper Bass) 29
BBE 30

FEATURES menu 31
SLEEP TIMER 31
CHANNEL GUARD 31
APPEARANCE 33
BLUE BACK 33
CHILD LOCK 33
AUTO SHUTOFF 33
FAVOURITE SETTING 33

SET UP menu 34
AUTO PROGRAM 34
EDIT/MANUAL 34
LANGUAGE 38
VIDEO-1 SETTING/VIDEO-3 SETTING 38
AI VOLUME 38
TELETEXT LANGUAGE 39

Displaying a computer screen 40
Connecting to the computer 40
Watching images from a computer 40
Table of signals for each type of computer 40

Additional preparation 41
Connecting external equipment 41

CH/CC numbers 44

Troubleshooting 45

Specifications 47

ENGLISH

Setting up your TV

- When you install the TV on the wall, only use a JVC wall mounting unit (optional) which is designed for this TV.
- Make sure that the TV is installed on the wall by a skilled installer.

Installation

Cautions for installation

- Install the TV in a corner on a wall or on the floor so as to keep cords out of the way.
- The TV will generate a slight amount of heat during operation. Ensure that sufficient space is available around the TV to allow satisfactory cooling. See “Distance recommendations” on page 2.

Using the stand

This TV comes with a table top stand already attached.
This stand can be used to adjust the direction of the TV screen 5° up, 10° down, and 20° to the left or right.

■ Tilt the TV up and down:


While holding the bottom of the stand with one hand, use your other hand to hold the middle of the top of the TV and slowly tilt the TV up and down.

- As a safety measure, the stand is constructed so that it requires a certain amount of force to tilt the TV.




■ Rotate the TV to the left and right:

While holding the bottom of the stand with one hand, use your other hand to hold the edge of the panel and slowly adjust the direction of the TV screen.

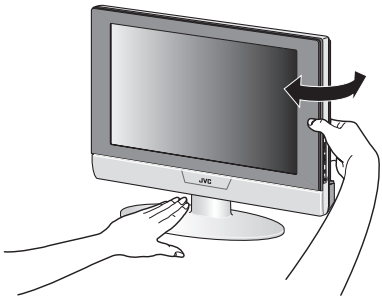

■ Cable holder


A cable holder which is used to keep the connection cables tidy is attached to the back of the stand. Gently squeeze the left and right of the cable holder and pull it to remove it from the stand. After putting the cables in the cable holder, attach it to the back of the stand again.

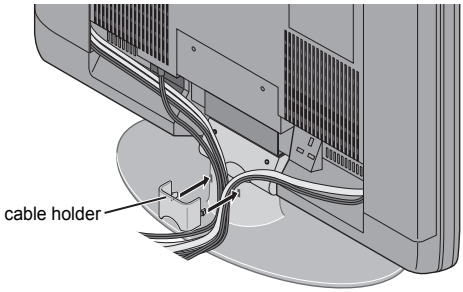

Removing the terminal covers

There are connection terminals behind the covers on the left and right of the rear of the TV. Remove these two covers before connecting an antenna or VCR.

Remove the covers by removing the hooks. When replacing the covers, place the side of the covers against the TV and insert the hooks.

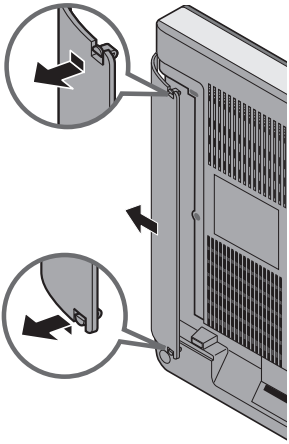

- Leave the covers off if they do not fit properly. Do not force to replace the covers. Doing so may cause damage to the connection cables and the covers.

Connecting the aerial and video cassette recorder (VCR)

Caution

- Turn off all the equipment including the TV before connecting anything.
- Aerial cable is not supplied. Use a good quality 75-ohm coaxial cable.
- Read the manual that came with the VCR before connecting.

If not connecting a VCR (follow ①): Connect an aerial cable to the aerial socket on this TV.

If connecting a VCR:

1 **Connect the aerial cable to the aerial input socket on the VCR, and connect the VCR and TV with another aerial cable**


2 **Connect the VCR's VIDEO OUT (video output) terminal and the TV's VIDEO terminal with a video cable**

To connect a VCR to the TV with an S-VIDEO cable:
Connect the VCR's S-VIDEO OUT (S-VIDEO output) terminal and TV's S VIDEO terminal with an S-VIDEO cable Ⓐ, instead of connecting with a video cable.
Note that the connection with a video cable will be ignored in case you connect a VCR to the TV with both video cable and S-VIDEO cable.

3 **Connect the VCR's VIDEO OUT (audio L/R output) terminals and the TV's AUDIO terminals with an audio cable**

- To connect additional external devices, please see "Connecting external equipment" on page 41.

without terminal covers

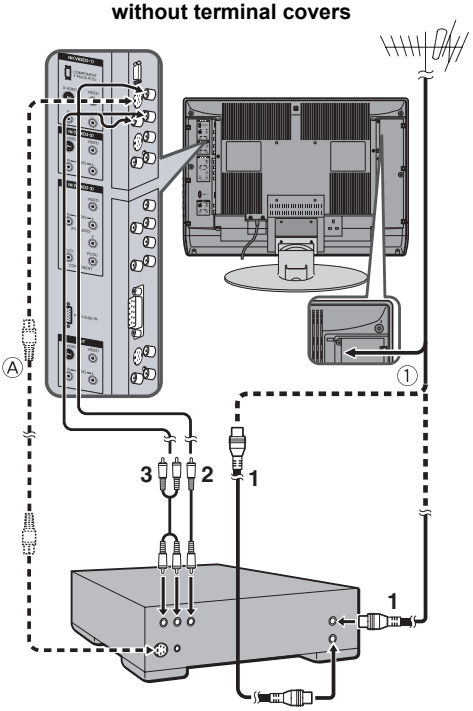

Connecting the power cord to the AC outlet

Insert the AC plug on the power cord from the TV into AC outlet.


Caution

- Operate only from the power source specified (AC 110 – 240 V, 50/60 Hz) on the unit.

- Remove the AC plug from the outlet to completely disconnect the TV from the power supply.

Putting the batteries into the remote control


Use two AA/R6 dry cell batteries.
Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

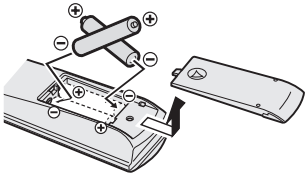

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on how much you use the remote control.
- The batteries we supply are only for setting up and testing your TV, please replace them as soon as you need to.
- If the remote control does not work properly, replace the batteries.

Initial settings (Setup tour)

When the TV is first turned on, it goes into the initial settings mode, and you will see the JVC logo. Follow the instructions on the screen display to make the initial settings.

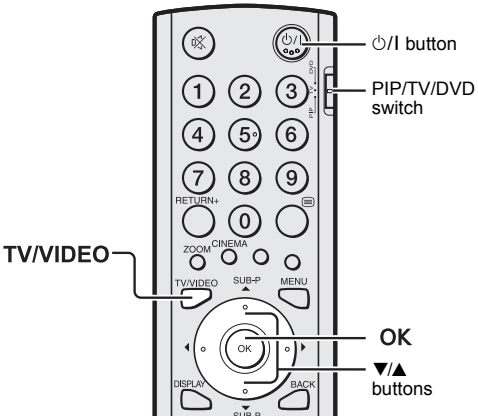


1 Make sure to set the PIP/TV/DVD switch on the remote control to the TV position

- You cannot turn the TV on when the PIP/TV/DVD switch is set to the DVD position.

2 Press the ⏻/I button on the remote control

The TV turns on from standby mode and the JVC logo is displayed.


- Check that the AC plug on the power cord from the TV is connected to AC outlet.

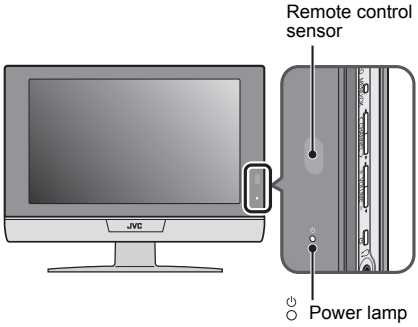

- If the JVC logo does not appear this is because your TV has already been turned on for the first time: use the “LANGUAGE”, “TELETEXT LANGUAGE” and “AUTO PROGRAM” functions to make the initial settings. For details, see “SET UP menu” on page 34.

3 Press the OK button


The LANGUAGE menu appears.

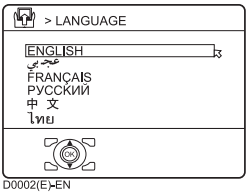

D0002(E)-EN

4 Press the ▼/▲ buttons to choose ENGLISH. Then press the OK button


The TELETEXT LANGUAGE menu appears. Set the teletext language group that corresponds to the language of the teletext programme that you want to watch. For details, see “TELETEXT LANGUAGE” on page 39.

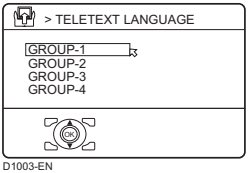

D1003-EN

5 Press the ▼/▲ buttons to choose a group. Then press the OK button


The AUTO PROGRAM function starts. The TV channels you receive are automatically stored in the programme numbers (PR) list.

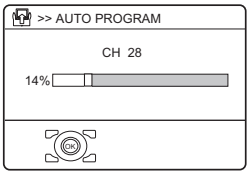

D0004-EN

- To stop the AUTO PROGRAM function, press the **OK** button.

6 After the TV channels have been registered in the programme numbers (PR), the EDIT menu appears

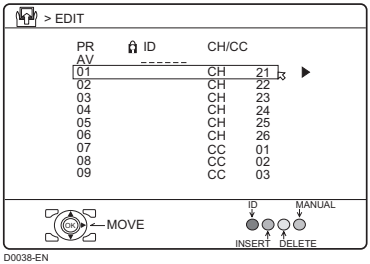



D0038-EN

- You can proceed to edit the programme numbers (PR) list using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 34.
- If a TV channel you want to view is not stored in the programme numbers (PR) list, you can register it using the MANUAL function. For details, see “EDIT/MANUAL” on page 34.
- The AUTO PROGRAM function does not store a TV channel to the programme number PR 0 (AV).
- If you do not need to use the EDIT/MANUAL function, press the **OK** button to close the EDIT menu.

Now, setting up is complete. Please enjoy your new JVC TV!

TV buttons and functions

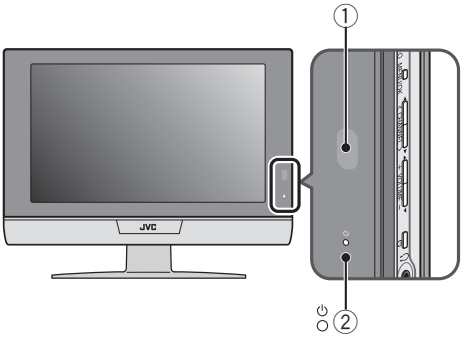

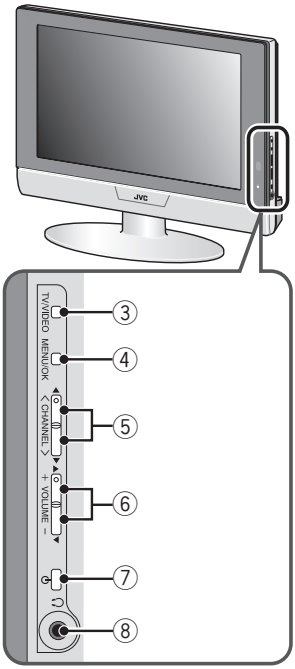

Refer to the pages in parentheses for details.

① Remote control sensor
② Power lamp (page 8)
③ TV/VIDEO button
④ MENU/OK button (page 23)
⑤ CHANNEL ∨/∧ buttons ▼/▲ (page 23)
⑥ VOLUME −/+ buttons ◀/▶ (page 23)
⑦ ⏻ (Stand by) button
⑧ Headphone jack (mini jack) (page 41)

Turn the TV on from standby mode

Press the ⏻ button or the CHANNEL ∨/∧ buttons to turn the TV on from standby mode.
When the TV is turned on, the power lamp lights blue.

To turn the TV off:
Press the ⏻ button again.
The power lamp goes off.

Caution

- The ⏻ button on the TV does not fully isolate the TV from the AC supply. If you are not going to use the TV for a long period, be sure to disconnect the AC plug from the AC socket.

Choose a TV channel

Press the CHANNEL ∨/∧ buttons to choose a programme number (PR) or a VIDEO terminal
Press the TV/VIDEO button to choose a VIDEO terminal.


Adjust the volume

Press the VOLUME −/+ buttons
The volume level indicator appears.

Using the Menu

Use the MENU/OK button
Refer to “Using the TV’s menu” (see page 23) for details of using the menu.

Remote control buttons and functions

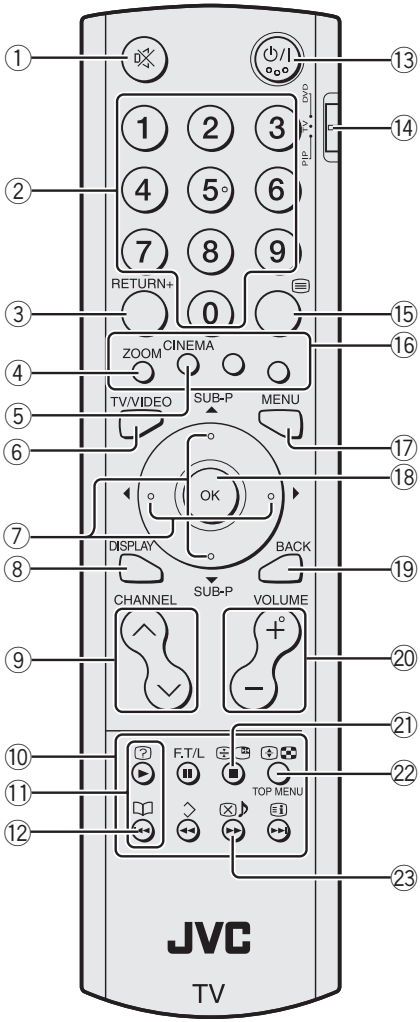

① Muting button
② Number buttons
③ **RETURN+** button
④ **ZOOM** button
⑤ **CINEMA** button
⑥ **TV/VIDEO** button
⑦ ◄/►/▼/▲ buttons
⑧ **DISPLAY** button
⑨ **CHANNEL** ∨/∧ buttons
⑩ VCR/DVD/Teletext control buttons
⑪ ∨/∧ buttons
⑫ 🕮 (Favourite) button
⑬ ⏻/I (Standby) button
⑭ PIP/TV/DVD switch
⑮ ☰ (Text) button
⑯ Colour buttons
⑰ **MENU** button
⑱ **OK** button
⑲ **BACK** button
⑳ **VOLUME** −/+ buttons
㉑ (Freeze) button
㉒ (Multi) button
㉓ ♪ (Select) button

Turn the TV on or off from standby mode

Press the ⏻/I (standby) button to turn the TV on or off

When the TV is turned on, the power lamp lights blue.

- The power can be turned on by pressing the **TV/VIDEO** button, **CHANNEL** ∨/∧ buttons or Number buttons.

To turn the TV on or off, set the PIP/TV/DVD switch on the remote control to the TV position and press the ⏻/I button.
If the PIP/TV/DVD switch on the remote control is set to the DVD position, the TV will not be turned on or off even if the ⏻/I button is pressed.


Choose a TV channel and watch images from external devices

■ **Use the number buttons: Enter the programme number (PR) of the channel using the number buttons.**

Example:
- PR 6 → press **6**
- PR 12 → press **1** and **2**

■ **Use the CHANNEL ∨/∧ buttons: Press the CHANNEL ∨/∧ buttons to choose the programme number (PR) you want or a VIDEO terminal.**

■ **Use the TV/VIDEO button: Press the TV/VIDEO button to choose a VIDEO terminal.**

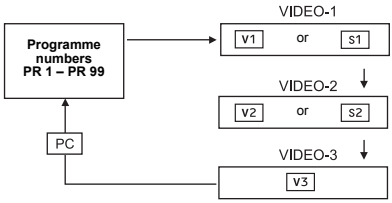

- The leading character is changed from V to S (eg V1 is changed to S1) when VIDEO-1 or VIDEO-2 is connected to the S terminal.
- If you do not have a clear picture or no colour appears, follow the operation procedure “COLOUR SYSTEM” on page 27.
- If you cannot hear the normal sound even if the picture of the TV channel appears normally. Follow the description “EDIT/ MANUAL” on page 34 to use the MANUAL function to change the SYSTEM setting.
- Since this TV is designed to make full use of the resolution of the original video source, the motion may appear unnatural when the video source is input with progressive-scanning component signals.
- If this happens, change the output setting of the connected device to interlace-scanning component signal output. See the instructions that came with the device for more information.
- The PC sound is the same as the VIDEO-3 sound.

To return to a TV channel:
Press the **TV/VIDEO** button, the **CHANNEL** ∨/∧ buttons or the number buttons.

To use the programme number PR 0 (AV):
When the TV and VCR are connected only by the aerial cable, choosing the programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to the programme number PR 0 (AV) manually. For details, see “EDIT/ MANUAL” on page 34.

Adjust the volume

Press the VOLUME −/+ buttons to adjust the volume.
The volume level indicator appears and the volume changes as you press the **VOLUME** −/+ buttons.


■ Muting the sound

Press the 🔇 (muting) button to turn off the sound.
Pressing the 🔇 (muting) button again restores the previous volume level.

Display function

You can see the channel number of the programme you are watching or the PR LIST.
From the PR LIST, you can choose a channel or VIDEO terminal.

Press the DISPLAY button to display the information you want to see.
Pressing the **DISPLAY** button changes the display as follows:

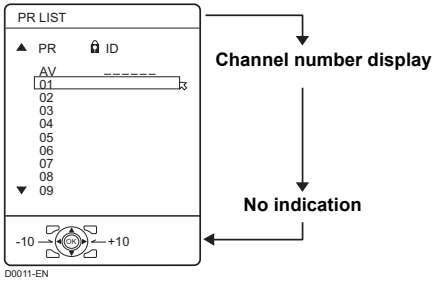

Channel number display:
The channel number and channel name (when the channel name is registered) of the programme you are watching or the VIDEO terminal number is displayed.

PR LIST:
The programme number (PR) and VIDEO terminal list is displayed.
Pressing the **OK** button after choosing the programme number (PR) or VIDEO terminal with the ◄/►/▼/▲ buttons will display the chosen programme or VIDEO terminal.

- For programme numbers (PR) for which the CHANNEL GUARD function is set, the 🔒 (CHANNEL GUARD) mark is displayed. For details see “CHANNEL GUARD” on page 31.
- The VIDEO terminals are registered after the programme number PR 99.
- For programme numbers (PR) which is registered as a favourite channel, the 📖 (favourite) mark is displayed. For details see “Favourite channel function” on page 18.

ZOOM function


You can change the screen size according to the picture aspect ratio. Choose the optimum one from the following ZOOM modes.

- The ZOOM mode is fixed at FULL when you are using the TV as a PC screen.


AUTO:
When a WSS (Wide Screen Signalling) signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the ZOOM mode to 16:9 ZOOM mode or FULL mode according to the WSS signal.
If a WSS signal is not included, the picture is displayed according to the ZOOM mode set with the 4:3 AUTO ASPECT function.

- For details of the 4:3 AUTO ASPECT function, see “4:3 AUTO ASPECT” on page 28.
- When the AUTO (WSS) mode does not function correctly due to poor WSS signal quality or when you want to change the ZOOM mode, press the **ZOOM** button and change to another ZOOM mode.

REGULAR:
Use to view a normal picture (4:3 aspect ratio) as this is its original shape.



PANORAMIC:
This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.




- The top and bottom of the picture are slightly cut off.


14:9 ZOOM:
This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.




16:9 ZOOM:
This zooms up the wide picture (16:9 aspect ratio) to the full screen.



16:9 ZOOM SUBTITLE:
This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.




FULL:
This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the FULL mode to restore the picture to its original shape.

■ Choose the ZOOM mode

1 Press the ZOOM button to display the ZOOM menu

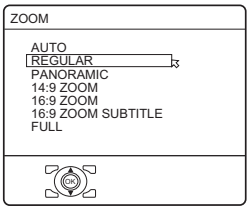

D0009-EN

2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed by the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.

■ Adjusting the visible area of the picture

If subtitles or the top (or bottom) of the picture are cut off, you can adjust the visible area of the picture manually.

1 Press the ZOOM button

The ZOOM menu appears.

2 Press the OK button to display the ZOOM mode indicator

The indicator appears.



D0010-EN

3 While it is displayed, press the ▼/▲ buttons to change the position of the picture

- You cannot adjust the visible area in REGULAR or FULL mode.

The visible area adjustment is saved even after the TV channel is changed.
However, it is cancelled if the following operations are performed.

- The power is turned off/on
- The ZOOM mode is changed
- The (Multi) button, (Freeze) button, or (Text) button is pressed
- The TV is switched between TV mode and VIDEO mode

CINEMA SURROUND function

You can enjoy sounds with a wider ambience.

- This function does not work for the sound from headphones.

Press the CINEMA button to select one of CINEMA SURROUND modes

HIGH/LOW:
When you listen to stereo sound, please select HIGH or LOW mode.
You can enjoy sound similar to the experience at the theatre.
When you combine the functions of A.H.B. and BBE, you can enjoy more powerful sound.

- When you set the CINEMA SURROUND function to HIGH mode, there may be slight volume distortion. If that occurs, please switch to LOW mode. The effect of CINEMA SURROUND functions will be less noticeable, but the volume distortion will be corrected.

MONO:
Select the MONO mode, when you listen to the mono sound.
You can enjoy the sound for a wider audience similar to stereo sound.

OFF:
The CINEMA SURROUND function switches off.

- You can choose the CINEMA SURROUND mode with the “SOUND menu” (see page 29).

Using the “Freeze” function


You can view the current programme as a still picture.

1 Set the PIP/TV/DVD switch to the PIP position

When using the “Freeze” function, set the PIP/TV/DVD switch to the PIP position.

2 Press the button

The still picture of the current picture will appear.



D0056

To cancel the "Freeze" function:
Press the button, the **CHANNEL** ∨/∧ buttons or the number buttons.

- The "Freeze" function does not work while a sub-picture is displayed.
- The still picture cannot be output from the TV.
- The "Freeze" function does not work for picture of PC signal.


Using the "Multi-picture" function

1 Set the PIP/TV/DVD switch to the PIP position

When using the "Multi-picture" function, set the PIP/TV/DVD switch to the PIP position.

2 Press the button

The "Multi-picture" menu appears.



D0101

3 Press the ◀/▶ buttons to choose the number of screens and then press the OK button



D0102

Choose to return to one screen.



D0103


Choose to change to 2-pictures multi.



D0104


Choose to change to 12-pictures multi.

2-pictures multi:




D0056

With 1125i and 750p signals, the screen is split into two as shown below.



D1056

12-pictures multi:

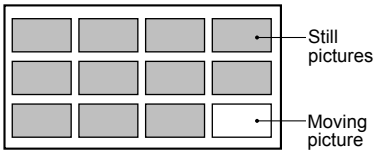

D0058

- When set to 2-pictures multi, you can view a TV picture and a picture from an external device. You cannot view a TV picture on more than one screen at the same time.
- When 12-pictures multi is set, pictures from external devices are not displayed.
- When set to 2-pictures multi, the main-picture can be changed by pressing the **CHANNEL** ∨/∧ buttons. The sub-picture screen can be changed by pressing the ▼/▲ buttons.
  When set to 12-pictures multi and there are more than 12 pictures, the next or previous 12 screens can be displayed by pressing the **CHANNEL** ∨/∧ buttons.
- When set to 2-pictures multi, the main-picture sound from the TV speaker can be changed to the sub-picture sound by pressing the ♪ button when the PIP/TV/DVD switch is set to the PIP position. (The speaker mark moves from the main-picture to the sub-picture.)
  The sound changes to the main-picture sound if the ♪ button is pressed again. When the headphones are connected, you can listen to the sound from the side at which the headphones mark is displayed. No sound comes from the TV speaker.
- The pictures from VIDEO-1 (or VIDEO-3) cannot be displayed in the sub-picture when the VIDEO-1 SETTING (or VIDEO-3 SETTING) is set to COMPONENT (see page 38).
- The "Multi-picture" function does not work for a PC signal.
- When set to 12-pictures multi, press the ◀/▶/▼/▲ buttons to choose the screen you want to view and the press the **OK** button to display that picture on the whole screen.

- The BLUE BACK function does not work when the “Multi-picture” function is being used.
- The ZOOM function does not work when the “Multi-picture” function is being used.

To return the “Multi-picture” to one screen:
Press the ⊞ button, press the ◄/► buttons to choose one screen, and then press the **OK** button.

- Pressing the **TV/VIDEO** button will also return the display to one screen.

RETURN PLUS function and Return function

The **RETURN+** button has two functions; the RETURN PLUS function and the Return function. If a channel has been registered as the “Return Channel”, the RETURN PLUS function operates. If there is no setting for the “Return Channel”, the Return function operates.

■ RETURN PLUS

By registering a channel you frequently view as the “Return Channel”, you can select that channel at any time simply by pressing the **RETURN+** button.

To register a TV channel as the “Return Channel”:
Choose the Programme number to which the channel you want to register has been set, and press the **RETURN+** button and hold for more than 3 seconds continuously. “RETURN PLUS PROGRAMMED!” is displayed and the registration is completed.

To cancel a TV channel registered as the “Return Channel”:
While viewing any TV channel, press the **RETURN+** button and hold for more than 3 seconds continuously. “RETURN PLUS CANCELED!” is displayed and the registration is cancelled.

- When you turn off the TV, the registration for the “Return Channel” is cancelled.
- If you want to view the “Return Channel” and another TV channel alternately, first choose a channel other than the “Return Channel”. And then press the **RETURN+** button to change the channel to the “Return Channel” In this way, you can view two channels alternately by pressing the **RETURN+** button.

■ Return function

The TV temporarily memorises the TV channel that was chosen right before the current TV channel as the “Last Channel”. By pressing the **RETURN+** button, you can alternately view the current TV channel and the “Last Channel”.
If you want to view two channels alternately by using the Return function, first choose one TV channel and then choose the other TV channel with the number buttons. If you choose the TV channel without using the number buttons, there are cases where a channel other than the one you first chose is registered as the “Last Channel”.

Favourite channel function

You can register your favourite TV channels (PR 1 – PR 99) in the number buttons 1 to 4. After registering, the channel can be called by pressing the 🕮 (favourite) button and a number button 1 to 4.

■ Favourite channel registration

1 In the normal screen, choose a TV channel (PR 1 – PR 99) that you want to register

For details, refer to "Choose a TV channel and watch images from external devices" on page 12.

2 Press and hold the 🕮 (favourite) button for three seconds or more

Then "SET 1-4?" appears on the screen.

3 Press one of the number buttons 1 to 4

The current channel is registered in the pressed number button.
After "PROGRAMMED!" appears on the screen, the favourite channel icon appears at the top-right of the screen.

- If the channel you are trying to register is already registered in one of the other number buttons 1 to 4, "NOT AVAILABLE" appears on the screen.
- Channels locked with the CHANNEL GUARD function cannot be registered.
- If AUTO PROGRAM is performed, the registered favourite channels are reset.

- When you want to delete a favourite channel, delete the set channel and set contents with FAVOURITE SETTING (see page 33) in the FEATURES menu.

■ Calling the favourite channel

1 In the normal screen, press the 🕮 (favourite) button

Then "FAVOURITE1-4?" appears.

2 Press one of the number buttons 1 to 4

The called favourite channel appears on the screen.

- If a number button in which no channel is registered is pressed, "NO MEMORY" appears on the screen.

■ Setting the picture effect

When a favourite channel has been chosen with the 🕮 (favourite) button and number buttons 1 to 4, picture effect settings can be memorised for each favourite channel by setting the picture effects in the PICTURE menu (see page 25).
The following items in the PICTURE menu (see page 25) are memorised.
PICTURE MODE
BACK LIGHT
CONTRAST
BRIGHT
SHARP
COLOUR
TINT
WHITE BALANCE
DIGITAL VNR
COLOUR SYSTEM
The last setting made for each item is memorised.

Operating a JVC brand DVD player

These buttons will operate a JVC brand DVD player. Pressing a button that looks the same as the device's original remote control button has the same effect as the original remote control.

1 Set the PIP/TV/DVD switch to the DVD position

When you are operating the DVD player, set the switch to the DVD position.


- You can turn the DVD player on or off with the ⏻/I (standby) button.
- You can also press the **MENU** or **TOP MENU** button and display the DVD disc menu screen, and then operate by pressing the ◄/►/▼/▲ buttons.

2 Press the DVD control button to control your DVD player

- If your DVD player is not made by JVC, these buttons will not work.
- Even if your device is made by JVC, some of these buttons may not work, depending on the device you are using.

You cannot turn the TV on or off when the PIP/TV/DVD switch is set to the DVD position.
When you turn the TV on or off, set the PIP/TV/DVD switch to the TV position.

Teletext function

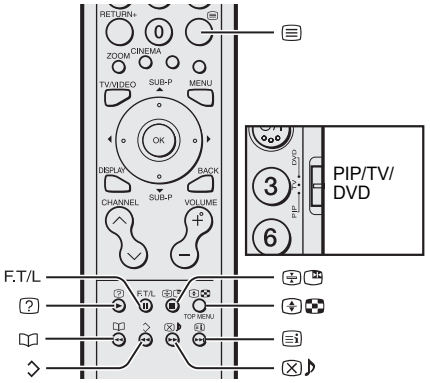

Basic operation


1 Choose a TV channel with a teletext broadcast

2 Set the PIP/TV/DVD switch to the TV position



3 Press (Text) button to display the teletext

Pressing (Text) button changes the mode as follows:

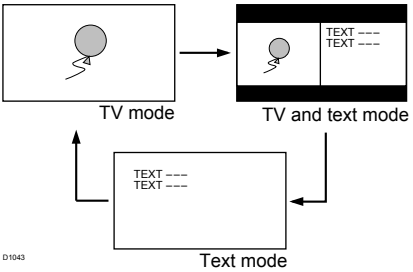

4 Choose a teletext page by pressing the CHANNEL ∨/∧ buttons, number buttons or colour buttons

To return to the TV mode:
Press the **TV/VIDEO** button, **BACK** button, or (Text) button.

- If you have trouble receiving teletext broadcasts, consult your local dealer or the teletext station.
- The ZOOM function will not work in the TV and text mode or Text mode.
- You cannot operate menus when viewing a teletext programme.
- If characters on a teletext programme do not appear properly, change the TELETEXT LANGUAGE setting. For details, see "TELETEXT LANGUAGE" on page 39.

Using the List Mode


You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

■ To store the page numbers:

1 Press *F.T/L* button to go into the List mode

The page numbers you have stored are displayed at the bottom of the screen.

2 Press a colour button to choose a position. Then press the number buttons to enter the page number

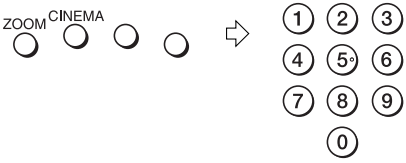

3 Press and hold down the ◇ (Store) button

The four page numbers blink white to show that they are stored in memory.

■ To call up a stored page:

1 Press the *F.T/L* button to enter the List mode

2 Press a colour button having a stored page




To exit the List mode:
Press the ***F.T/L*** button again.

Hold

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

Press the ⊡ (Hold) button



To cancel the Hold function:
Press ⊡ (Hold) button again.

Sub-page

Some teletext pages include sub-pages that are automatically displayed.

1 Choose a teletext page that includes sub-pages


Sub-page numbers that can be viewed are automatically displayed at the top of the screen.

2 Press the ◀/▶ buttons to choose a sub-page number

Reveal

Some teletext pages include hidden text (such as answers to a quiz).
You can display the hidden text.


Each time you press the ? (Reveal) button, text is hidden or revealed



Size

You can double the height of the teletext display.

Press the ⊕ (Size) button

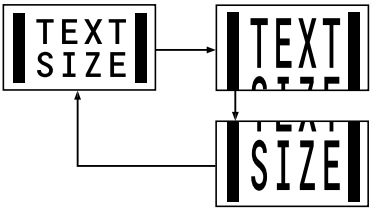

Index

You can return to the index page instantly.

Press the (Index) button

Returns to page 100 or a previously specified page.

Cancel

You can search for a teletext page while watching TV.

1 Press the number button to enter a page number, or press a colour button

The TV searches for a teletext page.

2 Press ⊠ (Cancel) button

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.


3 Press ⊠ (Cancel) button to return to a teletext page when the page number is on the screen

- The TV mode cannot be resumed by pressing the ⊠ (Cancel) button. To return to the TV mode press **TV/VIDEO** or **BACK** button.

Using the TV's menu

This TV has a number of functions you can operate using menus. To use all your TV's functions, you need to understand the basic menu operating techniques fully.

Buttons used to operate the menus

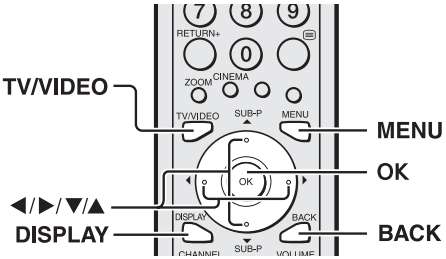

Basic operation

1 Press the **MENU** button to display the menu bar



D0105-EN

2 Press the ◀/▶ buttons to choose the menu you want to use and then press the **OK** button



D1105-EN

Chosen menu

Chosen menu name

3 Press the ▼/▲ buttons to choose the item to be set, press the ◀/▶ buttons to set the item, and then press the **OK** button

If there are sub-menus, use the ◀/▶/▼/▲ buttons to operate them.

- Press the **BACK** button to return to the previous menu.
- Press the **TV/VIDEO** or **MENU** button to exit from the menu.
- Some menu items may not be operated or set depending on the TV status or other menu item settings.
  Menu items that cannot be operated or set are displayed in grey in the menu and cannot be chosen.

Types of menu



D0106

PICTURE menu
Choose to set the screen settings.



D0107

SOUND menu
Choose to set the sound settings.



D0108

FEATURES menu
Choose to set the sleep timer and child lock settings.




D0109

SET UP menu
Choose to edit the channels or set the display language settings.


- The menu will disappear after about one minute if no operation is performed.

The menu guide area can be made to appear and disappear for some menus.
While the menu is displayed, press the **DISPLAY** button to change between the guide area being displayed and not displayed.

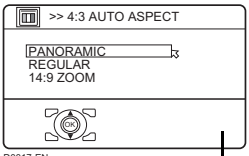

D0017-EN

Guide area




D1017-EN


- The guide area for some menus will still be displayed even if the **DISPLAY** button is pressed. This is not a fault.

Operation with the buttons on the TV

You can also operate the menus using the buttons on the front panel of the TV.

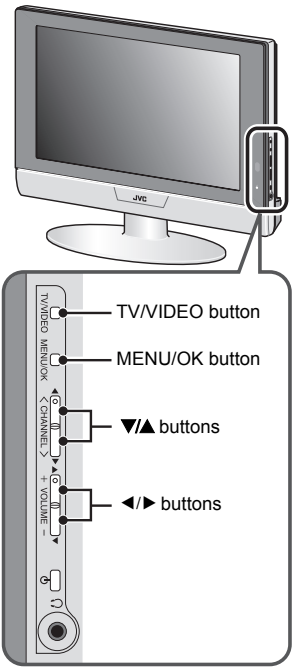

PICTURE menu

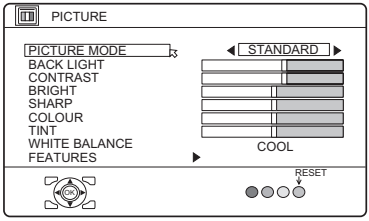

D0014-EN

- While the PICTURE menu is displayed, pressing the blue button will set the BACK LIGHT, CONTRAST, BRIGHT, SHARP, COLOUR, TINT settings to their default settings.
- When watching the picture from VIDEO-1 to VIDEO-3 or the PC, picture effect settings can be memorised for each external input by setting the picture effects in the PICTURE menu.
  The following items in the PICTURE menu are memorised.
  PICTURE MODE
  BACK LIGHT
  CONTRAST
  BRIGHT
  SHARP
  COLOUR
  TINT
  WHITE BALANCE
  DIGITAL VNR
  COLOUR SYSTEM
  The last setting made for each item is memorised.

PICTURE MODE

You can choose one of three PICTURE MODEs to adjust the picture settings automatically.

BRIGHT:
Heightens contrast and sharpness.

STANDARD:
Standardises picture adjustment.

SOFT:
Softens contrast and sharpness.

BACK LIGHT

You can adjust the back light.
◀ : darker
▶ : brighter

CONTRAST

You can adjust the picture contrast.
◀ : lower
▶ : higher

BRIGHT

You can adjust the picture brightness.
◀ : darker
▶ : brighter

SHARP

You can adjust the picture sharpness.
◀ : softer
▶ : sharper

COLOUR

You can adjust the picture colour.
◀ : lighter
▶ : deeper

TINT

You can adjust the picture tint.
◀ : reddish
▶ : greenish

- You can change the TINT setting (picture hue) when the colour system is NTSC 3.58, or NTSC 4.43.

WHITE BALANCE

You can select one of three WHITE BALANCE modes (three tones of white) to adjust the white balance of the picture. Since white is the colour which is used as a reference for all the other colours, changing the WHITE BALANCE mode affects the appearance of all the other colours on the screen.


COOL:
A bluish white. Using this mode when watching bright pictures allows you to enjoy a more vivid and bright picture.

MID:
The normal white colour.

WARM:
A reddish white. Using this mode when watching films allows you to enjoy colours that are characteristic of films.

FEATURES

Choose FEATURES and press the **OK** or ► button to display the sub-menu.

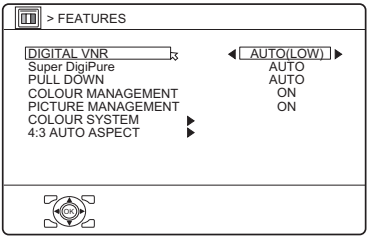

D1015-EN

■ DIGITAL VNR

The DIGITAL VNR function cuts down the amount of 'noise' ('snow' or interference) in the original picture.
You can choose from the three DIGITAL VNR function settings of AUTO, MIN and MAX.

AUTO(LOW)/AUTO(HIGH):
The TV will automatically adjust the level of the DIGITAL VNR effect to match the amount of noise in the picture, giving you the best possible picture.

- If you set the DIGITAL VNR effect too high it can make the picture less sharp. It is recommended you use the AUTO(LOW) setting if you can. If you set the DIGITAL VNR function to AUTO(LOW) but still notice some noise, change the setting from AUTO(LOW) to AUTO(HIGH).

MIN:
The level of the DIGITAL VNR effect is set to the minimum. If you set the DIGITAL VNR function to AUTO(LOW) but feel that the sharpness of the original picture has not been reproduced fully, change the setting from AUTO(LOW) to MIN.

- The MIN setting is not suitable for low-quality pictures which contain a lot of noise.

MAX:
The level of the DIGITAL VNR effect is set to the maximum. If you set the DIGITAL VNR function to AUTO(HIGH) but still notice some noise, change the setting from AUTO(HIGH) to MAX.

- The MAX setting is not suitable for high-quality pictures which contain very little noise.

■ Super DigiPure

The Super DigiPure function uses the latest in digital technology to give you a natural-looking picture. The Super DigiPure function includes the following two functions.

DigiPure function:
This function helps to create a natural-looking picture by eliminating unnecessary edges from high-contrast and crisp images. For images with low-contrast, edges are added to produce a sharper, more detailed picture.
You can choose from the three DigiPure function settings of AUTO, MIN and MAX.

- If you set the DigiPure effect too high on a low-quality picture that contains a lot of noise, this may actually make the noise worse. We recommend you use the AUTO setting if you can.

Picture motion compensation function:
This function displays fast-moving pictures (for example, the players or ball in a football game) more smoothly and naturally on the screen.

- The effect level of the picture motion compensation function cannot be changed. The effect level is the same no matter which of the AUTO, MIN or MAX settings is used.

AUTO:
The TV will automatically adjust the level of the DigiPure effect to match the amount of noise in the picture, giving the best possible picture.

MIN:
The level of DigiPure effect is set to the minimum. When you set the Super DigiPure function to AUTO and notice some noise, change the setting from AUTO to MIN.

- The MIN setting is not suitable for high-quality pictures which contain very little noise.

MAX:
The level of DigiPure effect is set to the maximum. If you set the Super DigiPure function to AUTO but feel that the original picture quality has not been reproduced fully, change the setting from AUTO to MAX.

- The MAX setting is not suitable for low-quality pictures which contain a lot of noise.

OFF:
The Super DigiPure function is turned off.

■ PULL DOWN

The PULL DOWN function displays a cinema film picture more smoothly and naturally on the screen.

AUTO:
The television automatically recognises the type of signal and turns the function on and off.

ON:
This function is turned on.

OFF:
This function is turned off.

■ COLOUR MANAGEMENT

This TV supports the COLOUR MANAGEMENT function to ensure dull colours are compensated to produce natural hues.
The COLOUR MANAGEMENT function is on by default.

ON:
COLOUR MANAGEMENT function is turned on.

OFF:
COLOUR MANAGEMENT function is turned off.

- Set this function to ON under normal conditions.

■ PICTURE MANAGEMENT

The PICTURE MANAGEMENT function makes it easier to see the dark areas when a picture has many dark areas, and makes it easier to see the bright areas when a picture has many bright areas.
Normally use with this function on.


ON:
PICTURE MANAGEMENT function is turned on.

OFF:
PICTURE MANAGEMENT function is turned off.

■ COLOUR SYSTEM

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

1 Choose COLOUR SYSTEM. Then press the OK or ▶ button
The sub-menu of the COLOUR SYSTEM function appears.

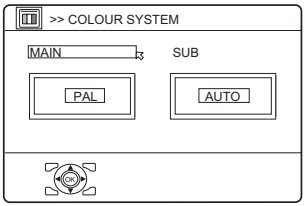

2 Press the ◀/▶ buttons to choose MAIN or SUB

MAIN:
You can change the colour system of the main-picture.

SUB:
You can change the colour system of the sub-picture.

- Choose MAIN when a sub-picture is not displayed.

3 Press the ▼/▲ buttons to choose the appropriate colour system. Then press the OK button

PAL:
PAL system

SECAM:
SECAM system

NTSC 3.58:
NTSC 3.58 MHz system

NTSC 4.43:
NTSC 4.43 MHz system

AUTO:
This function detects a colour system from the input signal.

- The AUTO function may not function properly if you have poor signal quality. If the picture is abnormal in the AUTO function, choose another colour system manually.
- COLOUR SYSTEM cannot be chosen when you are watching the PC picture.


For colour system in your country or region, refer to the table below:

Area	Country or Region	System
Asia, Middle East	Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, etc. Indonesia, Malaysia, Singapore, Thailand, India, etc.	PAL
	China, Vietnam, etc.	PAL
	Hong Kong, etc.	PAL
	Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	SECAM
	Philippines, Taiwan, Myanmar, etc.	NTSC
Europe	Russia, etc.	SECAM
	Czech Republic, Poland, etc.	PAL
	Germany, Holland, Belgium, etc.	PAL
	UK, etc.	PAL
Oceania	Australia, New Zealand, etc.	PAL
Africa	Republic of South Africa, etc.	PAL
	Nigeria, etc.	PAL
	Egypt, Morocco, etc.	SECAM

■ 4:3 AUTO ASPECT

You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).


1 Choose 4:3 AUTO ASPECT then press the OK button

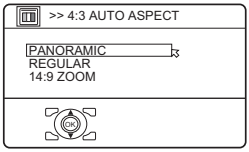

D0017-EN

2 Press the ▼/▲ buttons to choose a ZOOM mode

SOUND menu

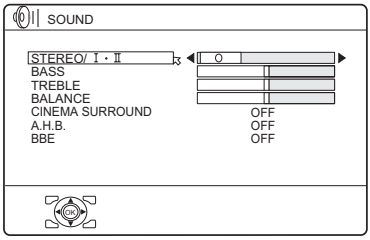

- When the headphones are connected, only "STEREO / I • II" can be used.

STEREO / I • II

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). If you have poor reception on a stereo broadcast, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

: Stereo sound

: mono sound

I : Bilingual I (sub I)

II : Bilingual II (sub II)

- The sound mode you can choose differs depending on the TV programme.
- This function does not work in the VIDEO modes.

BASS

You can adjust the low tone of the sound.
◄ : weaker
► : strong

TREBLE

You can adjust the high tone of the sound.
◄ : weaker
► : strong

BALANCE

You can adjust the volume balance between the left and right speaker.
◄ : turn the left speaker's volume level up.
► : turn the right speaker's volume level up.

CINEMA SURROUND

You can enjoy Surround sound with a "live" effect by using the CINEMA SURROUND function.

- You can choose a CINEMA SURROUND mode from HIGH, LOW, MONO and OFF modes. For details, see "CINEMA SURROUND function" on page 15.
- You can also operate the CINEMA SURROUND function with the **CINEMA** button. For details, see "CINEMA SURROUND function" on page 15.

A.H.B. (Active Hyper Bass)

Used when you want to emphasise the bass sound.

ON:
This function is turned on.

OFF:
This function is turned off.

BBE


BBE function restores clarity and presence for better speech intelligibility and musical realism.

ON:
This function is turned on.

OFF:
This function is turned off.

- Manufactured under license from BBE Sound, Inc. Licensed by BBE Sound, Inc. under USP4638258, 5510752 and 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

FEATURES menu

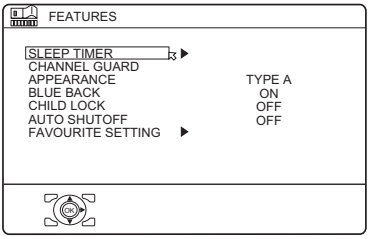


D0023-EN

SLEEP TIMER

You can set the TV to automatically turn off after a set period of time.

1 Choose SLEEP TIMER. Then press the OK or ▶ button

A Sub-menu of the SLEEP TIMER function appears.

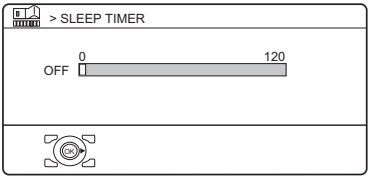

D0024-EN

2 Press the ◀/▶ buttons to set the period of time. Then press the OK button

You can set the period of time for up to 120 minutes (2 hours) in 10 minute steps.

- One minute before the SLEEP TIMER function turns off the TV, "GOOD NIGHT!" appears.
- The SLEEP TIMER function cannot be used to turn off the TV's main power.
- When the SLEEP TIMER function is on, you can display the sub-menu of the SLEEP TIMER function again to confirm or change the remaining period of time of the SLEEP TIMER function. Press the OK button to leave the menu after confirming or changing the remaining time.

To cancel the SLEEP TIMER function:

Press the ◀ button to set the period of time to "OFF".


CHANNEL GUARD

When there is a TV channel you do not want your children to watch, you can use the CHANNEL GUARD function to lock out the TV channel. Even when a child chooses a programme number (PR) for a locked TV channel the screen will change to blue and display 🔒 (CHANNEL GUARD) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel.

■ To set the CHANNEL GUARD function

1 Choose CHANNEL GUARD, then press the 0 button

"SET ID NO." (ID number setting screen) appears.

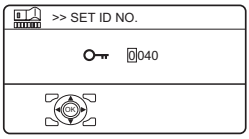

D0025-EN

2 Set the ID number to your liking


1 Press the ▼/▲ buttons to choose a number.

2 Press the ◀/▶ buttons to move the cursor.

ENGLISH

3 Press the OK button

The Sub-menu of CHANNEL GUARD appears.

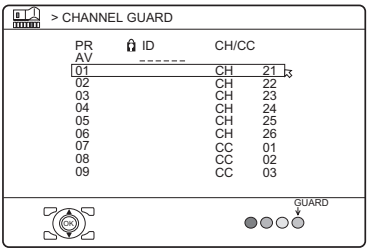

D1026-EN

4 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the Programme number (PR) changes, and the picture of the TV channel registered in the Programme number (PR) is displayed on the screen.

5 Press the blue button and set the CHANNEL GUARD function. Then press the OK button

(CHANNEL GUARD) appears and the TV channel is locked.

To reset the CHANNEL GUARD function:

Press the blue button again.
(CHANNEL GUARD) disappears.

To disable easy resetting of the CHANNEL GUARD function, the menu disappears if you choose the CHANNEL GUARD function and press the **OK** button.

■ To view a locked TV channel

1 Choose a programme number (PR) of a locked TV channel with the number buttons or PR LIST

The screen changes to blue and the (CHANNEL GUARD) appears. You cannot view the TV channel.



D0027

2 Press the DISPLAY button to display "ID NO." (ID No. input screen)



D0028-EN

3 Press the number buttons to enter the ID number

The lock is temporarily released so you can view the TV channel.

If you have forgotten the ID number:

Perform step 1 of "To set the CHANNEL GUARD function". After confirming the ID number, press the **TV/VIDEO** button to exit the menu.

- Even if you reset the lock temporarily, it does not mean that the CHANNEL GUARD function set for the TV channel is cancelled. The next time anyone tries to view the TV channel, it will be locked again.
- When you want to cancel the CHANNEL GUARD function, you must perform the operation "To set the CHANNEL GUARD function" again.
- To stop it being easy to choose the programme number (PR) of a locked TV channel, the programme number (PR) has been set so that it cannot be chosen with the ▼/▲ buttons or the buttons of the TV.
- To stop it being easy to reset the lock, "ID NO." (ID No. input screen) is set so that it cannot appear unless you press the **DISPLAY** button.

APPEARANCE

Press the ◀/▶ button and choose the format in which the channel number is displayed from the four types: TYPE A, TYPE B, TYPE C, and TYPE D.

- Set to TYPE D when shipped from factory. TYPE D sets all screens to semitransparent.
  The menu screens are not semitransparent when set to a type other than TYPE D.

BLUE BACK

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.

ON:
This function is turned on.

OFF:
This function is turned off.

CHILD LOCK

You can disable the front control buttons of the TV. When this function is set to ON, the TV can be operated only by using the remote control.
Use this function to prevent children from operating the TV at their own discretion (without parent consent).

ON:
This function is turned on.

OFF:
This function is turned off.
When you disconnect the AC plug, the CHILD LOCK will be cancelled.

AUTO SHUTOFF

You can set the power to turn off if no signal is received and no operation is performed for about 15 minutes or longer after the end of a broadcast.

ON:
This function is turned on.


OFF:
This function is turned off.

- The AUTO SHUTOFF function does not turn off the TV's main power.
- The AUTO SHUTOFF function does not work for the VIDEO mode or a picture from a PC signal.

FAVOURITE SETTING

Chose when deleting the favourite channels registered in the buttons 1 to 4.

1 Choose FAVOURITE SETTING, then press the OK or ▶ button
The FAVOURITE SETTING menu appears.

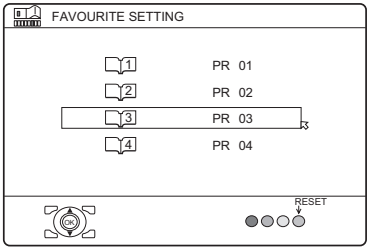


2 Press the ▼/▲ buttons and chose the favourite channel that you want to delete

3 Press the blue button
The chosen favourite channel and set contents are deleted.

- For details of the favourite channels, see "Favourite channel function" on page 18.

SET UP menu

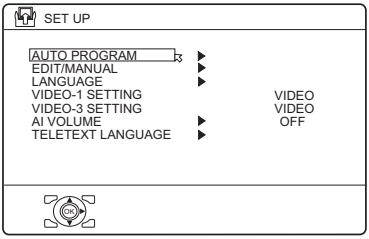


D0029-EN

AUTO PROGRAM

You can again perform the AUTO PROGRAM function TV channel automatic registration which was performed in the "Initial settings (Setup tour)" (page 8).

1 Choose AUTO PROGRAM, then press the OK or ▶ button


The AUTO PROGRAM function starts. The TV channels you receive are automatically stored in the programme numbers list.

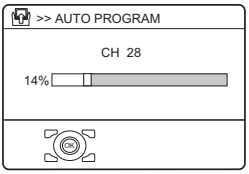

D0004-EN

- To stop the AUTO PROGRAM function, press the **OK** button.

2 After the TV channels have been stored in the programme number list, the EDIT menu appears

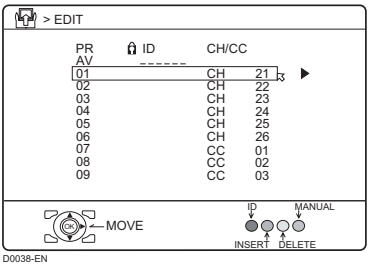

D0038-EN

- You can proceed to edit the programme numbers list using the EDIT/MANUAL function. For details, see "EDIT/MANUAL" on page 34.
- If a TV channel you want to view is not stored in the programme numbers list, you can register it using the MANUAL function.
  For details, see "EDIT/MANUAL" on page 34.
- The AUTO PROGRAM function does not store a TV channel to the programme number PR 0 (AV).
- If you do not need to use the EDIT/MANUAL function, press the **OK** button to exit the EDIT menu.
- Starting the AUTO PROGRAM deletes the registered favourite channel.

EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types:

- editing the current programme numbers (PR) (EDIT functions); and
- manually storing a TV channel you want to view on a particular programme number (PR) (MANUAL function).

Here are the details about these functions:

MOVE:
This function changes the programme number (PR) of a TV channel.

ID:
This function registers a channel name (ID) to a TV channel.

INSERT:
This function adds a new TV channel in the current programme numbers (PR) list by using the CH/CC number.

- You cannot use the INSERT function if you do not know the channel number of a TV channel. Use the MANUAL function to register a TV channel in the programme number (PR).

DELETE:
This function deletes a TV channel you do not want to list.

MANUAL:
This function manually stores a new TV channel in a programme number (PR).


Caution

- Using the MOVE, DELETE or INSERT functions rewrites the current programme numbers (PR) list. Therefore, the programme numbers (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHANNEL GUARD function has been set cancels the CHANNEL GUARD function for that channel.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes that TV channel.

■ Basic operation

1 Choose EDIT/MANUAL, then press the OK or ▶ button

The EDIT menu appears.

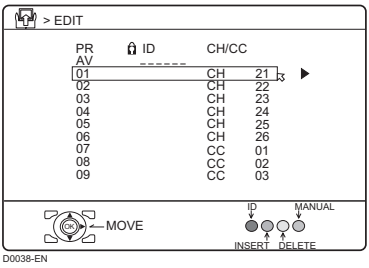

D0038-EN

2 Follow the description for the function you want to use


3 Press the OK button to complete the settings

- For programme number PR 0, “AV” appears in the programme numbers (PR) list.
- A VIDEO terminal number does not appear in the programme numbers (PR) list.
- The CH/CC number is a number unique to the TV and corresponds to the channel number of a TV channel. For the relationship between a channel number and a CH/CC number, see “CH/CC numbers” on page 44.

■ MOVE

1 Press the ▼/▲ buttons to choose a TV channel

2 Press the ▶ button to start the MOVE function

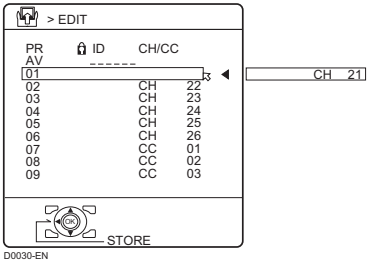

D0030-EN

3 Press the ▼/▲ buttons to choose a new programme number (PR)

To cancel the MOVE function:
Press the **BACK** button.

4 Press the ◀ button to change the programme number (PR) of a TV channel to a new programme number (PR)

■ DELETE

1 Press the ▼/▲ buttons to choose a TV channel

2 Press the yellow button to delete the TV channel


The TV channel is deleted from the programme numbers (PR) list.

■ ID

1 Press the ▼/▲ buttons to choose a TV channel

2 Press the red button to start the ID function

3 Enter a channel name (ID). Press the ▼/▲ buttons to choose a character. Press the ◀/▶ buttons to move the cursor

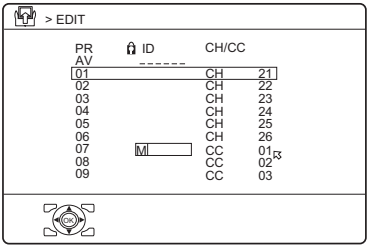

D0032-EN

To cancel the ID function:
Press the **BACK** button.

4 Press the OK button to give a channel name to a TV channel


Before performing INSERT operation

- A CH/CC number unique to this TV and corresponding to the Channel number of a TV channel is required. Find the corresponding CH/CC number from a table “CH/CC numbers” on page 44 based on the Channel number of the TV channel.

■ INSERT

1 Press the ▼/▲ buttons to choose a programme number (PR) for which you will register a new TV channel

2 Press the green button and start the INSERT function

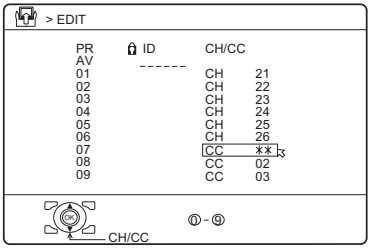

D0034-EN

3 Press the ▼/▲ buttons to choose “CC” or “CH” according to the CH/CC number of the TV channel

To cancel the INSERT function:
Press the **BACK** button.

4 Press the number buttons to enter the remaining CH/CC number

The TV shifts to registration mode. When the registration is completed, the picture of the TV channel appears on the screen.


- The CH/CC number is a number given to each broadcast frequency that carries a TV channel. If the TV cannot detect the TV channel corresponding to the broadcast frequency indicated by the CH/CC number, a “no-signal” picture appears.

■ MANUAL

1 Press the ▼/▲ buttons to choose a programme number (PR) for a new TV channel

2 Press the blue button to activate the MANUAL function

At the right side following the CH/CC number, the SYSTEM (sound system) of the TV channel appears.

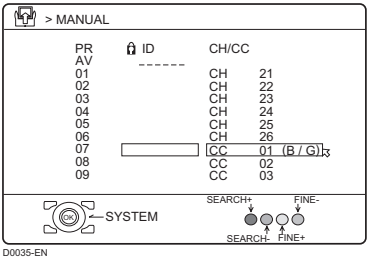

D0035-EN

To cancel the MANUAL function:
Press the **BACK** button.

3 Press the ▶ button to choose the SYSTEM (sound system) for a TV channel you want to register

- For the sound systems in each country or region, refer to the table below:

Area	Country or Region	System
Asia, Middle East	Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, etc. Indonesia, Malaysia, Singapore, Thailand, India, etc.	B/G
	China, Vietnam, etc.	D/K
	Hong Kong, etc.	I
	Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	B/G
	Philippines, Taiwan, Myanmar, etc.	M
Europe	Russia, etc.	D/K
	Czech Republic, Poland, etc.	D/K
	Germany, Holland, Belgium, etc.	B/G
	UK, etc.	I
Oceania	Australia, New Zealand, etc.	B/G
Africa	Republic of South Africa, etc.	I
	Nigeria, etc.	B/G
	Egypt, Morocco, etc.	B/G

4 Press the green or red button to search for a TV channel

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

5 Press the green or red button repeatedly until the TV channel you want appears

If the TV channel reception is poor:
Press the blue or yellow button to fine-tune the TV channel.

If you cannot hear the normal sound even when the picture of the TV channel appears normally:
The SYSTEM setting is wrong. Press the ▶ button and choose a SYSTEM that has normal sound.

6 Press the OK button and register the TV channel to a Programme number (PR)


The normal EDIT menu is resumed.

LANGUAGE

The LANGUAGE setting which was performed in the "Initial settings (Setup tour)" (page 8) can be changed.

1 Choose LANGUAGE, then press the OK or ▶ button

A sub-menu of the LANGUAGE function appears.

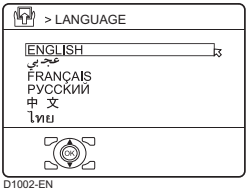

D1002-EN

2 Press the ▼/▲ buttons to choose a language. Then press the OK button

VIDEO-1 SETTING/VIDEO-3 SETTING

Set the VIDEO-1 SETTING or VIDEO-3 SETTING correctly according to the video signal input from the external device connected to the VIDEO-1 or VIDEO-3 terminal. If this setting is incorrect, images will not be displayed.

VIDEO:
If a normal video signal (composite video signal) is input.

COMPONENT:
If a Component video signal (Y, Cb/Pb, Cr/Pr signals) is input.

- For detailed connecting methods, see "Additional preparation" on page 41. This Television is compatible with the 1125i, 625p or 525p video signal only when the component video signal is input.
- When the input signal is 1125i, 625p or 525p, each signal type is displayed at the upper right side on the TV screen by setting the input to VIDEO-1 or VIDEO-3.

AI VOLUME

You can prevent the sudden increase or decrease of sound that occurs when changing the channel to another channel.

ON:
This function is turned on.


OFF:
This function is turned off.

- The AI VOLUME function may not operate as expected if the sound input level from a broadcast station is extremely low.
- This function does not work in the VIDEO mode.

TELETEXT LANGUAGE

There are four types of teletext language groups. Set the teletext language group that corresponds to the language of the teletext programme that you want to watch.

1 Choose TELETEXT LANGUAGE, then press the OK or ▶ button

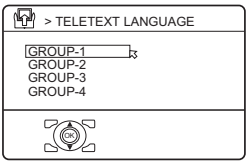

D1003-EN

2 Press the ▼/▲ buttons to choose a group

Group	Languages
GROUP-1	Turkish, Hungarian, English, German, French, Italian, Spanish, Portuguese, Greek, Swedish, Finnish
GROUP-2	Polish, Serbian, Croatian, Slovenian, Czech, Slovak, Rumanian, Hungarian, German, French, Italian, Swedish, Finnish
GROUP-3	Russian, Bulgarian, Lettish, Lithuanian, Estonian, Ukrainian, Serbian, Croatian, Slovenian, Czech, Slovak, English, German
GROUP-4	Arabic, Czech, Slovak. Hungarian, English, German, French, Italian, Spanish, Portuguese, Swedish, Finnish

3 Press the OK button to complete the setting

The menu disappears.


- Languages that are not included in the teletext language group that you select, the sub-titles of the teletext programme will not be displayed properly.

Displaying a computer screen

This TV can be used as a computer screen.

Connecting to the computer

Use a D-SUB cable to connect the TV's PC IN terminal to the computer's analogue RGB output terminal.
If you want to listen to the sound from the computer, use an audio cable to connect the VIDEO-3 AUDIO L/R sound input terminal to the computer's sound output terminal.
When the sound from the computer is mono, connect to the VIDEO-3 AUDIO L terminal.

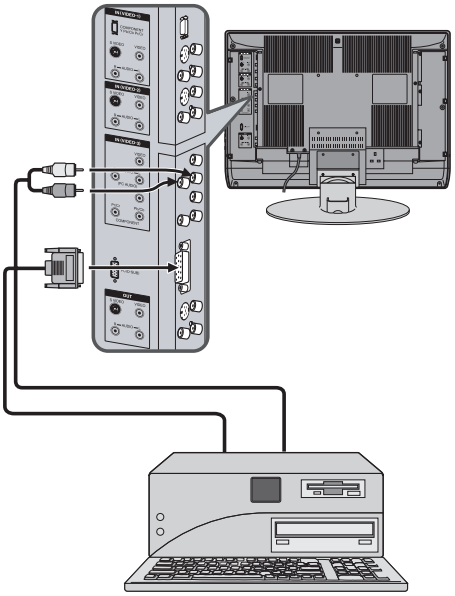

- Refer to the computer manual for a detailed explanation of the connections at the computer side.
- Ensure that the connectors are facing the correct way when connecting.
- After connecting the D-SUB cable, tighten the two screws to fix the connector in place.

Watching images from a computer

After starting the computer, press the TV/VIDEO or CHANNEL ∨/∧ buttons to choose "PC"

You can listen to the sound when the sound from the computer is connected to the VIDEO-3 AUDIO L/R sound input terminal.

- When the sound from the computer is connected to VIDEO-3, by choosing external input VIDEO-3 the sound from the computer can be listened to, but the images from the computer cannot be seen.

Table of signals for each type of computer

Resolution	Vertical frequency (Hz)	Horizontal frequency (kHz)
640 × 480 (VGA)	60.0	31.5
1024 × 768 (XGA)	60.0	42.0

* Only the above formats are supported.
* Even with the above formats and at 60 Hz, some problems may be experienced depending on the quality of the synchronous signal. (Depending on the quality, some pictures may not be displayed properly.)
* Apple Macintosh* computers are not supported.

When a picture is not displayed

Check the computer's refresh rate and set it to 60 Hz. Refer to the computer's instruction manual.
Computers which cannot have their refresh rate set to 60 Hz cannot be used with this unit.

* Apple Macintosh is a registered trademark of Apple Computer, Inc.

ENGLISH

Additional preparation

Connecting external equipment

Connect the equipment to the TV, making the correct rear panel and front panel connections.


Before connecting anything:

- Read the manuals that came with the equipment.
  Depending on the equipment, the connection method may be different from the diagram. Also, the equipment settings may need to change depending on the connection method.
- Turn off all the equipment including the TV.
- The "Specifications" on page 47 give the details of the VIDEO terminals. If you are connecting equipment not listed in the following connection diagram, see the table to choose the best VIDEO terminal.
- Connecting cables are not supplied.
- If the VCR's audio output is in mono, connect the VCR's AUDIO OUT (audio output) terminal and the TV's VIDEO-3 AUDIO L terminal with an audio cable.
- Use the supplied cable to connect the component device to the VIDEO-1 COMPONENT Y Pb/Cb Pr/Cr terminal.

■ Connecting the PC

For details, see "Connecting to the computer" on page 40.

① VCR (composite signal)
② VCR (S-VIDEO signal; Y/C)
③ VCR for recording (composite signal)
④ DVD player (composite signal)
⑤ DVD player (S-VIDEO signal; Y/C)
⑥ TV game (composite signal)
⑦ TV game (S-VIDEO signal; Y/C)
⑧ Headphones
⑨ Camcorder (composite signal/S-VIDEO signal; Y/C)
⑩ DVD player (component video signals; Y, Pb/Cb, Pr/Cr)
⑪ Video cable
⑫ Audio cable
⑬ S-VIDEO cable
⑭ Component cable

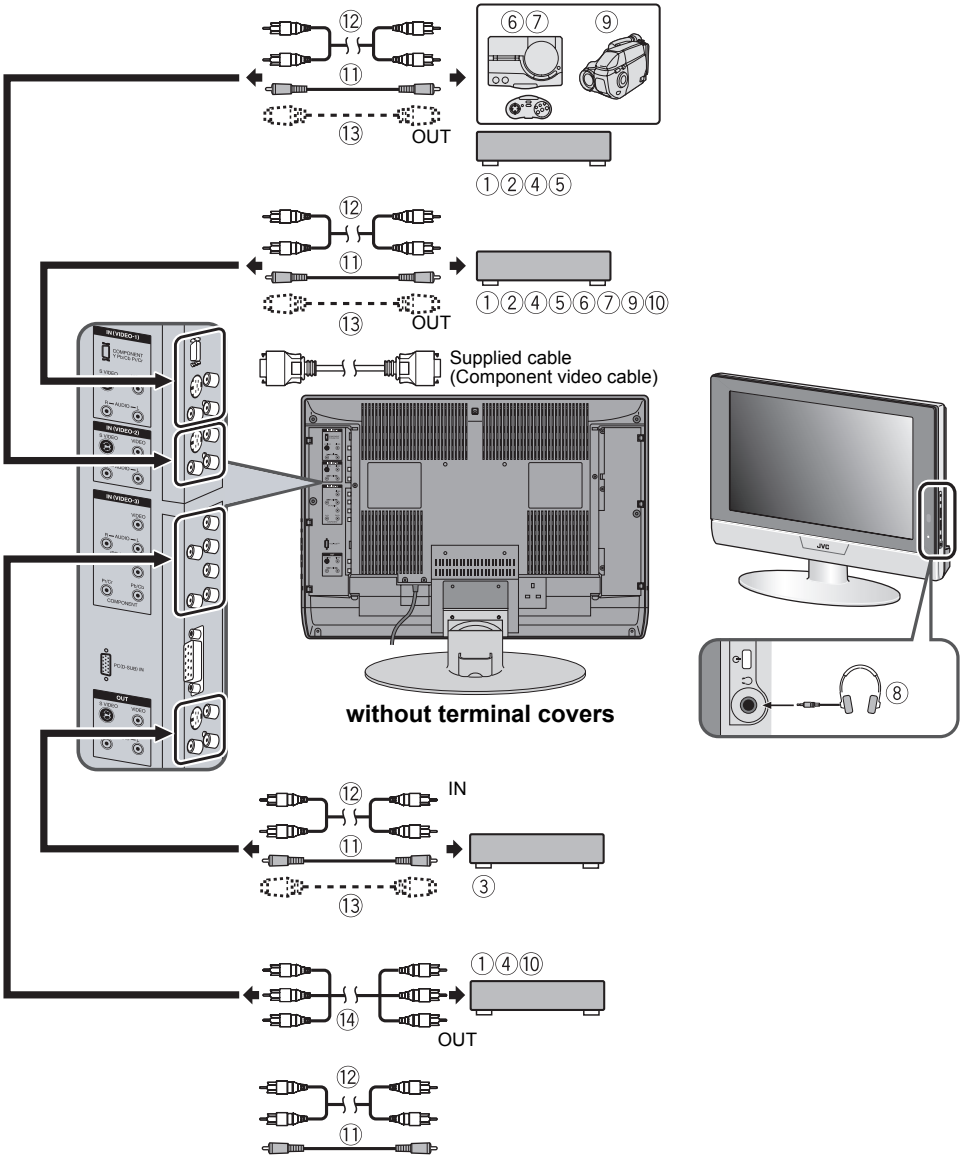
⑫
⑪
⑬
OUT
⑥⑦
⑨
①②④⑤
①②④⑤⑥⑦⑨⑩
Supplied cable
(Component video cable)
without terminal covers
⑧
IN
③
①④⑩
⑭

■ Connecting headphones

Connect the headphones with a stereo mini-jack (3.5 mm diameter) to the headphone jack.

- No sound comes from the TV speakers when the headphones are connected.

■ TV output from the OUT terminal

The video/sound signal of a TV channel you are viewing is always output from the OUT terminal.

- No signal will output through the S VIDEO terminal when you are not viewing images coming from the S VIDEO input. In this case, use the VIDEO terminal instead of the S VIDEO terminal.
- Changing over a programme number (PR) also changes over the TV output from the OUT terminal.
- When using the VIDEO-1 COMPONENT Y Pb/Cb Pr/Cr terminal input, VIDEO-3 COMPONENT input or PC IN input, the sound signal is output from the OUT terminal but the picture signal is not output.
- Teletext programmes cannot be output.


■ Connecting speakers/amplifier

While referring to the audio equipment connection diagram, connect the audio equipment you want to the TV.
You can use external front speakers to listen to the TV sound instead of the TV speakers.

Before connecting anything:

- Read the manuals provided with the amplifier and speakers.
- Turn the TV and amplifier off.
- To prevent magnetism from the speakers adversely effecting the TV screen, use magnetic-shielded speakers for the front speakers.
- Note that connecting cables are not supplied.

without terminal covers

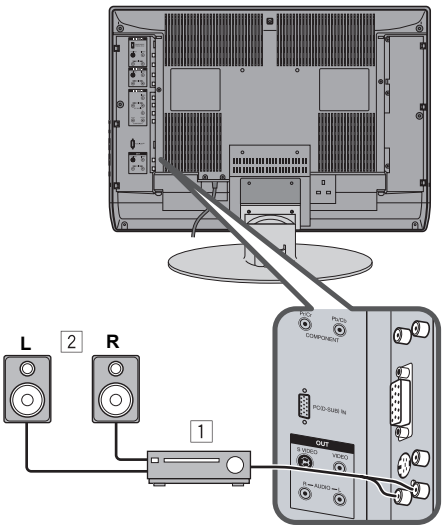

1 Amplifier
2 External speakers (Magnetic-shielded type)

- The output from the OUT terminal is not interrupted by headphone connection to the TV. You cannot cut the sound from the front speaker even if you connect a headphone to the TV.
- Adjust the volume of the external speakers with the amplifier.

CH/CC numbers

When you want to use the INSERT function on page 36, find the CH/CC number corresponding to the Channel number of the TV channel from this table.

US: The US channel numbers are the channel numbers used in the United States, Philippines, etc.

CCIR: The CCIR channel numbers are the channel numbers used in the Middle East, Southeast Asia, etc.

OIRT: The OIRT channel numbers are the channel numbers used in Eastern Europe, Russia, Vietnam, etc.

AUSTRALIA: The AUSTRALIA channel numbers are the channel numbers used in Australia, etc.

	Channel			
CH	US	CCIR	OIRT	AUSTRALIA
CH02	US-2	E2	R1	AU-0
CH03	US-3	E3		AU-1
CH04	US-4	E4	R2	AU-2
CH05	US-5	E5	R6	AU-6
CH06	US-6	E6	R7	AU-7
CH07	US-7	E7	R8	AU-8
CH08	US-8	E8	R9	AU-9
CH09	US-9	E9		
CH10	US-10	E10	R10	AU-10
CH11	US-11	E11	R11	AU-11
CH12	US-12	E12	R12	
CH13	US-13			
CH14	US-14, W+29			
CH15	US-15, W+30			
CH16	US-16, W+31			
CH17	US-17, W+32			
CH18	US-18, W+33			
CH19	US-19, W+34			
CH20	US-20, W+35			
CH21	US-21, W+36	E21		
CH22	US-22, W+37	E22		
CH23	US-23, W+38	E23		
CH24	US-24, W+39	E24		
CH25	US-25, W+40	E25		
CH26	US-26, W+41	E26		
CH27	US-27, W+42	E27		
CH28	US-28, W+43	E28		
CH29	US-29, W+44	E29		
CH30	US-30, W+45	E30		
CH31	US-31, W+46	E31		
CH32	US-32, W+47	E32		
CH33	US-33, W+48	E33		
CH34	US-34, W+49	E34		
CH35	US-35, W+50	E35		
CH36	US-36, W+51	E36		
CH37	US-37, W+52	E37		
CH38	US-38, W+53	E38		
CH39	US-39, W+54	E39		
CH40	US-40, W+55	E40		
CH41	US-41, W+56	E41		
CH42	US-42, W+57	E42		
CH43	US-43, W+58	E43		
CH44	US-44, W+59	E44		
CH45	US-45, W+60	E45		
CH46	US-46, W+61	E46		
CH47	US-47, W+62	E47		
CH48	US-48, W+63	E48		
CH49	US-49, W+64	E49		
CH50	US-50, W+65	E50		
CH51	US-51, W+66	E51		
CH52	US-52, W+67	E52		
CH53	US-53, W+68	E53		
CH54	US-54, W+69	E54		
CH55	US-55, W+70	E55		
CH56	US-56, W+71	E56		
CH57	US-57, W+72	E57		
CH58	US-58, W+73	E58		
CH59	US-59, W+74	E59		
CH60	US-60, W+75	E60		
CH61	US-61, W+76	E61		
CH62	US-62, W+77	E62		
CH63	US-63, W+78	E63		
CH64	US-64, W+79	E64		
CH65	US-65, W+80	E65		
CH66	US-66, W+81	E66		
CH67	US-67, W+82	E67		
CH68	US-68, W+83	E68		
CH69	US-69, W+84	E69		

	Channel			
CC	US	CCIR	OIRT	AUSTRALIA
CC01		S-1		AU-5
CC02		S-2		
CC03		S-3		
CC04		S-4		
CC05		S-5		
CC06		S-6		AU-5A
CC07		S-7		
CC08		S-8		
CC09		S-9		
CC10		S-10		
CC11		S-11		
CC12		S-12		
CC13		S-13		
CC14	A	S-14		
CC15	B	S-15		
CC16	C	S-16		
CC17	D	S-17		
CC18	E	S-18		
CC19	F	S-19		
CC20	G	S-20		
CC21	H	S-21		
CC22	I	S-22		
CC23	J	S-23		
CC24	K	S-24		
CC25	L	S-25		
CC26	M	S-26		
CC27	N	S-27		
CC28	O	S-28		
CC29	P	S-29		
CC30	Q	S-30		
CC31	R	S-31		
CC32	S	S-32		
CC33	T	S-33		
CC34	U	S-34		
CC35	V	S-35		
CC36	W	S-36		
CC37	W+1	S-37		
CC38	W+2	S-38		
CC39	W+3	S-39		
CC40	W+4	S-40		
CC41	W+5	S-41		
CC42	W+6			
CC43	W+7			
CC44	W+8			
CC45	W+9			
CC46	W+10			
CC47	W+11			
CC48	W+12			
CC49	W+13			
CC50	W+14			
CC51	W+15			
CC52	W+16			
CC53	W+17			
CC54	W+18			
CC55	W+19			
CC56	W+20			
CC57	W+21			
CC58	W+22			
CC59	W+23			
CC60	W+24			
CC61	W+25			
CC62	W+26			
CC63	W+27			
CC64	W+28			
CC75		X		
CC76		Y	R3	
CC77		Z	R4	AU-3
CC78		Z+1	R5	
CC79		Z+2		AU-4
CC95	A-5			
CC96	A-4			
CC97	A-3			
CC98	A-2			
CC99	A-1			

Troubleshooting

If a problem arises while you are using the TV, please read this troubleshooting guide carefully before you ask to have the TV repaired. You may be able to fix it easily by yourself. For example, if the mains plug is disconnected from the mains outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

Important:

- This troubleshooting guide only covers problems whose causes are not easy to decide. If you have a question when you are operating a function, read the page(s) for that function carefully, not this troubleshooting guide.
- If you follow the advice in this troubleshooting guide without any success, unplug the mains plug and ask for your TV to be repaired. Do not attempt to repair the TV by yourself or to remove the rear cover of the TV.

■ If you cannot turn on the TV

- Is the mains plug connected to the mains outlet?
- Make sure you set the PIP/TV/DVD switch to the TV position. You cannot turn the TV on when the PIP/TV/DVD switch is set to the DVD position.

■ If you cannot turn off the TV

- Make sure you set the PIP/TV/DVD switch to the TV position. You cannot turn the TV off when the PIP/TV/DVD switch is set to the DVD position.

■ No picture or no sound

- Have you chosen a TV channel with very poor reception? If so, the BLUE BACK function will be activated: the entire screen becomes blue, and the sound is muted. If you still want to view the TV channel, follow the description “BLUE BACK” on page 33 to change the BLUE BACK function setting to OFF.
- If the SYSTEM setting for a TV channel is incorrect, it may prevent the sound from being issued. Follow the description “EDIT/MANUAL” on page 34 to use the MANUAL function to try to change the SYSTEM setting.

■ Poor picture

- If noise (snow) totally blocks out the picture, there may be a problem with the aerial or aerial cable. Check the following to try to solve the problem:
  - Have the TV and aerial been connected properly?
  - Has the aerial cable been damaged?
  - Is the aerial pointing in the right direction?
  - Is the aerial itself faulty?
- If the TV or aerial suffers interference from other equipment, stripes or noise may appear in the picture. Move any equipment such as an amplifier, personal computer, or a hair drier, that can cause interference away from your TV. Or try moving the TV. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV suffers interference from signals reflecting from mountains or buildings, double-pictures (ghosting) will occur. Try to change the aerial’s direction or replace it with one with better directionality.
- Are your COLOUR SYSTEM settings correct? Follow the description “COLOUR SYSTEM” on page 27 to try to solve the trouble.
- Have the COLOUR and BRIGHT settings been adjusted properly? Follow the description “BRIGHT” and “COLOUR” on page 25 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.

- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal. There is nothing wrong with the TV.
- Since this TV is designed to make full use of the resolution of the original video source, the motion may appear unnatural when the video source is input with progressive-scanning component signals. If this occurs, change the output setting of the connected device to interlace-scanning component signal output. See the instructions that came with the device for more information.

■ Poor sound

- Have you adjusted BASS or TREBLE properly? If not, follow the description "BASS" or "TREBLE" on page 29.
- When TV channel reception is poor, it can be hard to hear stereo or bilingual sound. In this case, follow the description "STEREO / I • II" on page 29 to hear the sound more easily by changing it to a mono sound.

■ If the TV does not respond to the remote control

- Have the batteries of the remote control worn out? Follow the description "Putting the batteries into the remote control" on page 8 and replace them with new batteries.
- Have you attempted to use the remote control from the sides or rear of the TV or from more than seven metres away from the TV? Use the remote control in front of your TV or from less than seven metres away.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV/VIDEO** button to return to the ordinary TV programme, and then try operating the menus.
- If the TV suddenly stops responding, disconnect the power cord of the TV from the AC outlet. Connect them to the AC outlet again to turn on the TV. If the TV returns to a normal state, it is not a failure.

■ Other issues

- If the CHILD LOCK function set to ON, you cannot operate the TV with the front control buttons of the TV. Set the CHILD LOCK function to OFF.
- When the SLEEP TIMER function or AUTO SHUTOFF function operates, the TV is automatically turned off. If the TV suddenly turns off, try to press the ⏻/I (standby) button to turn on the TV once again. If the TV goes back to normal, there is no problem.
- When the TV is receiving a wide-screen signal (WSS) or a signal from an external device affecting the screen size, the ZOOM mode automatically changes. When you want to resume the previous ZOOM mode, press the **ZOOM** button again.
- It takes a short period of time from the time an operation such as changing channels is performed until an image is displayed. This is not a fault. This is the time needed for the image to stabilise before it can be displayed.
- The TV may make a crackling sound due to a sudden change in temperature. The picture or sound may be normal. If you hear crackling sounds frequently while you are viewing the TV, there may be other causes. As a precaution, ask your service technician to inspect it.
- The top of the TV and the screen may become hot during use but this has no affect on the performance of the TV. Make sure that the ventilation holes are not blocked.
- When the picture is unstable, the screen may become white for a moment. This happens when the signal which drives the liquid crystal is missing. This is not a fault.
- When a still image has been displayed for a long period, a faint residual image may remain on the screen for a short time after the power has been turned off or when another image is displayed. This is not a fault and the image will eventually disappear.

Specifications

Model	LT-Z32SX4B/LT-Z32SX4S
Broadcasting systems	B, G, I, D, K, K1, M
Colour systems	PAL, SECAM, NTSC 3.58/4.43 MHz
Channels and frequencies	VHF low channel (VL) = 46.25 to 168.25 MHz VHF high channel (VH) = 175.25 to 463.25 MHz UHF channel (U) = 471.25 to 863.25 MHz • Receives cable channels in mid band (X to Z+2, S1 to S10), super band (S11 to S20) and hyper band (S21 to S41).
Sound-multiplex systems	NICAM (B/G, I, D/K) system, A2 (B/G, D/K) system
Languages displayed by teletext	Please see the table in the description “TELETEXT LANGUAGE” on page 39.
Teletext systems	FLOF (Fastext), TOP, WST (World Standard System)
Power requirements	110 - 240 V AC, 50/60 Hz
Power consumption	161 W (Standby: 2.8 W)
Screen size	Viewable area 80 cm (measured diagonally)
Audio output	Rated Power output: 10 W + 10 W
Speakers	6.6 cm round × 4
VIDEO-1 terminal (COMPONENT)	RCA connector × 3, S VIDEO connector × 1, Component connector × 1 • Video input, S VIDEO (Y/C) input, Component video (Y, Cb/Pb, Cr/Pr) input and Audio L/R inputs are available. • 625p, 525p and 1125i signals are available.
VIDEO-2 terminal	RCA connector × 3, S VIDEO connector × 1 • Video input, S VIDEO (Y/C) input and Audio L/R inputs are available.
VIDEO-3 terminal (COMPONENT)	RCA connector × 3 • Video input, Component video (Y, Cb/Pb, Cr/Pr) input and Audio L/R inputs are available. • 625p, 525p and 1125i signals are available.
OUT terminal	RCA connectors × 3, S VIDEO connector × 1 • Video output, S VIDEO (Y/C) output and Audio L/R outputs are available. • Output level 0.5 Vrms.
PC IN terminal	Analogue RGB D-SUB (15 pin) × 1 • PC signal is available. Refer to page 40 for details of the signals which can be input.
Headphone jack	Stereo mini-jack (3.5 mm in diameter)
Dimensions (W × H × D)	834 mm × 632 mm × 300 mm 834 mm × 568 mm × 108 mm (without stand)
Weight	20.6 kg 17.3 kg (without stand)
Accessories	Remote control unit × 1 (RM-C1830) AA/R6 dry cell battery × 2 Component video cable × 1

We may change the design and specifications without notice.

Pictures displayed on the screen using this TV’s ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this would be an infringement of copyright.

Model	LT-Z26SX4B/LT-Z26SX4S
Broadcasting systems	B, G, I, D, K, K1, M
Colour systems	PAL, SECAM, NTSC 3.58/4.43 MHz
Channels and frequencies	VHF low channel (VL) = 46.25 to 168.25 MHz VHF high channel (VH) = 175.25 to 463.25 MHz UHF channel (U) = 471.25 to 863.25 MHz • Receives cable channels in mid band (X to Z+2, S1 to S10), super band (S11 to S20) and hyper band (S21 to S41).
Sound-multiplex systems	NICAM (B/G, I, D/K) system, A2 (B/G, D/K) system
Languages displayed by teletext	Please see the table in the description “TELETEXT LANGUAGE” on page 39.
Teletext systems	FLOF (Fastext), TOP, WST (World Standard System)
Power requirements	110 - 240 V AC, 50/60 Hz
Power consumption	125 W (Standby: 2.8 W)
Screen size	Viewable area 64.8 cm (measured diagonally)
Audio output	Rated Power output: 10 W + 10 W
Speakers	6.6 cm round × 4
VIDEO-1 terminal (COMPONENT)	RCA connector × 3, S VIDEO connector × 1, Component connector × 1 • Video input, S VIDEO (Y/C) input, Component video (Y, Cb/Pb, Cr/Pr) input and Audio L/R inputs are available. • 625p, 525p and 1125i signals are available.
VIDEO-2 terminal	RCA connector × 3, S VIDEO connector × 1 • Video input, S VIDEO (Y/C) input and Audio L/R inputs are available.
VIDEO-3 terminal (COMPONENT)	RCA connector × 3 • Video input, Component video (Y, Cb/Pb, Cr/Pr) input and Audio L/R inputs are available. • 625p, 525p and 1125i signals are available.
OUT terminal	RCA connectors × 3, S VIDEO connector × 1 • Video output, S VIDEO (Y/C) output and Audio L/R outputs are available. • Output level 0.5 Vrms.
PC IN terminal	Analogue RGB D-SUB (15 pin) × 1 • PC signal is available. Refer to page 40 for details of the signals which can be input.
Headphone jack	Stereo mini-jack (3.5 mm in diameter)
Dimensions (W × H × D)	703 mm × 555 mm × 300 mm 703 mm × 491 mm × 107 mm (without stand)
Weight	16.1 kg 12.8 kg (without stand)
Accessories	Remote control unit × 1 (RM-C1830) AA/R6 dry cell battery × 2 Component video cable × 1

We may change the design and specifications without notice.

Pictures displayed on the screen using this TV’s ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this would be an infringement of copyright.

JVC

© 2004 Victor Company of Japan, Limited

0904MKH-CR-MT

JVC

SERVICE MANUAL

WIDE LCD PANEL TELEVISION

LT-Z26SX4B/C


BASIC CHASSIS
FL

Supplementary

The following items for the LT-Z26SX4B/C was changed partly from LT-Z26SX4B.
Therefore, this service manual describes only the items which differ from those of the LT-Z26SX4B service manual.
For details other than those described in this manual, please refer to the LT-Z26SX4B service manual (No.YA208, 2004/12).

HOW TO IDENTIFY MODELS

"LTZ26SX4BCPB" is added to the serial No. after at the Rating label.

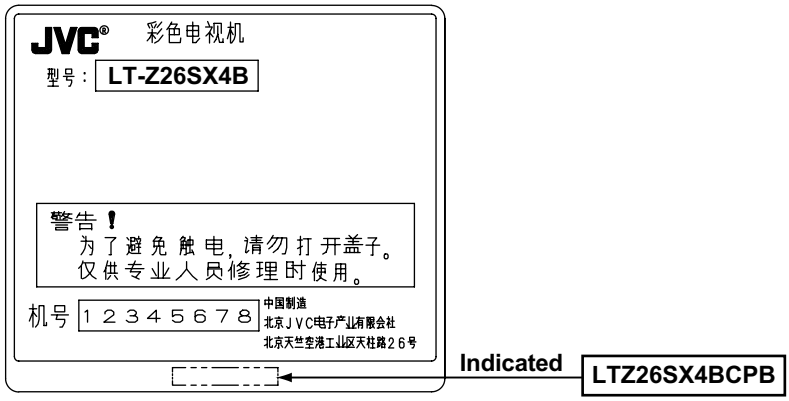

COPYRIGHT © 2005 Victor Company of Japan, Limited

DIFFERENCE LIST

USING P.W. BOARD (Page 3-2)

P.W.B ASS'Y Name	LT-Z26SX4B	LT-Z26SX4B/C	DESCRIPTION
ANALOG SIGNAL P.W.B	SFL-1032A-H2	LCA90350-18B (SFL-1032A)	Compatible
CONNECTOR P.W.B	SFL-4031A-H2	LCA90353-14A (SFL-4031A)	Compatible
FRONT CONTROL P.W.B	SFL-7031A-H2	LCA90351-18B (SFL-7031A)	Compatible
FRONT SENSOR P.W.B	SFL-8031A-H2	LCA90352-18A (SFL-8031A)	Compatible
POWER P.W.B	SFL-9013A-H2	LCA90348-09D (SFL-9013A)	Compatible
REGULATOR P.W.B	SFL-9113A-H2	LCA90349-09B (SFL-9113A)	Compatible
DIGITAL SIGNAL P.W.B	SFL-0D301A-H2	LCA10428-66A (SFL-0D304A)	Non compatible
RECEIVER P.W.B	SFL-0F301A-H2	LCA10476-52A (SFL-0F302A)	Non compatible

EXPLODED VIEW PARTS LIST (Page 3-3)

⚠	Ref. No.	Part No.		PART NAME	DESCRIPTION
		LT-Z26SX4B	LT-Z26SX4B/C		
	101	LC11981-002A-H	LC11981-002A-HK	JACK COVER	
⚠	102	LC21503-004A-H	LC21618-001B-0L	RATING LABEL	
⚠	106	LC41999-004A-H	LC41999-002A	CAUTION LABEL	
⚠	111	LC11972-003B-H	LC11972-003B-HK	REAE COVER	
⚠	116	LC32760-001A-H	LC32760-001A-HK	SERVICE COVER	
⚠	118	QMPK300-170-JC	QMPR640-170-JC	POWER CORD	1.7m BLACK
⚠	119	LC21348-001D-H	LC21348-001D-HK	POWER CORD HOLDER	
⚠	121	LC21596-001B-H	LC21596-001B-HK	TERMINAL BASE	
⚠	125	LC32841-004A-H	LC32841-004A-HK	CONTROL KNOB ASSY	
⚠	131	LC21597-003B-H	LC21597-003B-HK	TUNER BASE	
	137	LC21339-001A-H	LC21339-001B-HK	DUCT BASE	
	138	LC21340-001B-H	LC21340-001C-HK	DUCT COVER	
	140	LC32747-001C-H	LC32747-001C-HK	SENSOR WINDOW	
	141	LC41901-001C-H	LC41901-001C-HK	LED LENS	

PRINTED WIRING BOARD PARTS LIST

POWER P.W. BOARD ASS'Y (Page 3-10)

⚠	Ref. No.	Part No.		PART NAME	DESCRIPTION
		LT-Z26SX4B	LT-Z26SX4B/C		
		SFL-9013A-H2	LCA90348-09D (SFL-9013A)		
	D9510	RD27E/B2/-T5	---	Z DIODE	Delete
	D9511	RD27E/B2/-T5	---	Z DIODE	Delete
	D9514	---	PTZ27B-X	Z DIODE	Addition
	D9515	---	PTZ27B-X	Z DIODE	Addition
	D9907	RD16E/B/-T5	MTZJ16B-T2	Z DIODE	
	D9908	RD16E/B/-T5	MTZJ16B-T2	Z DIODE	
	C9910	QECR1VM-227Z	QECR1EM-476Z	E CAPACITOR	47uF 25V M
	R9631	NRSA63J-332X	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J

DIGITAL SIGNAL P.W. BOARD ASS'Y (Page 3-12)

⚠	Ref. No.	Part No.		PART NAME	DESCRIPTION
		LT-Z26SX4B	LT-Z26SX4B/C		
		SFL-0D301A-H2	LCA10428-66A (SFL-0D304A)		
	IC3403	S-80928CLNB-W	S-80928CLNB-G-W	IC	
	C7542	NEH70GM-227X	NEHL0GM-227X	E CAPACITOR	220uF 4V M
	C7548	NEH70GM-227X	NEHL0GM-227X	E CAPACITOR	220uF 4V M

RECEIVER P.W. BOARD ASS'Y (Page 3-18)


⚠	Ref. No.	Part No.		PART NAME	DESCRIPTION
		LT-Z26SX4B	LT-Z26SX4B/C		
		SFL-0F301A-H2	LCA10476-52A (SFL-0F302A)		
	TU3001	QAU0390-001	QAU0390-002	TUNER	

PACKING PARTS LIST (Page 3-33)

NOTE: As packing method has been changed, all the parts are listed in the PACKING PARTS LIST.

⚠	Ref. No.	Part No.	PART NAME	DESCRIPTION
	1	LC10006-050A	PACKING CASE	
	2	LC21688-003A	CUSHION SPACE	
	3	LC11983-001B	CUSHION ASSY	4pcs in 1set
	4	QPA01002305	POLY BAG	10cm x 23cm
	5	LCT1630-002A-C	CAUTION SHEET	
	6	GG30097-003A-H	POLY BAG	
	7	RM-C1830-1C	REMOCON UNIT	
	8	QAM0690-001	D CABLE	1.5m
	9	QPA02503505P	POLY BAG	25cm x 35cm
	10	BT-59021-3	SVC CENTER LIST	
⚠	11	LCT1735-001A-C	INST BOOK	
	12	----------	WARRANTY CARD	BT-59025-1C
	13	BT-59020-1	SEAL	
	14	----------	BATTERY	AA/R6(x2)
	15	GG20025-001A-H	CORNER LABEL	2pcs in 1set
	16	LC10006-049A	PACKING CASE	
	17	CP30177-001	CORNER PIECE	(x8)

PACKING (Page 3-34)

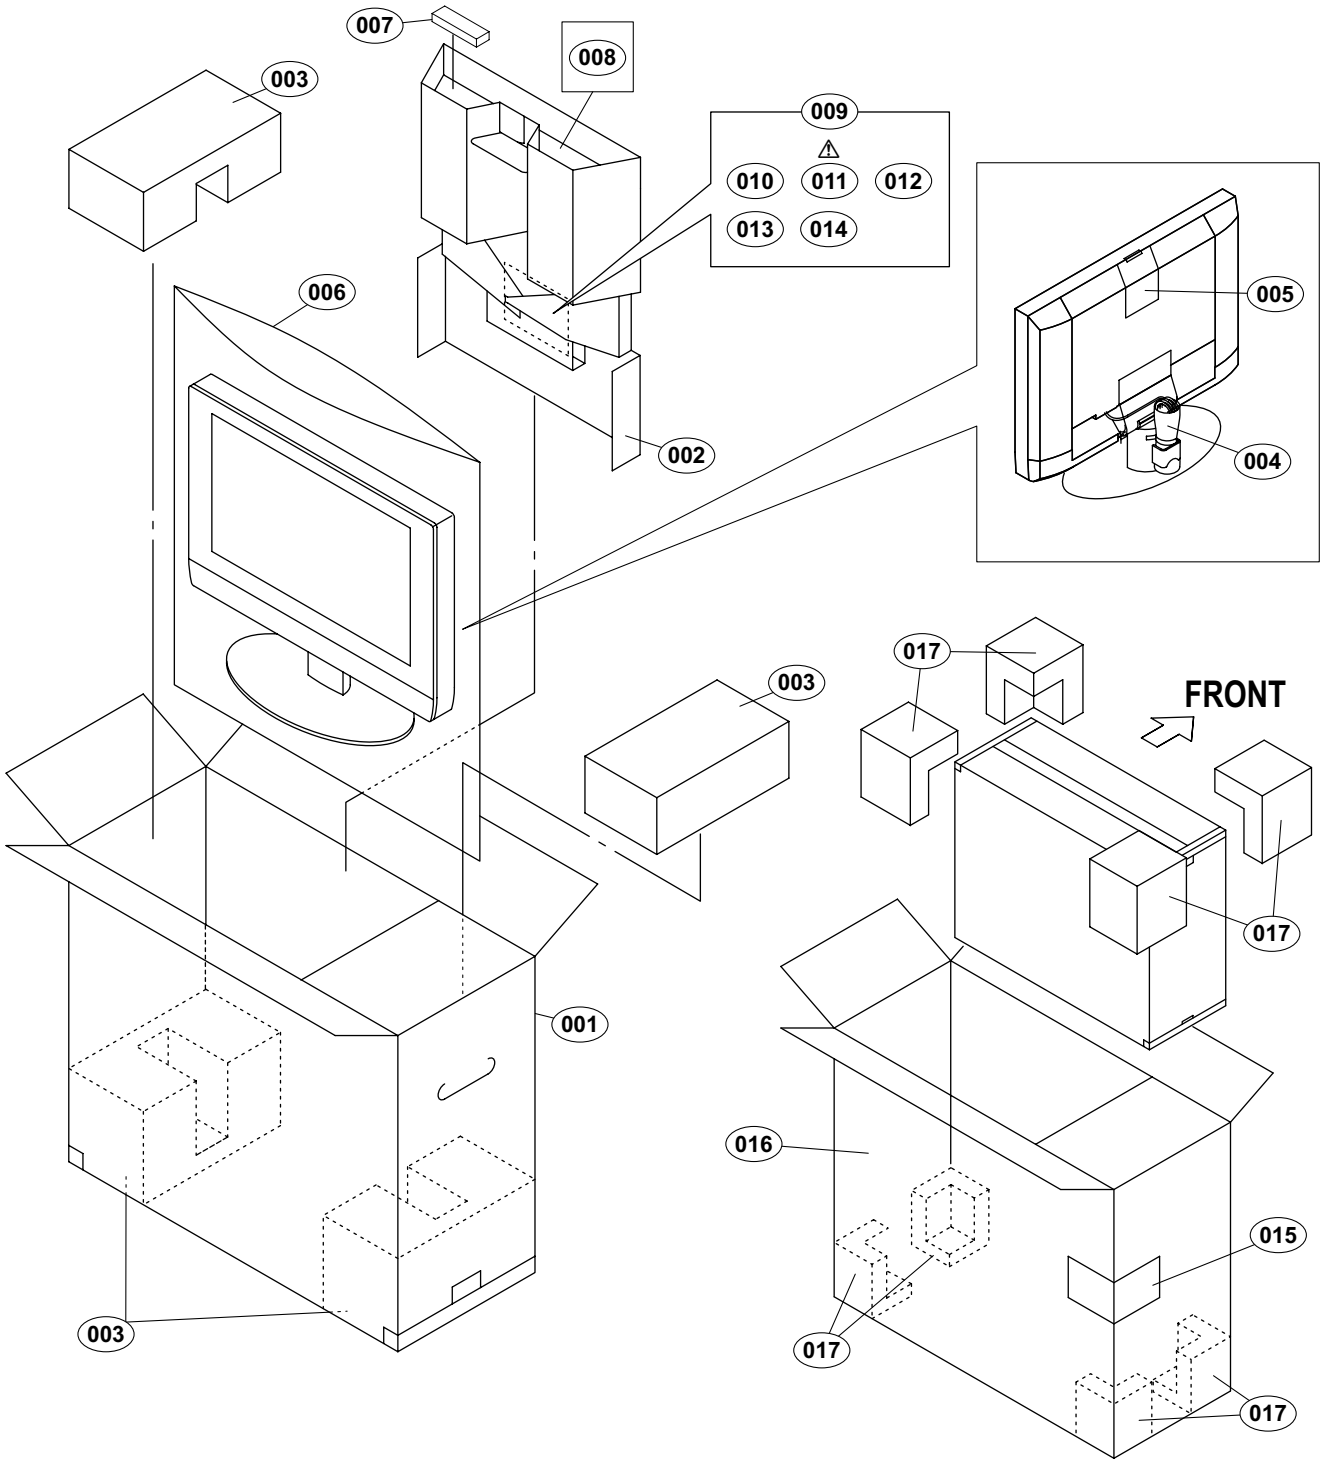

SECTION 1
PRECAUTION

Please refer to "LT-Z26SX4B (No.YA208)" about this section.

SECTION 2
SPECIFIC SERVICE INSTRUCTIONS

Please refer to "LT-Z26SX4B (No.YA208)" about this section.

SECTION 3
DISASSEMBLY

Please refer to "LT-Z26SX4B (No.YA208)" about this section.

SECTION 4
ADJUSTMENT

Please refer to "LT-Z26SX4B (No.YA208)" about this section.

SECTION 5
TROUBLESHOOTING

Please refer to "LT-Z26SX4B (No.YA208)" about this section.

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY VIDEO DISPLAY CATEGORY 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.YA208B)

Printed in Japan
VPT

JVC

SCHEMATIC DIAGRAMS

WIDE LCD PANEL TELEVISION

LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S, LT-Z26SX4S/S


CD-ROM No.SML200412

BASIC CHASSIS
FL

D.I.S.T. Digital Image Scaling Technology

CINEMA SURROUND

BBE

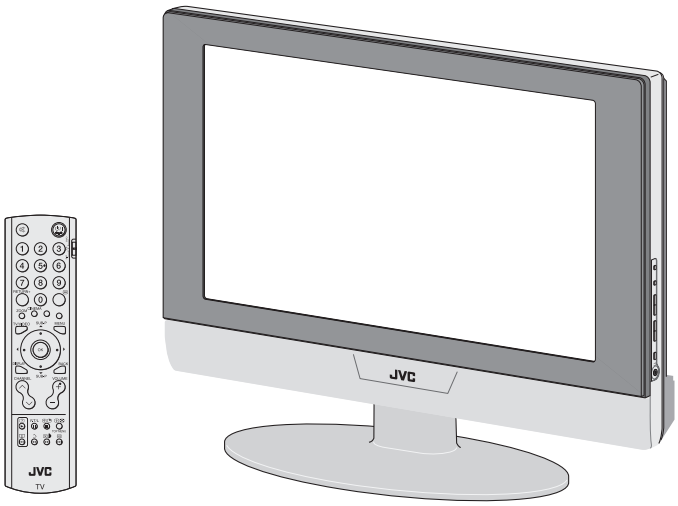

COPYRIGHT © 2004 Victor Company of Japan, Limited

No.YA208
2004/12

LT-Z26SX4B, LT-Z26SX4B/A, LT-Z26SX4B/S, LT-Z26SX4S/S

STANDARD CIRCUIT DIAGRAM

■ NOTE ON USING CIRCUIT DIAGRAMS

1.SAFETY

The components identified by the ⚠ symbol and shading are critical for safety. For continued safety replace safety ciritical components only with manufactures recommended parts.

2.SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

(1)Input signal	: Colour bar signal
(2)Setting positions of each knob/button and variable resistor	: Original setting position when shipped
(3)Internal resistance of tester	: DC 20kΩ/V
(4)Oscilloscope sweeping time	: H ⇒ 20μs / div
	: V ⇒ 5ms / div
	: Othters ⇒ Sweeping time is specified
(5)Voltage values	: All DC voltage values

∗ Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3.INDICATION OF PARTS SYMBOL [EXAMPLE]

● In the PW board : R209 → R209

4.INDICATIONS ON THE CIRCUIT DIAGRAM

(1)Resistors

● Resistance value

No unit	: [Ω]
K	: [kΩ]
M	: [MΩ]

● Rated allowable power

No indication	: 1/16 [W]
Others	: As specified

● Type

No indication	: Carbon resistor
OMR	: Oxide metal film resistor
MFR	: Metal film resistor
MPR	: Metal plate resistor
UNFR	: Uninflammable resistor
FR	: Fusible resistor

∗ Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2)Capacitors

● Capacitance value

1 or higher	: [pF]
less than 1	: [μF]

● Withstand voltage

No indication	: DC50[V]
Others	: DC withstand voltage [V]
AC indicated	: AC withstand voltage [V]

∗ Electrolytic Capacitors
47/50[Example]: Capacitance value [μF]/withstand voltage[V]

● Type

No indication	: Ceramic capacitor
MM	: Metalized mylar capacitor
PP	: Polypropylene capacitor
MPP	: Metalized polypropylene capacitor
MF	: Metalized film capacitor
TF	: Thin film capacitor
BP	: Bipolar electrolytic capacitor
TAN	: Tantalum capacitor

(3)Coils

No unit	: [μH]
Others	: As specified

(4)Power Supply




∗ Respective voltage values are indicated

(5)Test point



(6)Connecting method



(7)Ground symbol

⊥ : LIVE side ground
⏚ : ISOLATED(NEUTRAL) side ground
⏚ : EARTH ground
▽ : DIGITAL ground

5.NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND and the ISOLATED(NEUTRAL) : (⏚) side GND. Therefore, care must be taken for the following points.

(1)Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. if the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.

(2)Do not short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected, a fuse or any parts will be broken.

◆ **Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.**

NOTE

◆ **Due improvement in performance, some part numbers show in the circuit diagram may not agree with those indicated in the part list.**
When ordering parts, please use the numbers that appear in the Parts List.

CONTENTS

SEMICONDUCTOR SHAPES 2-2
WIRING DIAGRAM 2-3
BLOCK DIAGRAM 2-5
CIRCUIT DIAGRAMS 2-7
- RECEIVER PWB CIRCUIT DIAGRAM 2-7
- ANALOG SIGNAL PWB CIRCUIT DIAGRAM 2-9
- DIGITAL SIGNAL PWB CIRCUIT DIAGRAM 2-19
- CONNECTOR PWB CIRCUIT DIAGRAM 2-41
- FRONT CONTROL PWB CIRCUIT DIAGRAM 2-43
- FRONT SENSOR PWB CIRCUIT DIAGRAM 2-45
- REGULATOR PWB CIRCUIT DIAGRAM 2-47
- POWER PWB CIRCUIT DIAGRAM 2-49

PATTERN DIAGRAMS 2-53
- RECEIVER PWB PATTERN 2-53
- ANALOG SIGNAL PWB PATTERN 2-55
- DIGITAL SIGNAL PWB PATTERN 2-59
- CONNECTOR PWB PATTERN 2-63
- FRONT CONTROL PWB PATTERN 2-65
- FRONT SENSOR PWB PATTERN 2-65
- REGULATOR PWB PATTERN 2-67
- POWER PWB PATTERN 2-69


VOLTAGE CHARTS 2-73
WAVE FORMS 2-76

USING P.W. BOARD


P.W.B ASS'Y name	LT-Z26SX4B	LT-Z26SX4B/A	LT-Z26SX4B/S	LT-Z26SX4S/S
RECEIVER PWB	SFL0F301A-H2	←	←	←
ANALOG SIGNAL PWB	SFL-1302A-H2	←	←	←
DIGITAL SIGNAL PWB	SFL0D301A-H2	SFL0D303A-H2	SFL0D302A-H2	←
CONNECTOR PWB	SFL-4031A-H2	←	←	←
FRONT CONTROL PWB	SFL-7031A-H2	←	←	←
FRONT SENSOR PWB	SFL-8031A-H2	←	←	←
REGULATOR PWB	SFL-9113A-H2	←	←	←
POWER PWB	SFL-9013A-H2	←	←	←

SEMICONDUCTOR SHAPES


TRANSISTOR

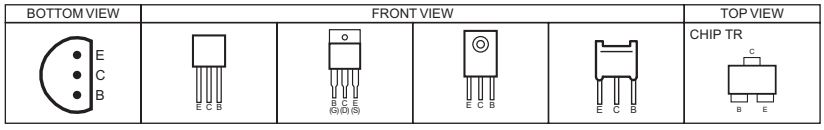


IC

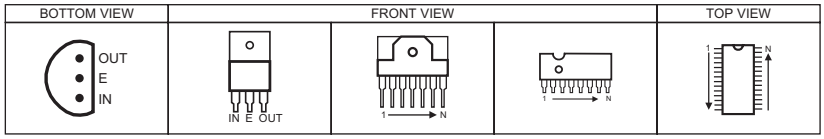


CHIP IC

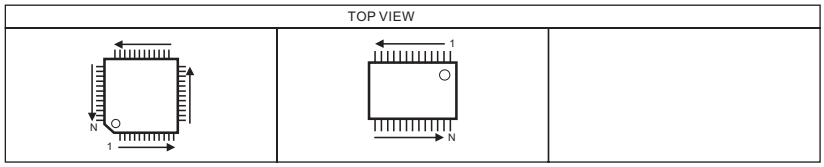

WIRING DIAGRAM

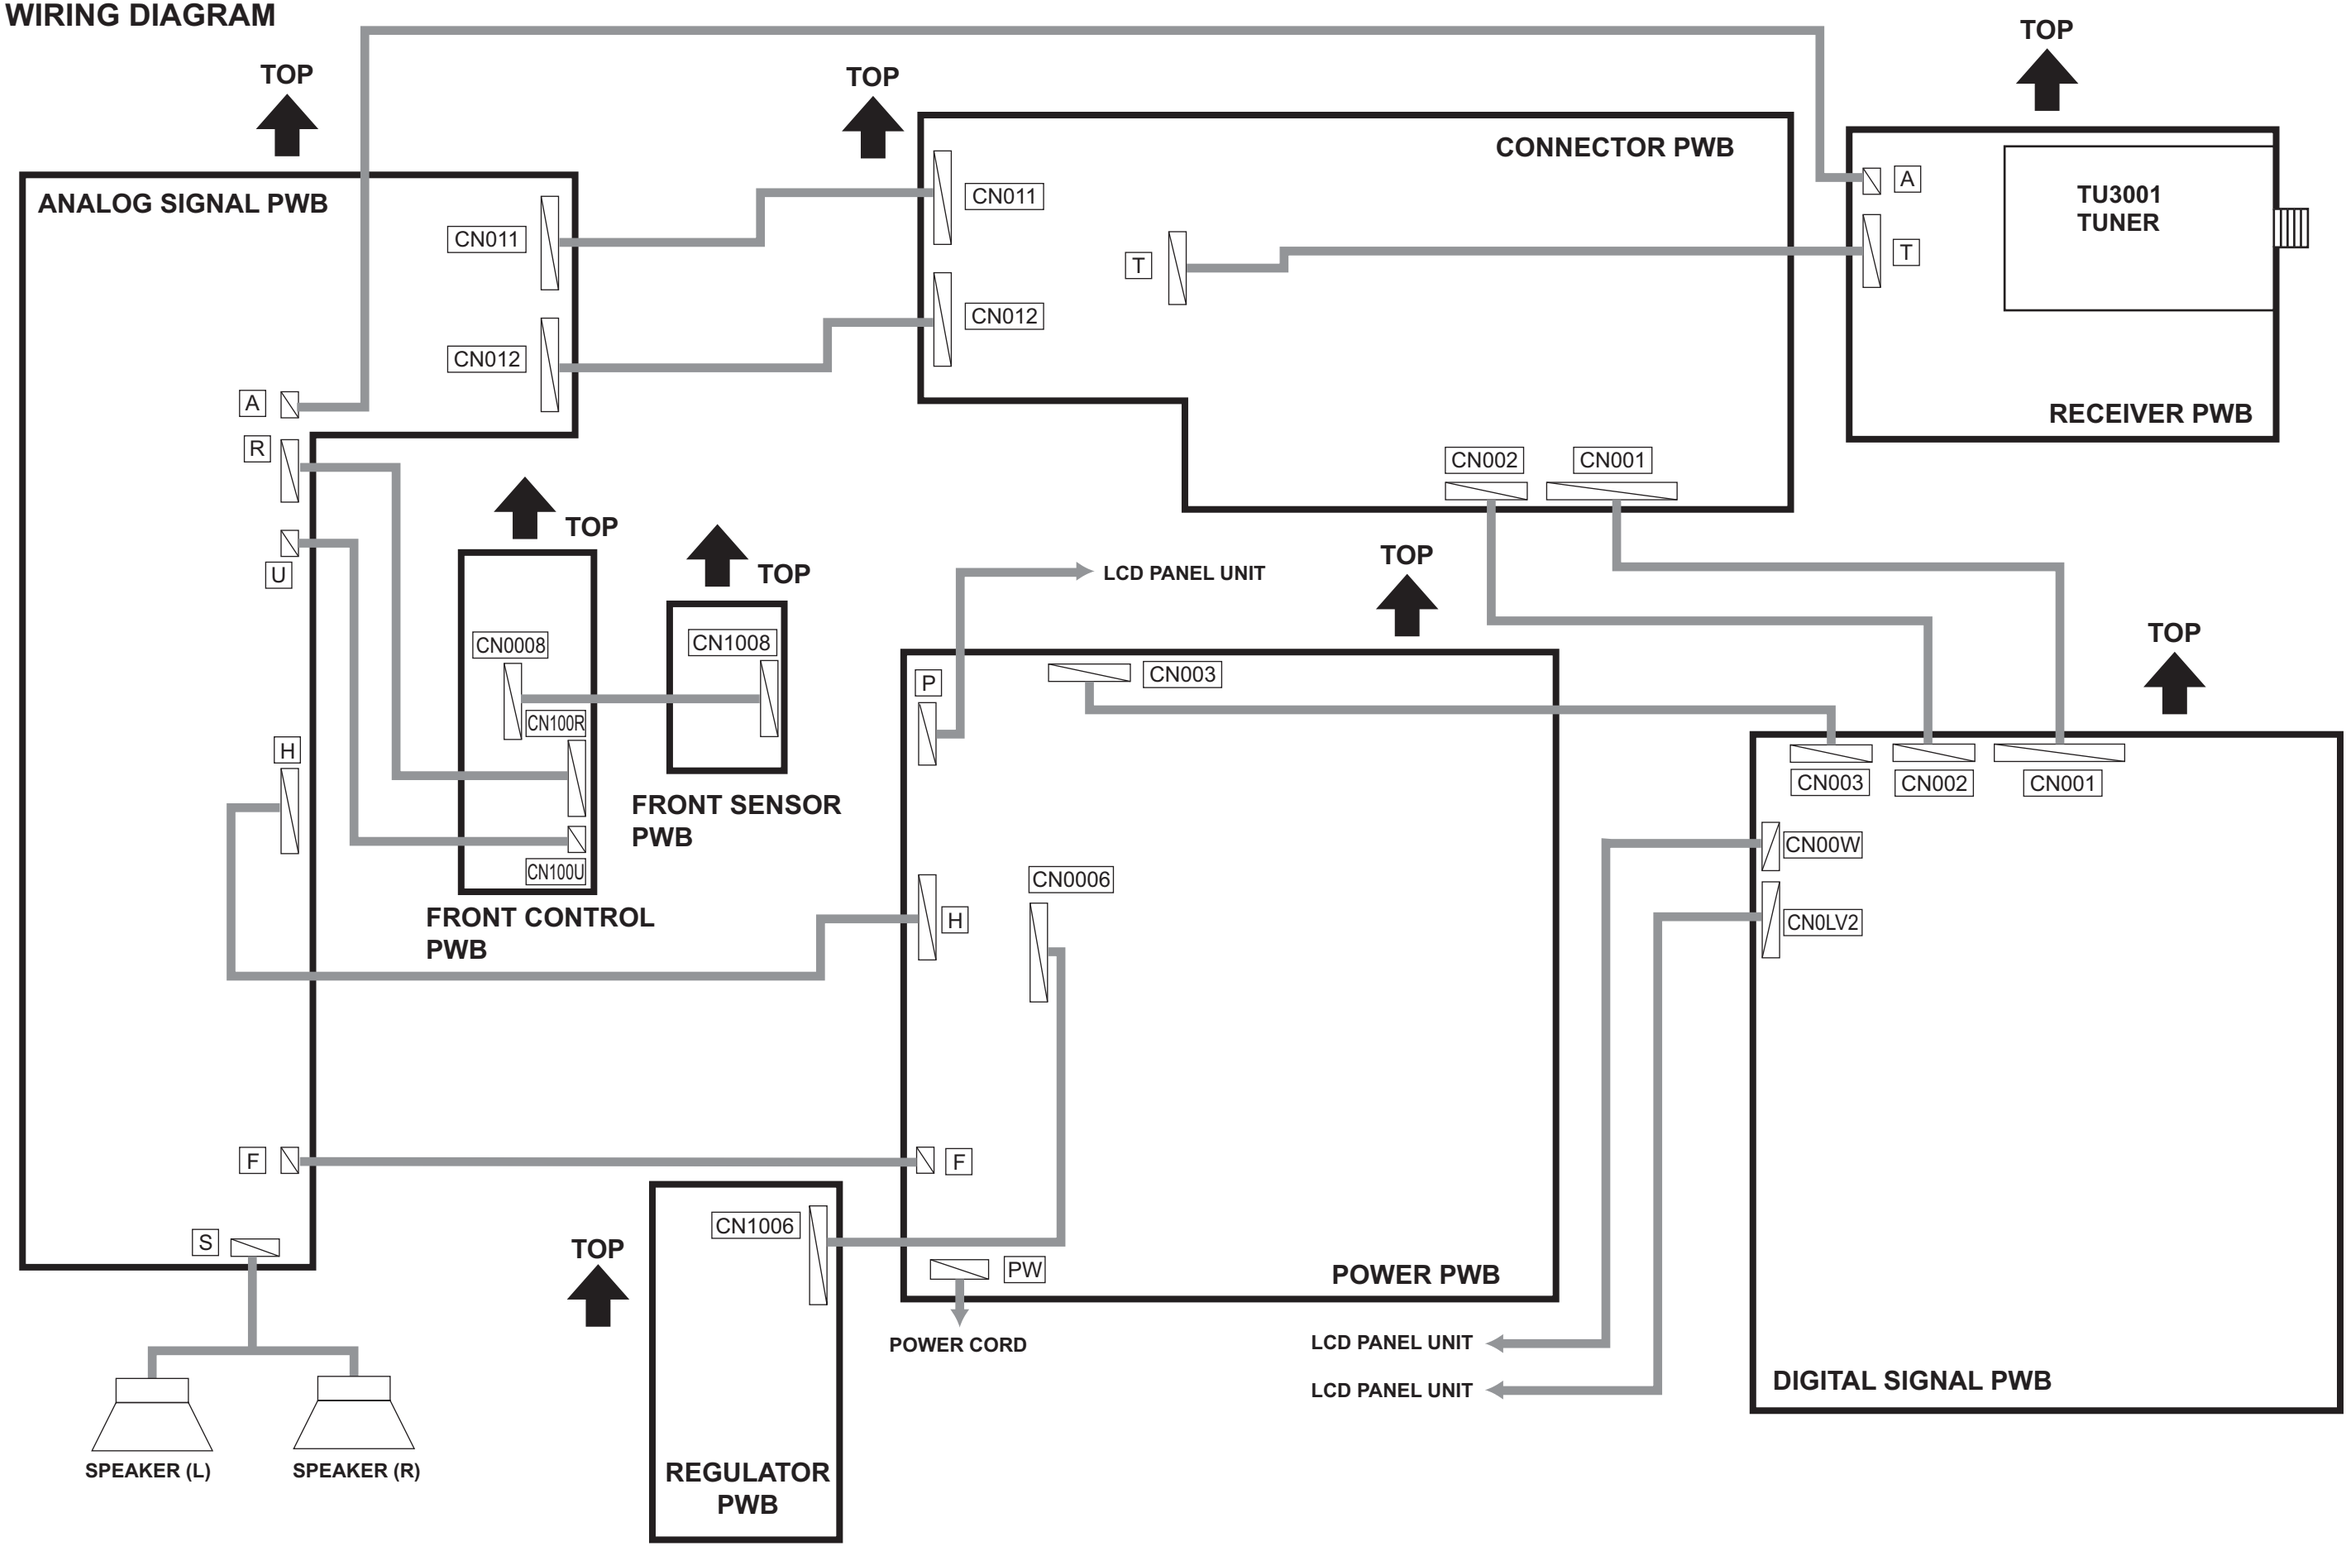


BLOCK DIAGRAM

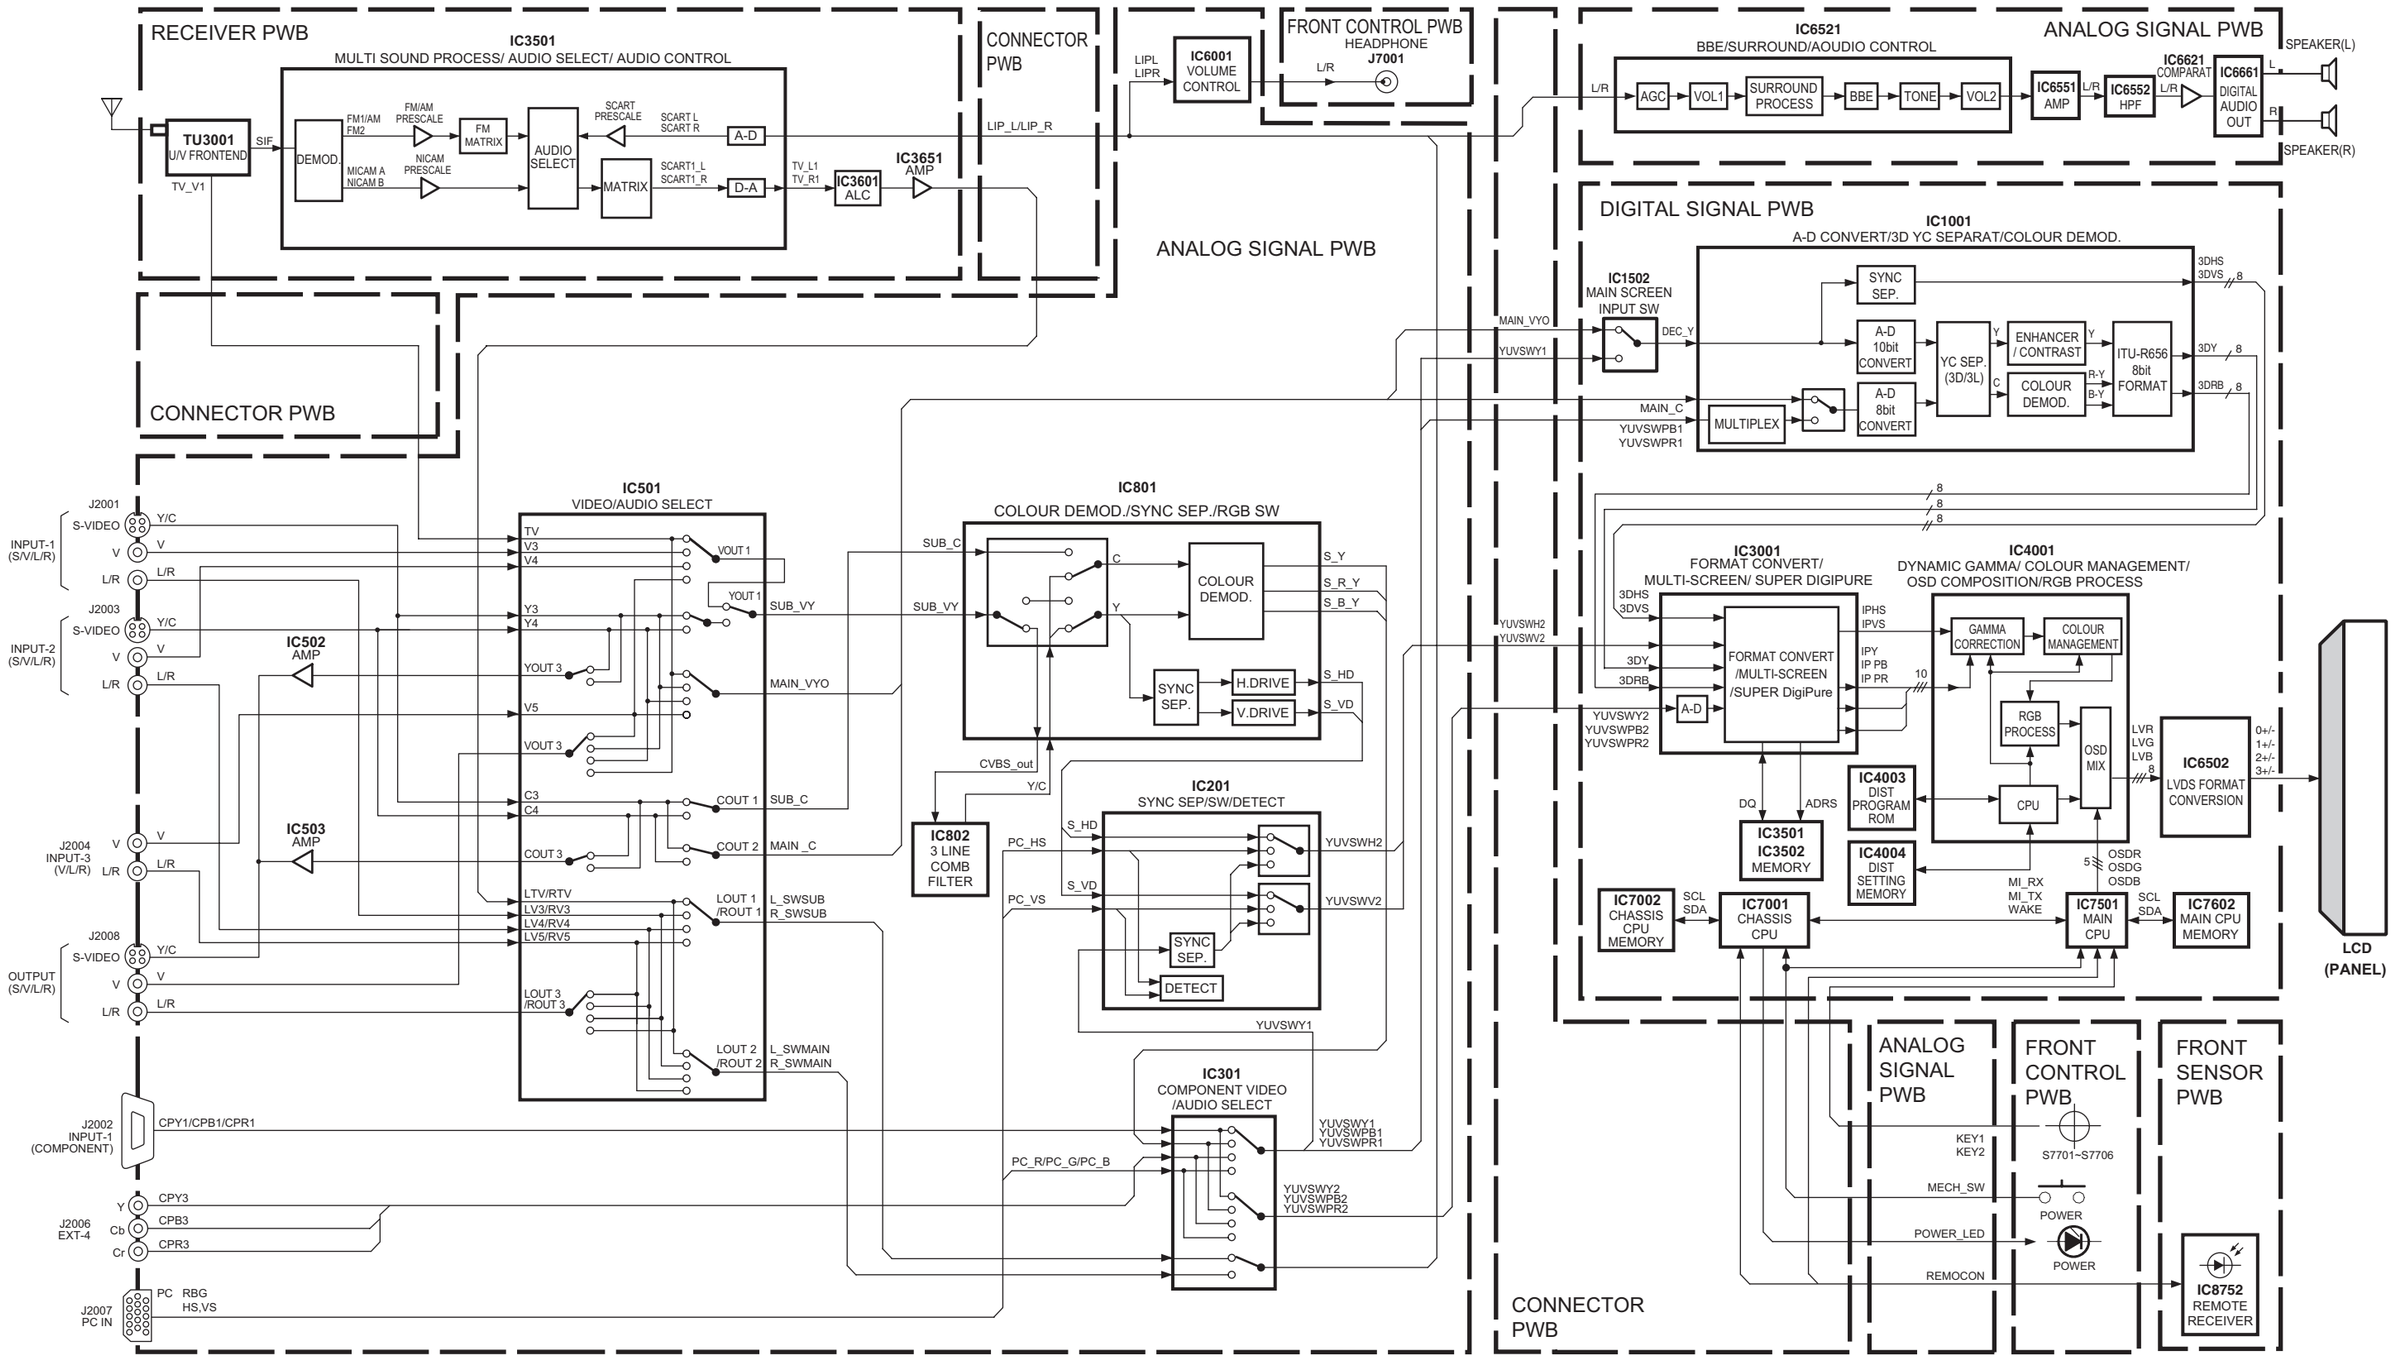

CIRCUIT DIAGRAMS


RECEIVER PWB CIRCUIT DIAGRAM SHEET 1

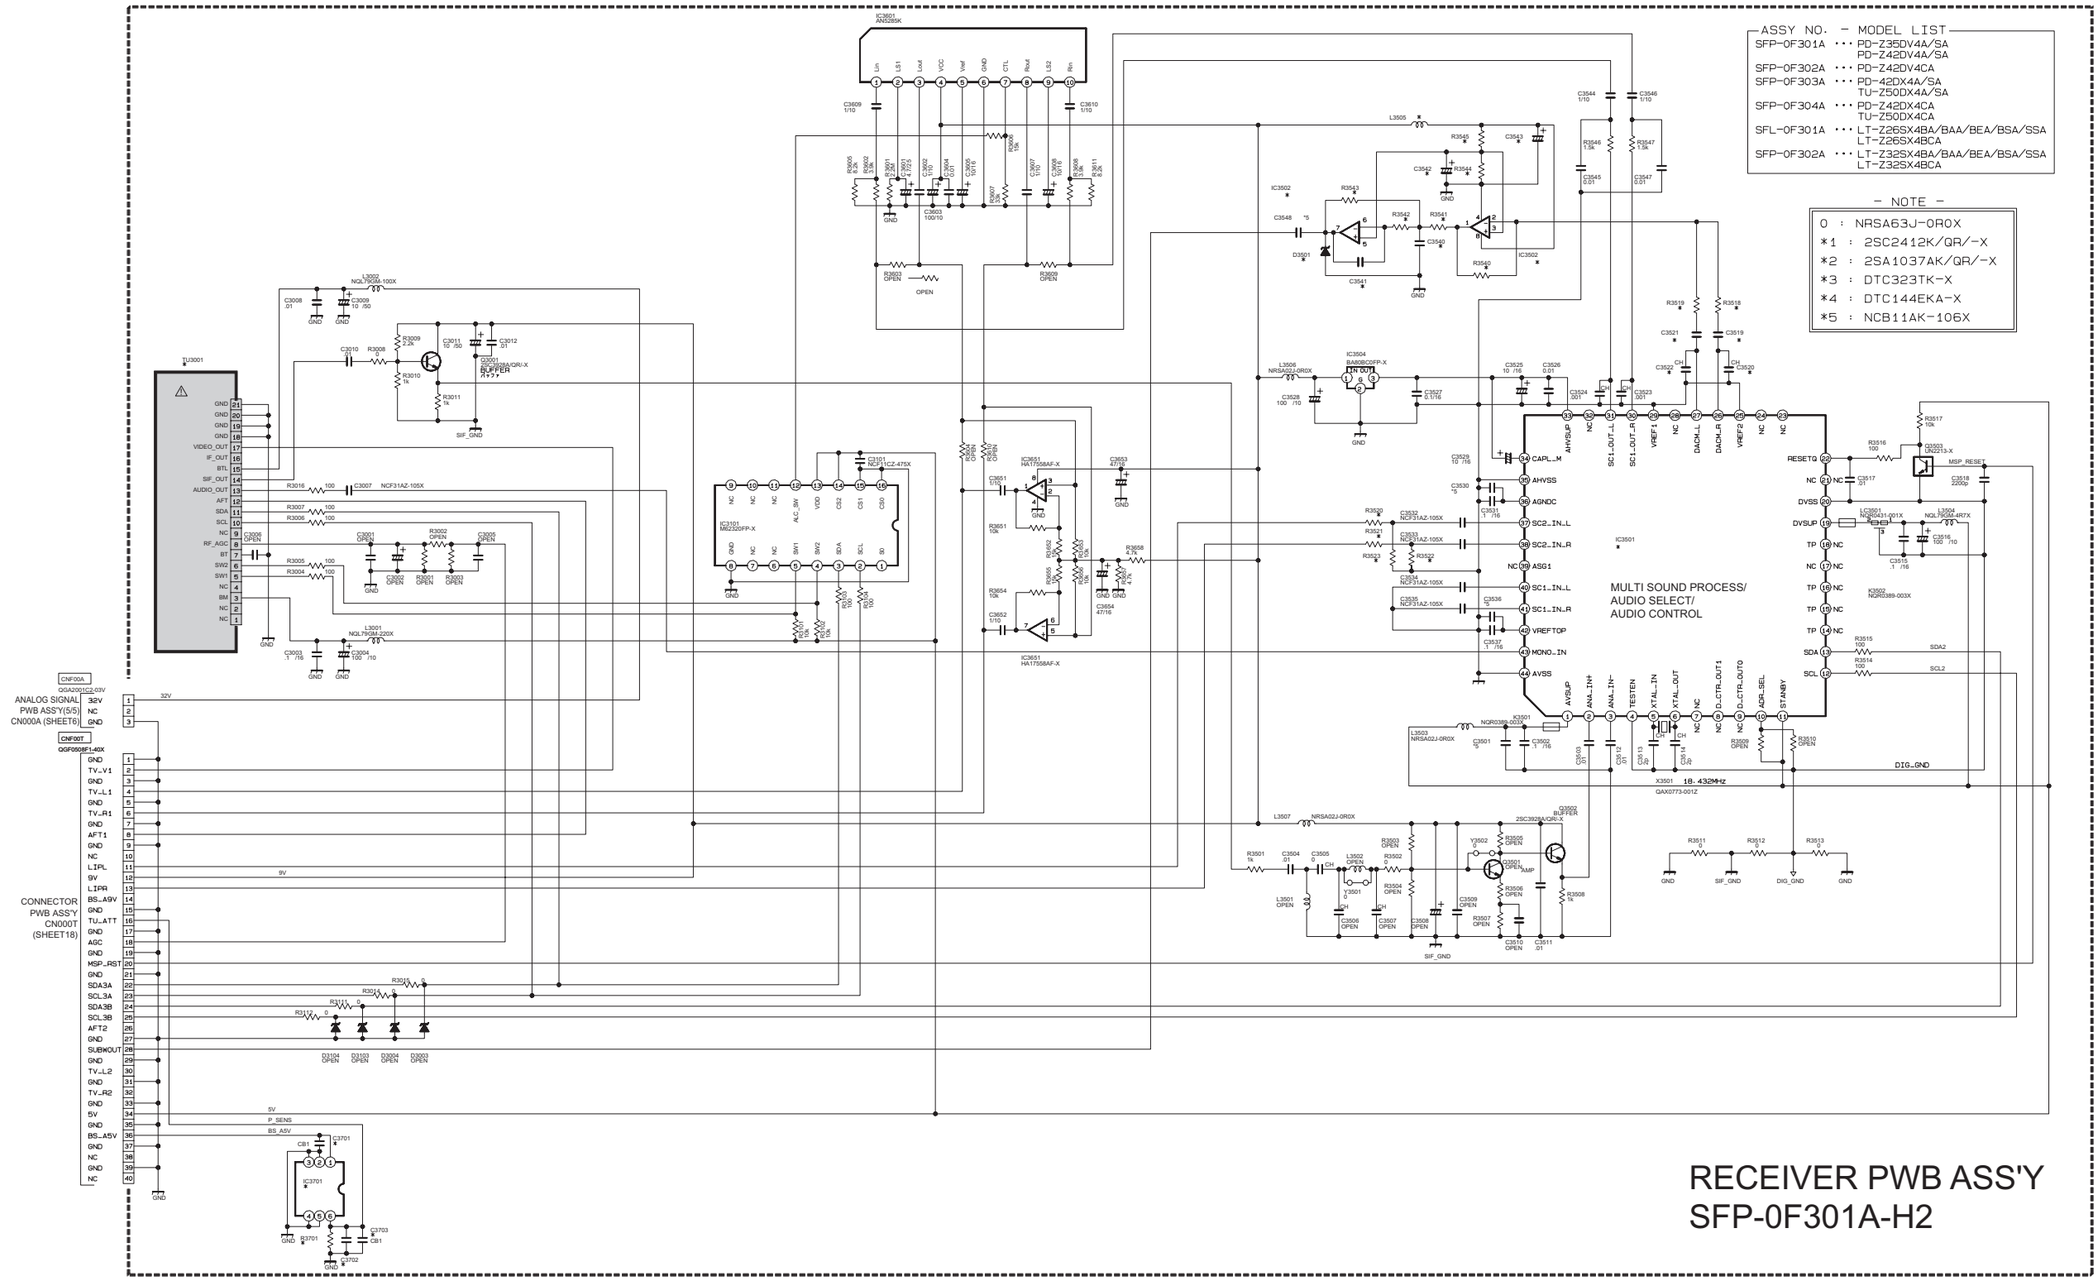

*DIFFERENCE LIST


MODEL	PD-Z35DV4A (etc)	PD-Z42DV4CA	PD-Z42DX4A (etc)	PD-Z42DX4CA	LT-Z26SX4BA (etc)	LT-Z32SX4BA (etc)
ASSY NO.	SFP-0F301A	SFP-0F302A	SFP-0F303A	SFP-0F304A	SFL-0F301A	SFL-0F302A
	XLLC05843	XLLC05843 -02	XLLC05843 -03	XLLC05843 -04	XLLC07205	XLLC07205 -02
IC3501	MSP3415D-PC/B-C24	MSP3415D-PC/B-C24	MSP3415G-PC/B/S-M	MSP3415G-PC/B/S-M	MSP3415G-PC/B/S-M	MSP3415G-PC/B/S-M
IC3701	OPEN	OPEN	TP5852-W	TP5852-W	OPEN	OPEN
R3701	OPEN	OPEN	100k	100k	OPEN	OPEN
C3701	OPEN	OPEN	*5	*5	OPEN	OPEN
C3702	OPEN	OPEN	0.1/16	0.1/16	OPEN	OPEN
C3703	OPEN	OPEN	*5	*5	OPEN	OPEN
TU3001	QAU0356 -001	QAU0356 -002	QAU0366 -001	QAU0366 -002	QAU0350 -001	QAU0350 -002
C3519	1/16	1/16	1/16	1/16	OPEN	OPEN
C3520	0.001	0.001	0.001	0.001	OPEN	OPEN
C3521	1/16	1/16	1/16	1/16	OPEN	OPEN
C3522	0.001	0.001	0.001	0.001	OPEN	OPEN
C3540	0.018	0.018	0.018	0.018	OPEN	OPEN
C3541	0.068/16	0.068/16	0.068/16	0.068/16	OPEN	OPEN
C3542	47/16	47/16	47/16	47/16	OPEN	OPEN
C3543	47/16	47/16	47/16	47/16	OPEN	OPEN
C3548	*5	*5	*5	*5	OPEN	OPEN
D3501	MA8100/M -X	MA8100/M -X	MA8100/M -X	MA8100/M -X	OPEN	OPEN
IC3502	HA17558 -X	HA17558 -X	HA17558 -X	HA17558 -X	OPEN	OPEN
L3505	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	OPEN	OPEN
R3518	10K	10K	10K	10K	OPEN	OPEN
R3519	10K	10K	10K	10K	OPEN	OPEN
R3520	100	100	100	100	OPEN	OPEN
R3521	100	100	100	100	OPEN	OPEN
R3522	OPEN	OPEN	OPEN	OPEN	0	0
R3523	OPEN	OPEN	OPEN	OPEN	0	0
R3540	15K	15K	15K	15K	OPEN	OPEN
R3541	10K	10K	10K	10K	OPEN	OPEN
R3542	10K	10K	10K	10K	OPEN	OPEN
R3543	15K	15K	15K	15K	OPEN	OPEN
R3544	4.7K	4.7K	4.7K	4.7K	OPEN	OPEN
R3545	4.7K	4.7K	4.7K	4.7K	OPEN	OPEN

ANALOG SIGNAL PWB CIRCUIT DIAGRAM (1/5) SHEET 2

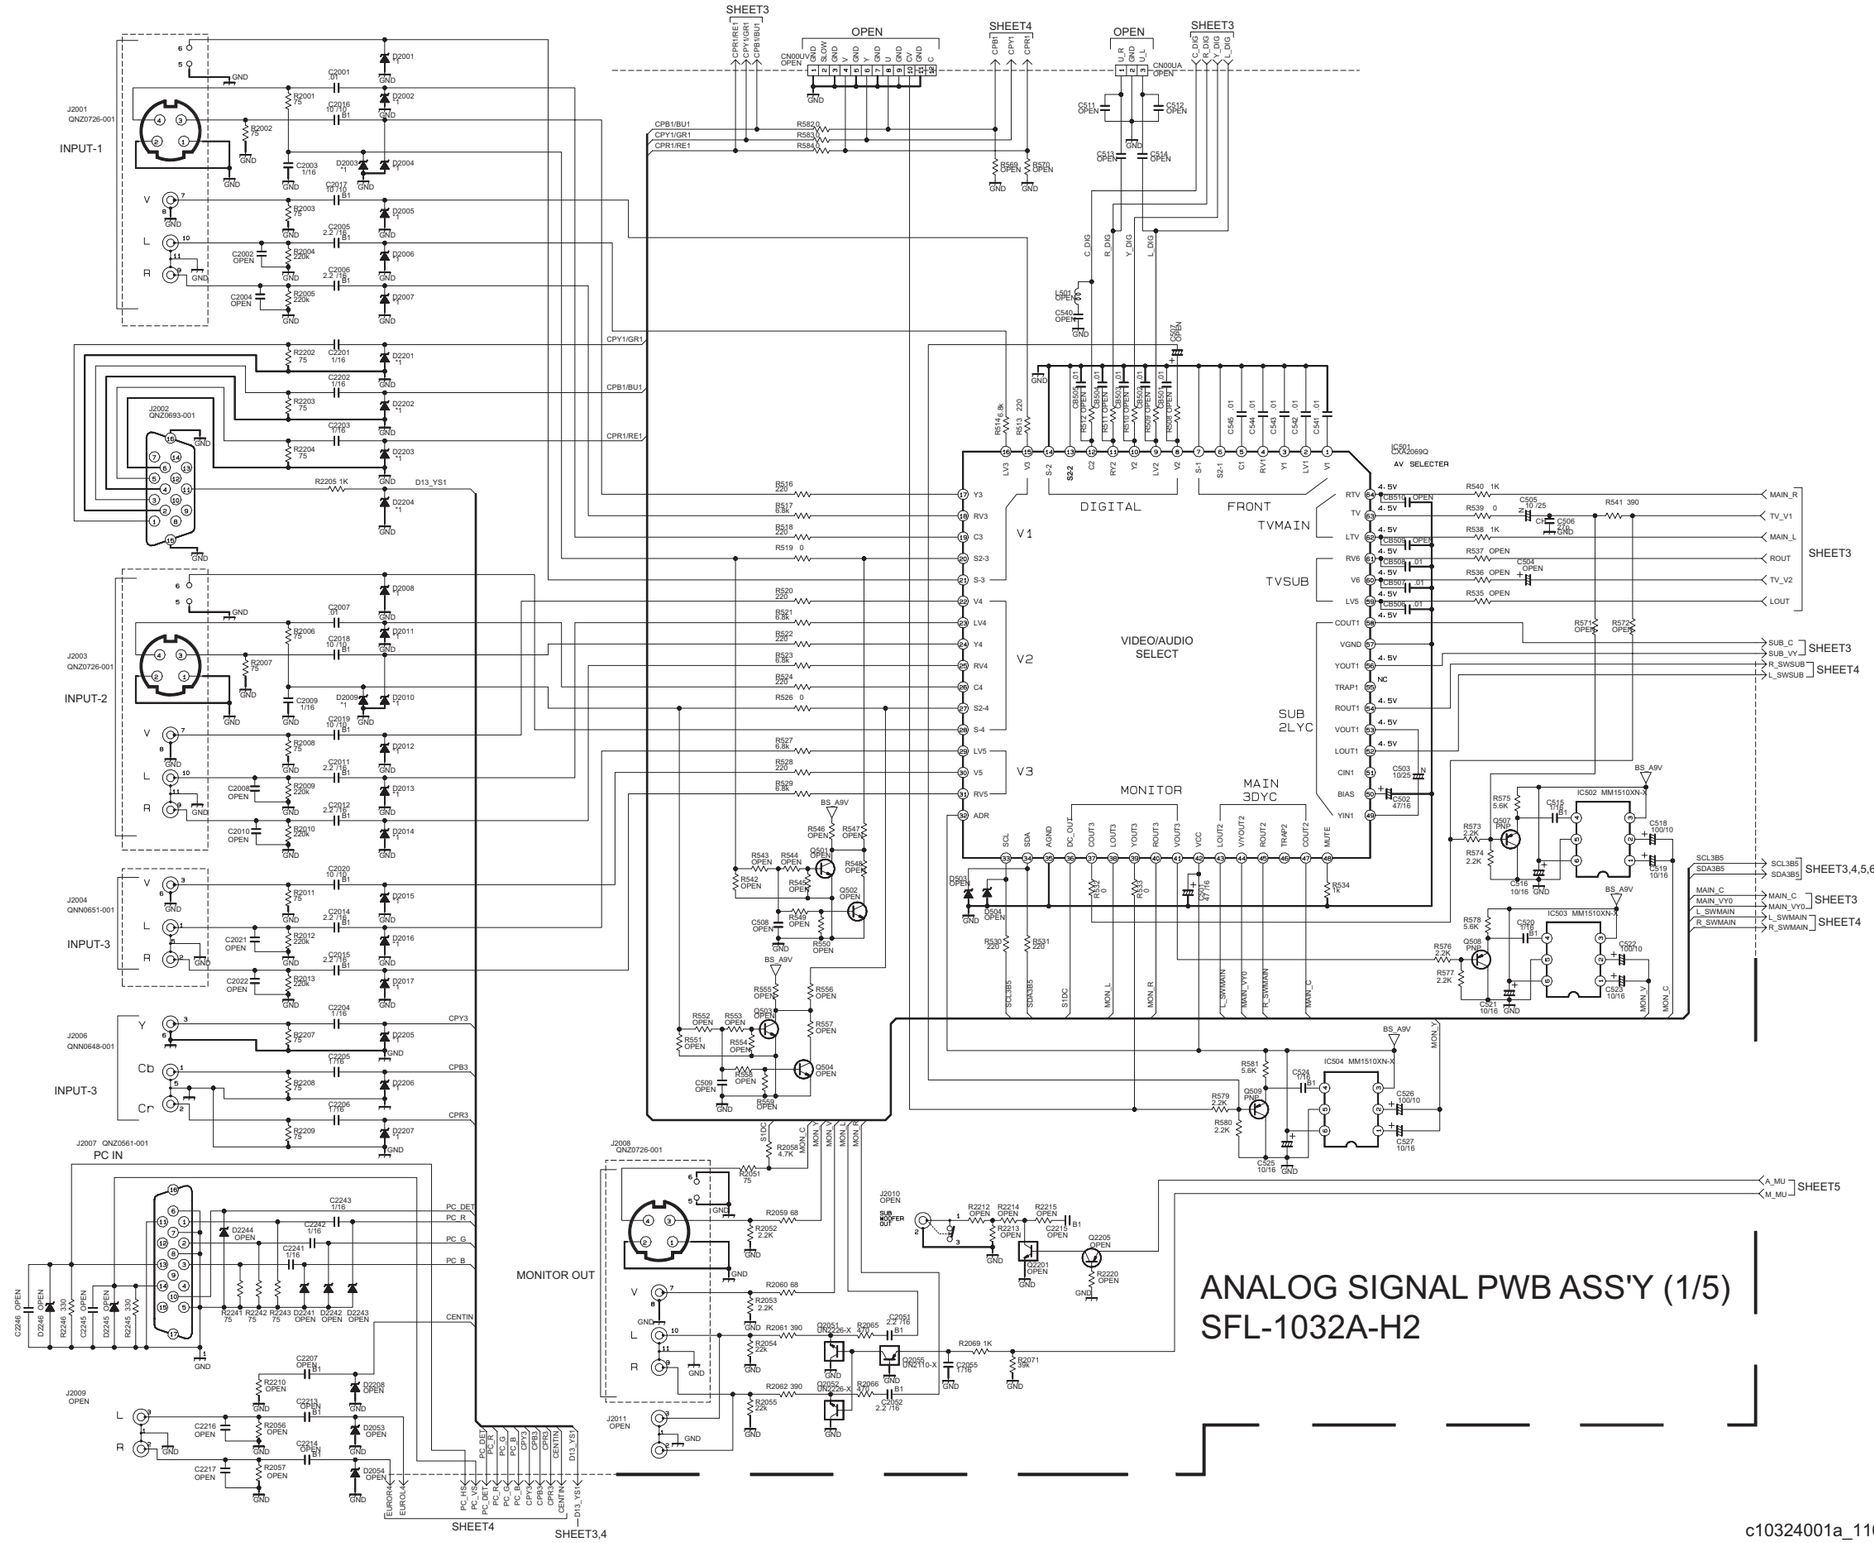


c10324001a_1102_1/5_0.0


ANALOG SIGNAL CIRCUIT DIAGRAM (2/5) SHEET 3

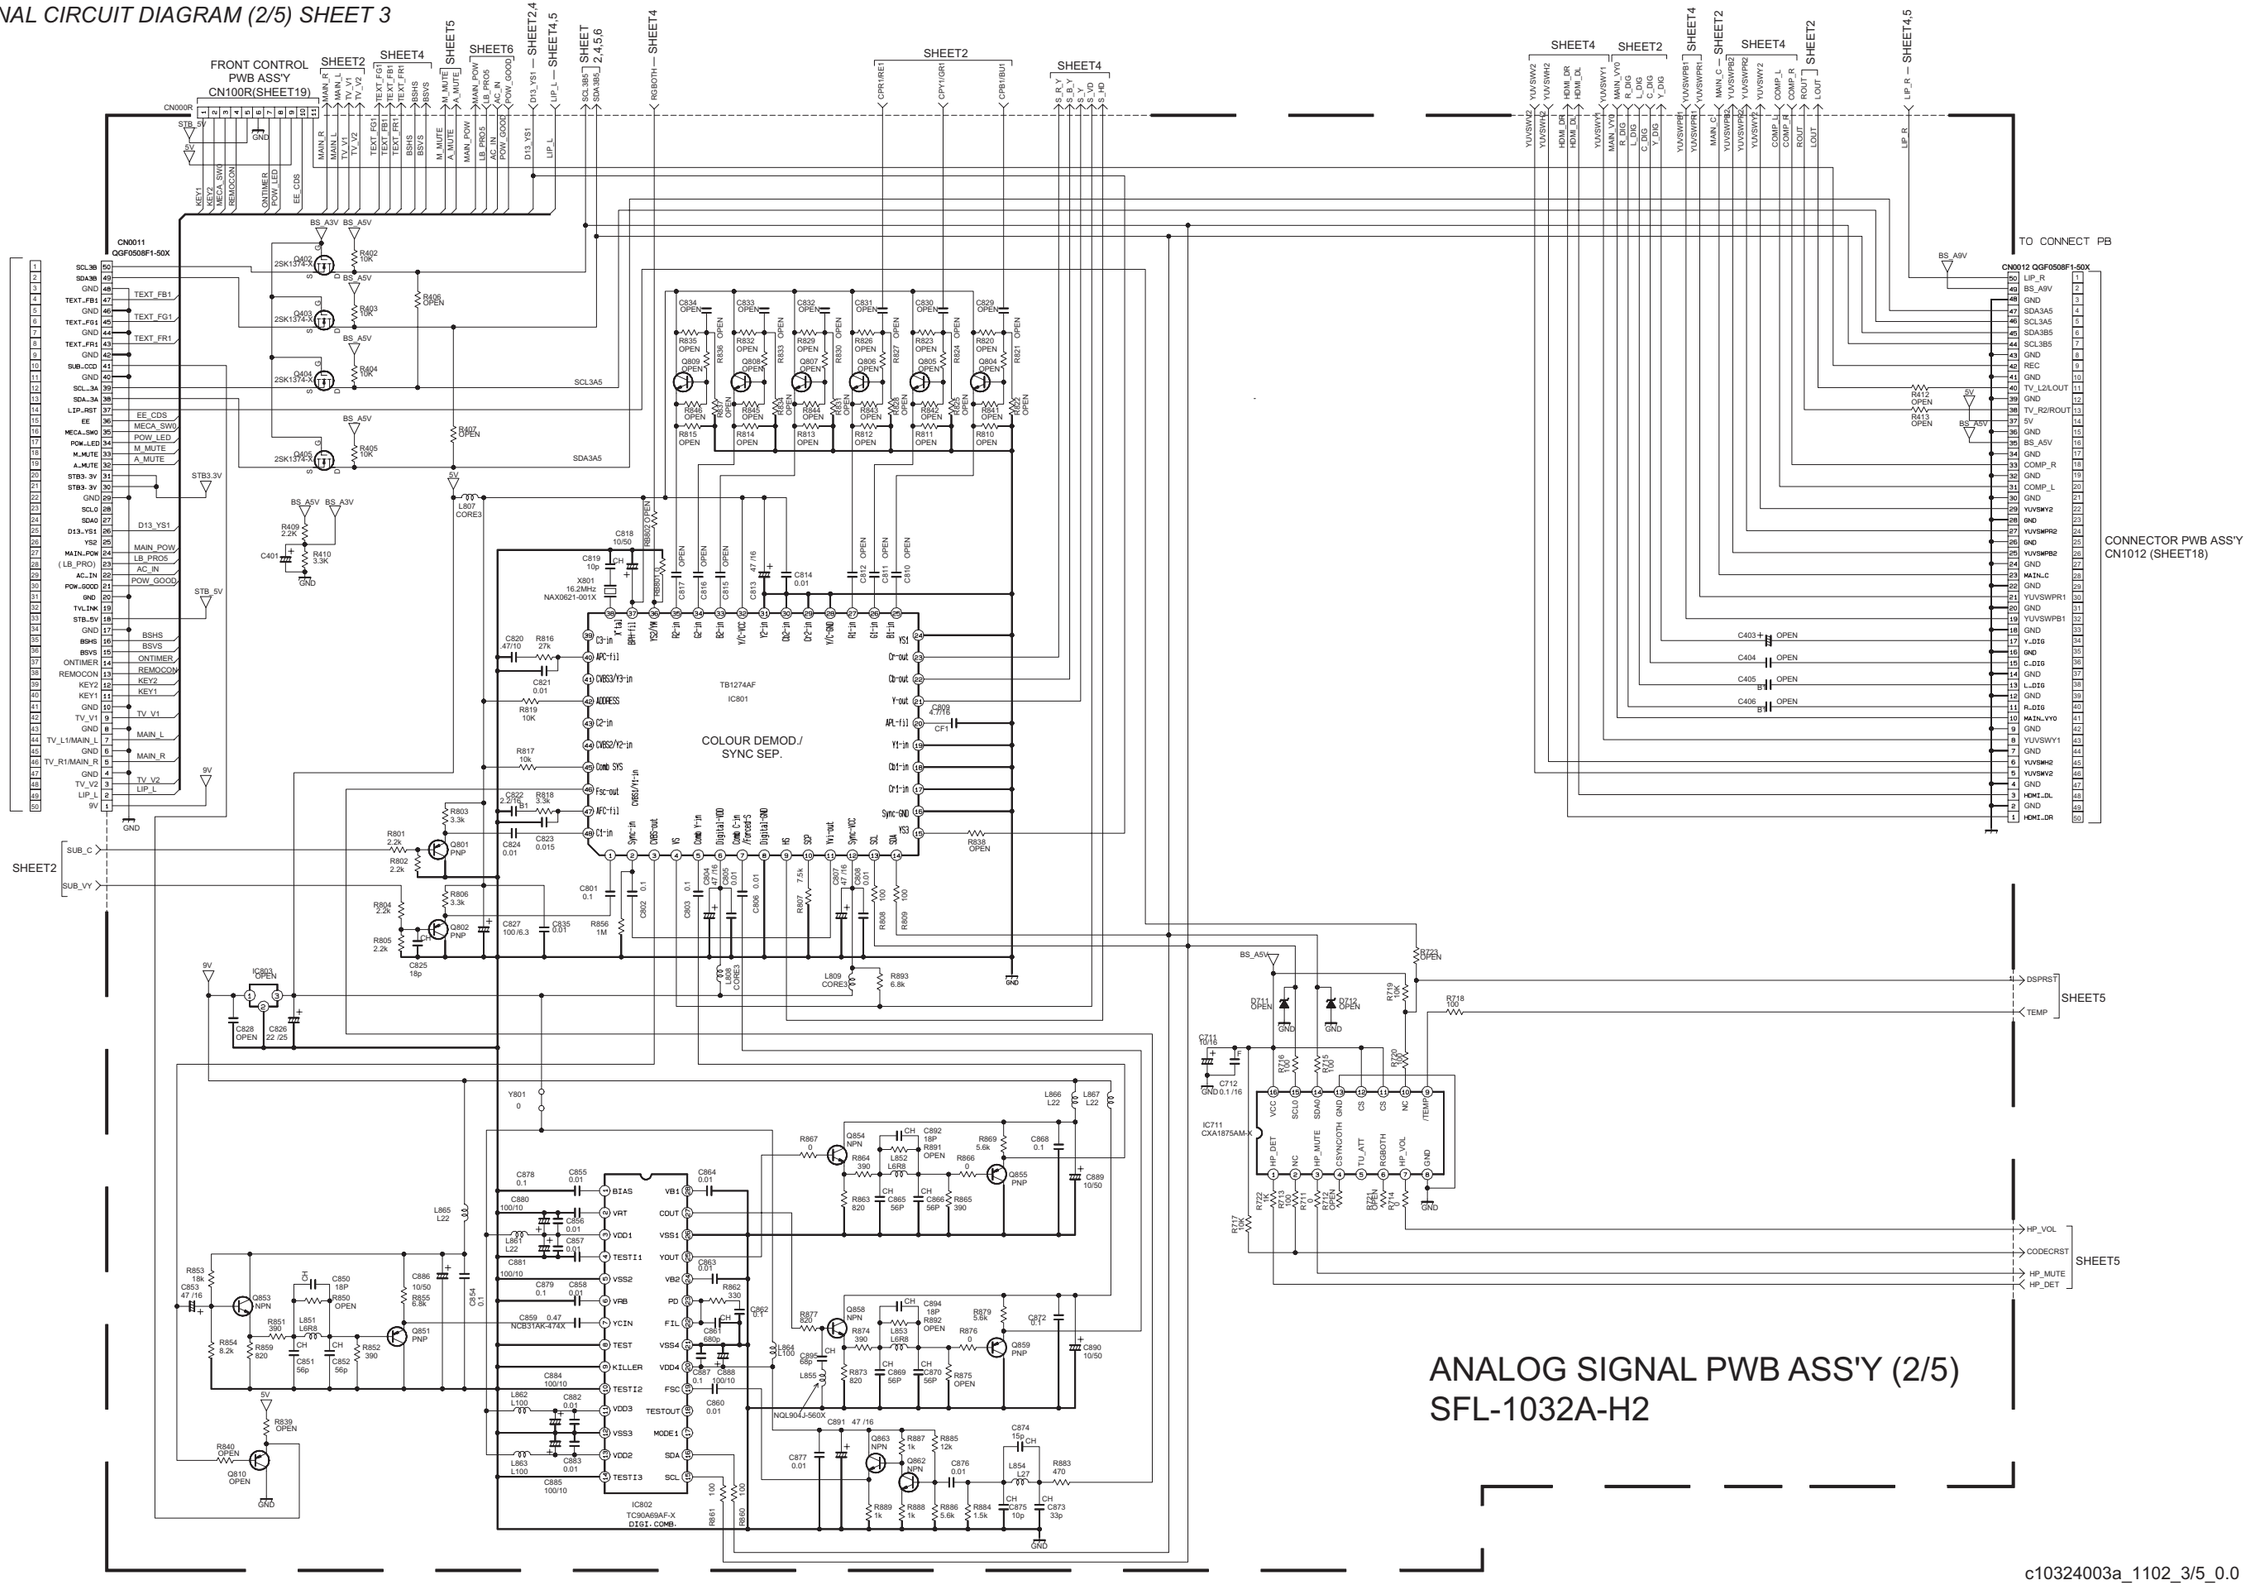

ANALOG SIGNAL CIRCUIT DIAGRAM (3/5) SHEET 4

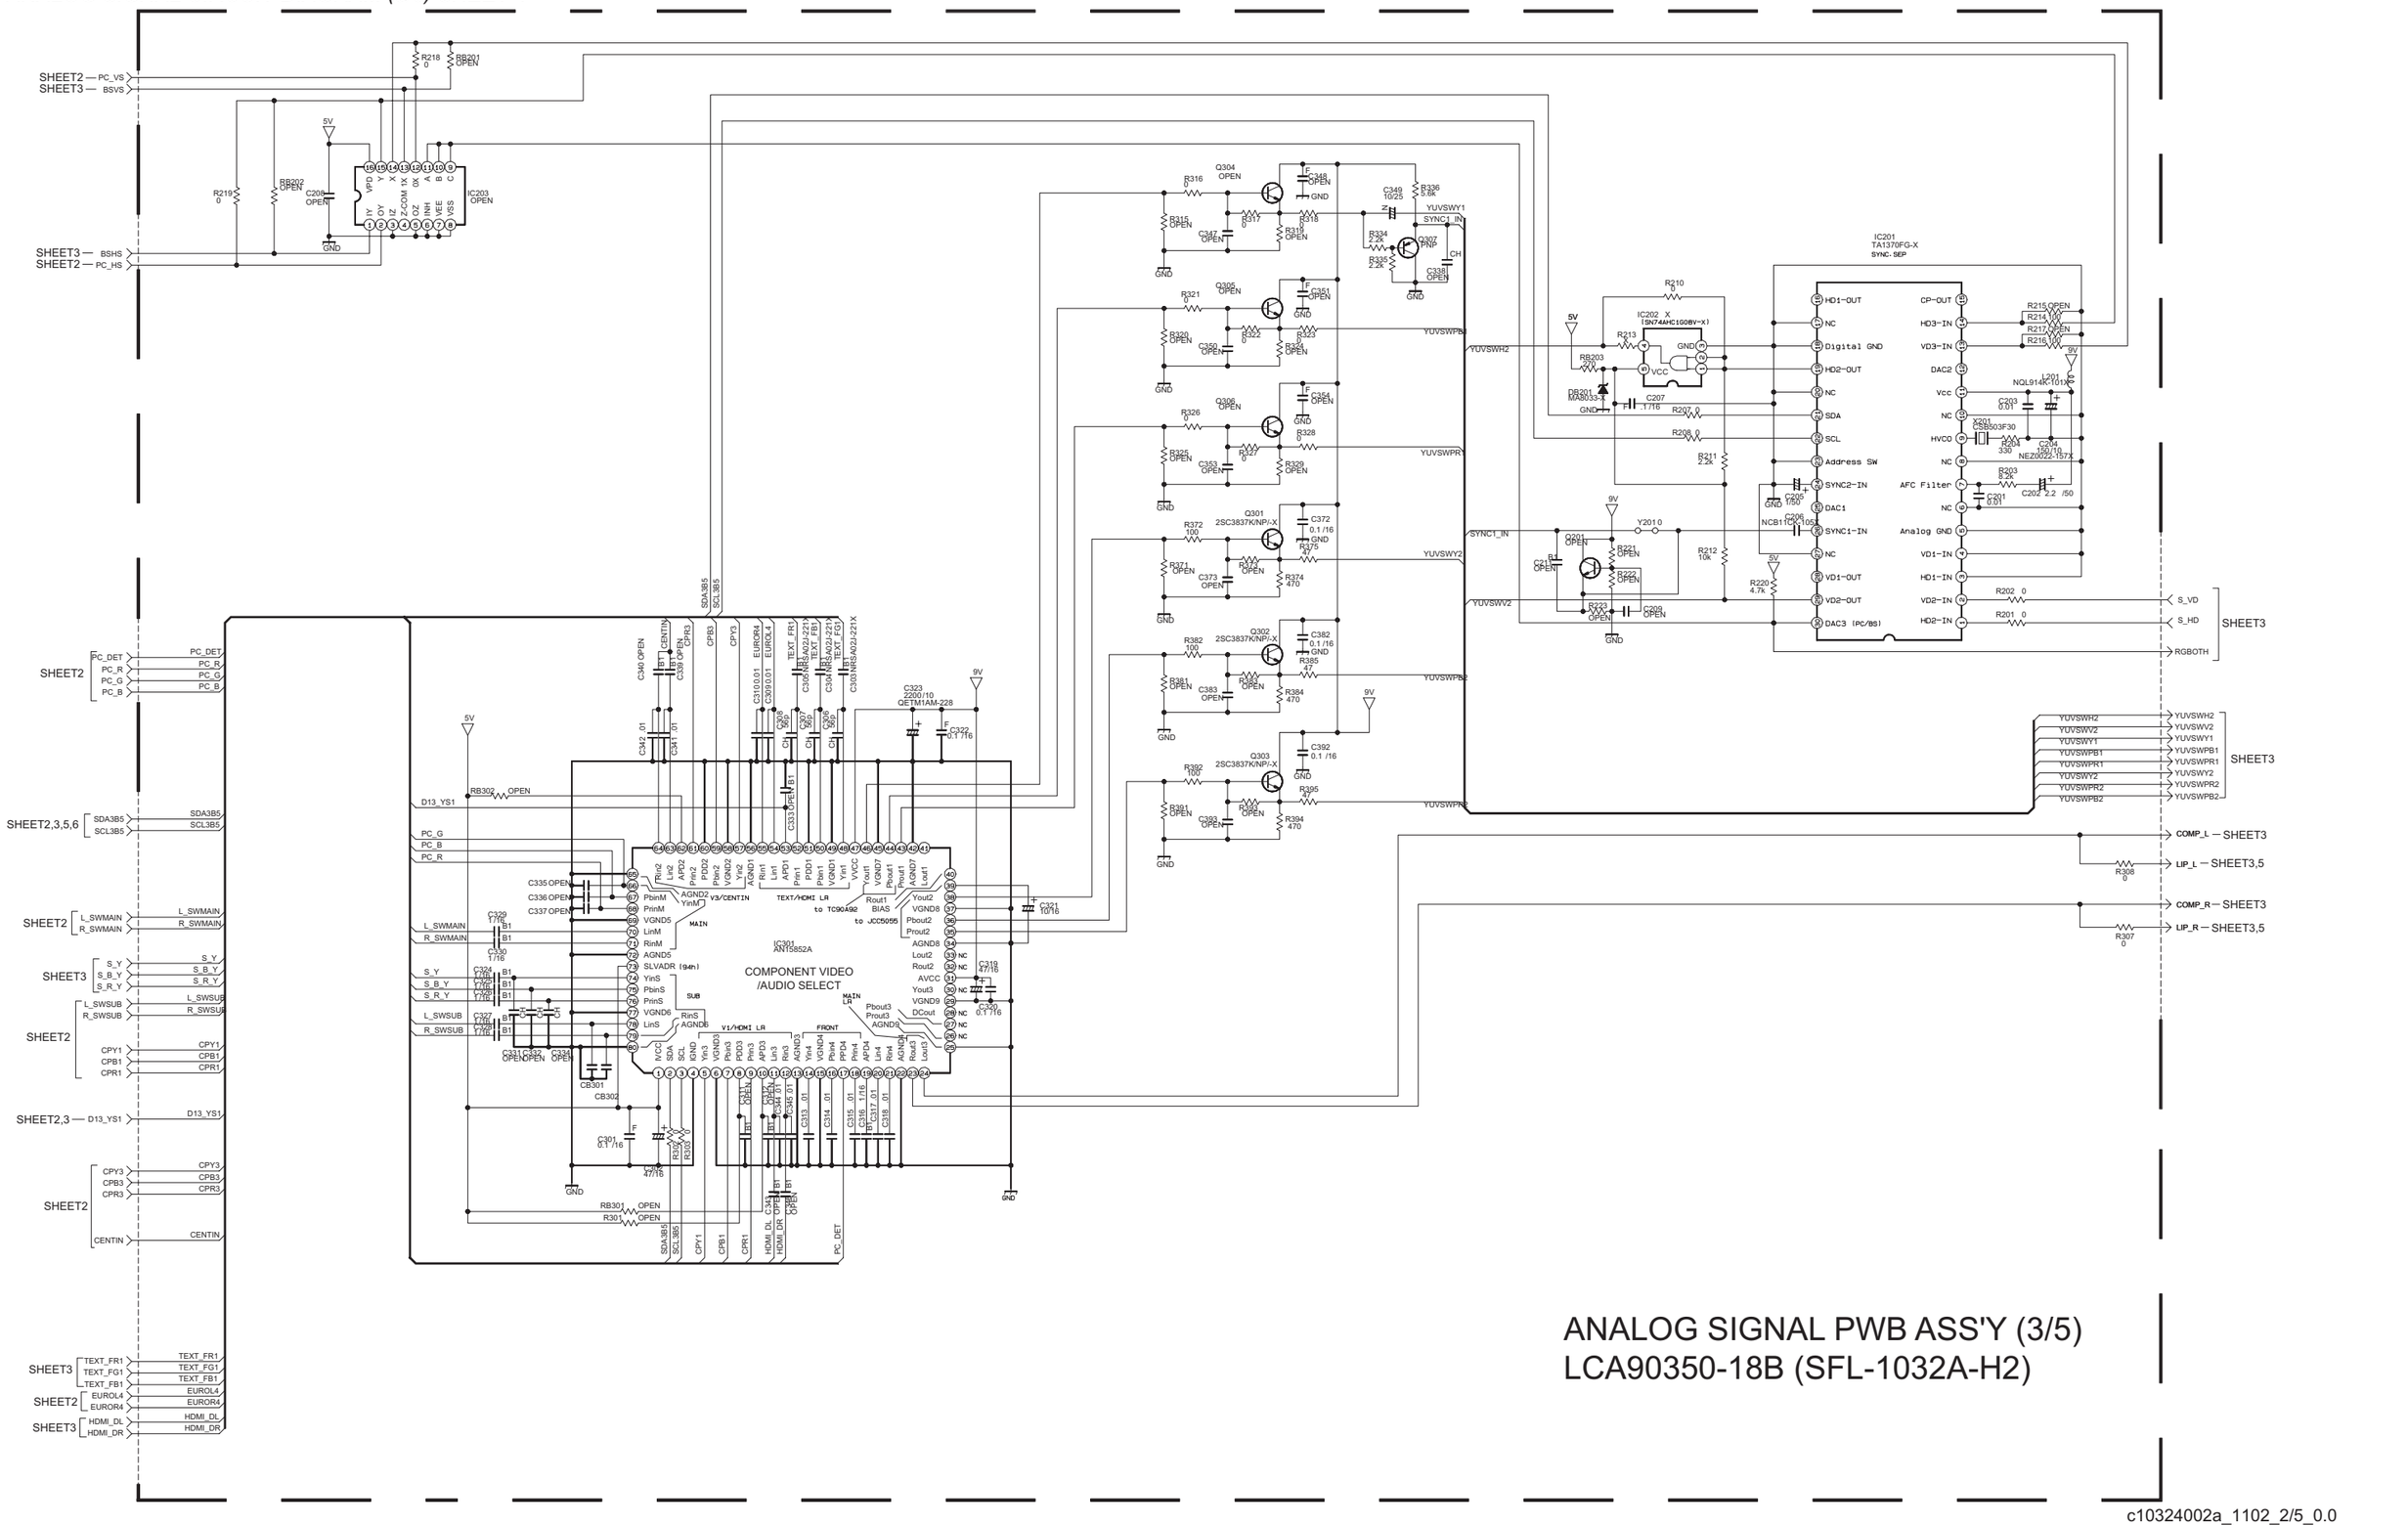

ANALOG SIGNAL CIRCUIT DIAGRAM (4/5) SHEET 5

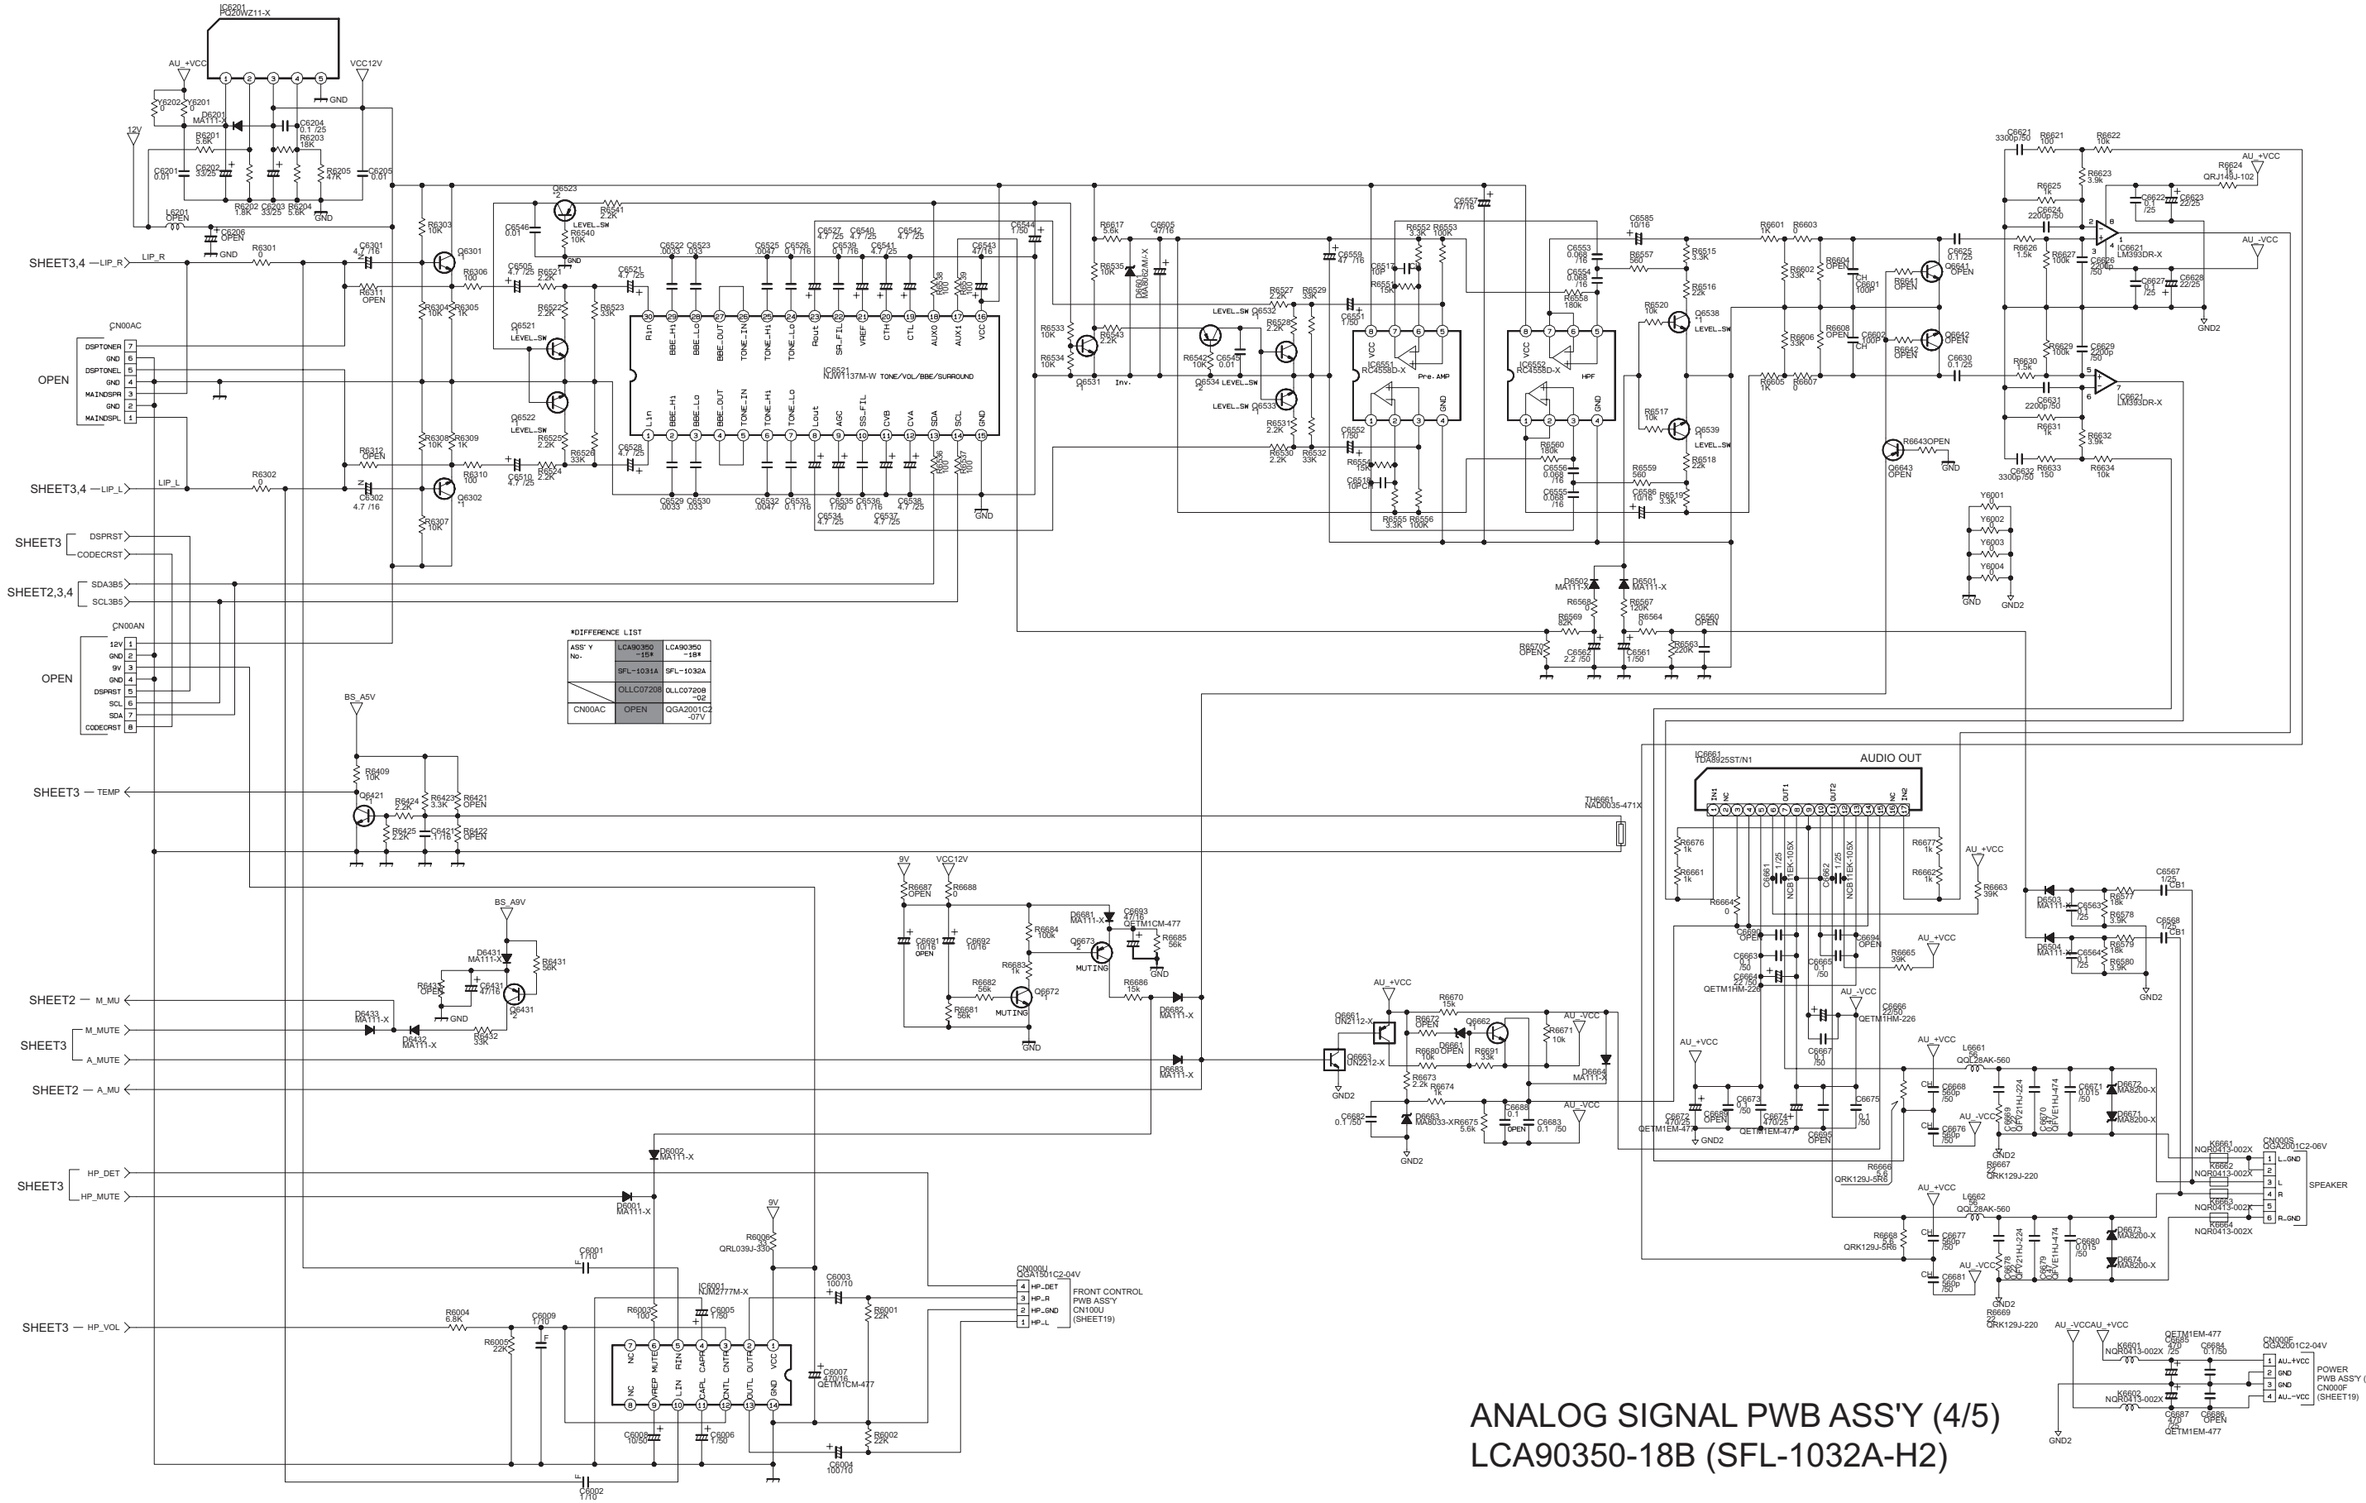

ANALOG SIGNAL PWB ASS'Y (4/5)
LCA90350-18B (SFL-1032A-H2)

c10324004a_1102_4/5_0.0

RECEIVER PWB ASS'Y CNF00T (SHEET1)
CN000A QGA2001C2-03V
1 GND

Y901 0
Y902 0
Y913 0
Y914 0
GND_S1
Y903 0
Y904 0
Y915 0
Y916 0
GND_S2
GND

Y905 0
Y906 0
GND_S3
Y907 0
Y908 0
Y919 0
Y920 0
GND_S4
GND

Y909 OPEN
Y910 OPEN
Y921 OPEN
Y922 OPEN
GND_S5
Y911 0
GND2
Y912 0
Y917 OPEN
Y918 OPEN
GND_S6
GND

SCL3B5
SDA3B5
SHEET2,3,4,5

BS_ABT30
12V
STB_5V
STB3.3V
BS_A9V
BS_A5V
12V
9V
5V

IC903 BA90BC0FP-X
R907 0 1/2W NRS12BJ-0R0W
C912
C906 NEHM1CM-476X
GND
NEHM1CM-476X

L902 NQL52EM-220X
D903 PTZ11B-X
C913 NEX51CM-335X
GND
GND

IC902 TA48M033F-X
D901 NRSA02J-0R0X
D909 OPEN
C904 NCB11AK-106X
C905 NEHM1CM-476X
GND

L903 NQL52EM-220X
C914 NEX50JM-156X
GND

5V SWITCH
R908 470 1/2W
Q902 2SC3074/OY/-X
C915 NEHM1CM-476X
GND

L904 NQL52EM-220X
D904 PTZ6.8B-X
C916 NEX50JM-156X
GND
GND

TO POWER PB
CN000H QGF1201C2-19
POW_GOOD 19
AC 18
MAIN_POW 17
GND 16
SCL 15
GND 14
SDA 13
GND 12
BT 11
STB5V 10
SW12V 9
UK_12V 8
BS9V 7
BS9V 6
BS5V 5
BS5V 4
BS5V 3
GND 2
GND 1
GND
POWER PWB ASS'Y (2/2) CNF000H (SHEET23)

R901 OPEN
R903 OPEN
D902 OPEN
C901 OPEN
D905 OPEN
Q903 OPEN
R902 OPEN
R904 OPEN
GND

LB_PRO5
SHEET3
MAIN_POW
AC_IN
POW_GOOD

ANALOG SIGNAL PWB ASS'Y (5/5)
LCA90350-18B (SFL-1032A-H2)

c10324005a_1102_5/5_0.0

DIGITAL SIGNAL PWB CIRCUIT DIAGRAM (1/11) SHEET 7

※The blank part of a difference list : Refer to circuit block.

#1 DIFFERENCE LIST
(JPN MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC0613A -02 (etc)	OLLC0613A -05 (etc)	OLLC0613A -09 (etc)	OLLC0613A -10 (etc)	OLLC0613A -13 (etc)
X1531	NAX0118 -001X	OPEN	OPEN	OPEN	OPEN
RA1531	NRZ0034 -103W	OPEN	OPEN	OPEN	OPEN
RA1532	NRZ0034 -103W	OPEN	OPEN	OPEN	OPEN
R1501		OPEN	OPEN	OPEN	OPEN
R1503		OPEN	OPEN	OPEN	OPEN
R1508		OPEN	OPEN	OPEN	OPEN
R1513		OPEN	OPEN	OPEN	OPEN
R1531		OPEN	OPEN	OPEN	OPEN
R1532		OPEN	OPEN	OPEN	OPEN
R1534		OPEN	OPEN	OPEN	OPEN
R1535		OPEN	OPEN	OPEN	OPEN
R1536		OPEN	OPEN	OPEN	OPEN
R1537		OPEN	OPEN	OPEN	OPEN
R1538		OPEN	OPEN	OPEN	OPEN
R1539		OPEN	OPEN	OPEN	OPEN
R1540		OPEN	OPEN	OPEN	OPEN
R1541		OPEN	OPEN	OPEN	OPEN
R1544		OPEN	OPEN	OPEN	OPEN
R1545		OPEN	OPEN	OPEN	OPEN
R1546		OPEN	OPEN	OPEN	OPEN
R1547		OPEN	OPEN	OPEN	OPEN
R1548		OPEN	OPEN	OPEN	OPEN
R1549		OPEN	OPEN	OPEN	OPEN
R1550		OPEN	OPEN	OPEN	OPEN
R1551		OPEN	OPEN	OPEN	OPEN
R1552		OPEN	OPEN	OPEN	OPEN
R1553		OPEN	OPEN	OPEN	OPEN
R1554		OPEN	OPEN	OPEN	OPEN
R1558		OPEN	OPEN	OPEN	OPEN
R1559		OPEN	OPEN	OPEN	OPEN
R1560		OPEN	OPEN	OPEN	OPEN
R1561		OPEN	OPEN	OPEN	OPEN
R1565		OPEN	OPEN	OPEN	OPEN
R1566		OPEN	OPEN	OPEN	OPEN
R1567		OPEN	OPEN	OPEN	OPEN
R1568		OPEN	OPEN	OPEN	OPEN
R1569		OPEN	OPEN	OPEN	OPEN
R1571		OPEN	OPEN	OPEN	OPEN
R1572		OPEN	OPEN	OPEN	OPEN
R1573		OPEN	OPEN	OPEN	OPEN
R1574		OPEN	OPEN	OPEN	OPEN
R1575		OPEN	OPEN	OPEN	OPEN
R1576		OPEN	OPEN	OPEN	OPEN
R1577		OPEN	OPEN	OPEN	OPEN
R1578		OPEN	OPEN	OPEN	OPEN
R1583		OPEN	OPEN	OPEN	OPEN
Q1531		OPEN	OPEN	OPEN	OPEN
Q1532		OPEN	OPEN	OPEN	OPEN
Q1533		OPEN	OPEN	OPEN	OPEN
Q1534		OPEN	OPEN	OPEN	OPEN
Q1536		OPEN	OPEN	OPEN	OPEN
L1531		OPEN	OPEN	OPEN	OPEN
L1532		OPEN	OPEN	OPEN	OPEN
L1533	NRSA02J -0R0X	OPEN	OPEN	OPEN	OPEN
L1534	NRSA02J -0R0X	OPEN	OPEN	OPEN	OPEN
L1537	NQL0914K -470X	OPEN	OPEN	OPEN	OPEN
L1541		OPEN	OPEN	OPEN	OPEN
L1542		OPEN	OPEN	OPEN	OPEN
L1543		OPEN	OPEN	OPEN	OPEN
L1544		OPEN	OPEN	OPEN	OPEN
L1545		OPEN	OPEN	OPEN	OPEN
L1546		OPEN	OPEN	OPEN	OPEN
L1547		OPEN	OPEN	OPEN	OPEN
L1548		OPEN	OPEN	OPEN	OPEN
L1549		OPEN	OPEN	OPEN	OPEN
IC1503	S-80828CLNB -G -W	OPEN	OPEN	OPEN	OPEN
IC1531	OR4330 4BMQC	OPEN	OPEN	OPEN	OPEN
IC1532	OPA354 AIDBV -X	OPEN	OPEN	OPEN	OPEN
IC1533	TC7SH04 FU -X	OPEN	OPEN	OPEN	OPEN
IC1534	TC7WH04 FU -X	OPEN	OPEN	OPEN	OPEN
D1501		OPEN	OPEN	OPEN	OPEN
D1531		OPEN	OPEN	OPEN	OPEN
C1510		OPEN	OPEN	OPEN	OPEN
C1531		OPEN	OPEN	OPEN	OPEN
C1532		OPEN	OPEN	OPEN	OPEN
C1533		OPEN	OPEN	OPEN	OPEN
C1534		OPEN	OPEN	OPEN	OPEN
C1535		OPEN	OPEN	OPEN	OPEN
C1536		OPEN	OPEN	OPEN	OPEN
C1537		OPEN	OPEN	OPEN	OPEN
C1538		OPEN	OPEN	OPEN	OPEN
C1539		OPEN	OPEN	OPEN	OPEN
C1540		OPEN	OPEN	OPEN	OPEN
C1541		OPEN	OPEN	OPEN	OPEN
C1542		OPEN	OPEN	OPEN	OPEN
C1543		OPEN	OPEN	OPEN	OPEN
C1544		OPEN	OPEN	OPEN	OPEN
C1545		OPEN	OPEN	OPEN	OPEN
C1546		OPEN	OPEN	OPEN	OPEN
C1547		OPEN	OPEN	OPEN	OPEN
C1548		OPEN	OPEN	OPEN	OPEN
C1549		OPEN	OPEN	OPEN	OPEN
C1550		OPEN	OPEN	OPEN	OPEN
C1551		OPEN	OPEN	OPEN	OPEN
C1552		OPEN	OPEN	OPEN	OPEN
C1553		OPEN	OPEN	OPEN	OPEN
C1555		OPEN	OPEN	OPEN	OPEN
C1556		OPEN	OPEN	OPEN	OPEN
C1557		OPEN	OPEN	OPEN	OPEN
C1558		OPEN	OPEN	OPEN	OPEN
C1559		OPEN	OPEN	OPEN	OPEN
C1560		OPEN	OPEN	OPEN	OPEN
C1561		OPEN	OPEN	OPEN	OPEN
C1562		OPEN	OPEN	OPEN	OPEN
C1563		OPEN	OPEN	OPEN	OPEN
C1564		OPEN	OPEN	OPEN	OPEN
C1565		OPEN	OPEN	OPEN	OPEN
C1566		OPEN	OPEN	OPEN	OPEN
C1567		OPEN	OPEN	OPEN	OPEN
C1569		OPEN	OPEN	OPEN	OPEN
C1570		OPEN	OPEN	OPEN	OPEN
C1571		OPEN	OPEN	OPEN	OPEN
C1572		OPEN	OPEN	OPEN	OPEN

#1 DIFFERENCE AREA

JPN MODEL : MOUNT
etc : NO MOUNT

#2 DIFFERENCE AREA

NJM2235/CTL

SW1	SW2	Vout
L	L	Vin1
H	L	Vin2
L/H	H	Vin3

SHEET17 — MAIN_VY, YUVSW_Y1

SHEET16 — GR_RST, GRON, SHEET9 — DEC_Y, SHEET16 — MCmpi/OTH

SHEET9 — GRD0, GRD1, GRD2, GRD3, GRD4, GRD5, GRD6, GRD7, GRD8, GRD9

SHEET9,12,16 — SDA3A, SCL3A

SHEET9 — 4FSC

- NOTE -

Q	: NRSA63J-0R0X
NPN	: 2SC3928A/GR/-X
PNP	: 2SA1530A/GR/-X
*1	: NQR0413-003X
*2	: NQL092K-100X
*3	: NQL092K-2R2X
*4	: NQL092K-6R8X
*5	: MA111-X
LC1	: NQR0470-001X
LC2	: NQR0470-007X
LC3	: NQR0313-009X

ASSY NO. - MODEL LIST


SFL-0D002A	LT-26LC50BA/SA/BB
SFL-0D004A	LT-32LC50BA/SA
SFL-0D101A	LT-26X585KA
SFL-0D104A	LT-32X585KA
SFL-0D103A	LT-26X575KA
SFL-0D105A	LT-32X575KA
SFL-0D106A	LT-26X575TKA
SFL-0D107A	LT-32X575TKA
SFL-0D108A	LT-26X575KKA
SFL-0D109A	LT-32X575KKA
SFL-0D110A	LT-32X585TKA
SFL-0D201A	LT-26C50BJA/SJA/BJA
SFL-0D202A	LT-26C50BJA/SJA
SFL-0D203A	LT-32C50BJA/SJA/BJA
SFL-0D204A	LT-32D50BJA/SJA
SFL-0D301A	LT-Z26SX4BA/BEA
SFL-0D302A	LT-Z26SX4BSA/SSA
SFL-0D303A	LT-Z26SX4BAA
SFL-0D304A	LT-Z26SX4BCA
SFL-0D305A	LT-Z32SX4BA/BEA
SFL-0D306A	LT-Z32SX4BSA/SSA
SFL-0D307A	LT-Z32SX4BAA
SFL-0D308A	LT-Z32SX4BCA

DIGITAL SIGNAL PWB ASS'Y (1/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

#2 DIFFERENCE LIST
(JPN MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC0613A -02 (etc)	OLLC0613A -05 (etc)	OLLC0613A -09 (etc)	OLLC0613A -10 (etc)	OLLC0613A -13 (etc)
L1502	*1	OPEN	OPEN	OPEN	OPEN
C1507	0.1/16	OPEN	OPEN	OPEN	OPEN
IC1501	TC7WU45 FK -X	OPEN	OPEN	OPEN	OPEN
R1584	OPEN	0	0	0	0
R1523	1M	NCP18XH105J03RX	NCP18XH105J03RX	NCP18XH105J03RX	NCP18XH105J03RX

c10265010b_1110_10/12_0.0

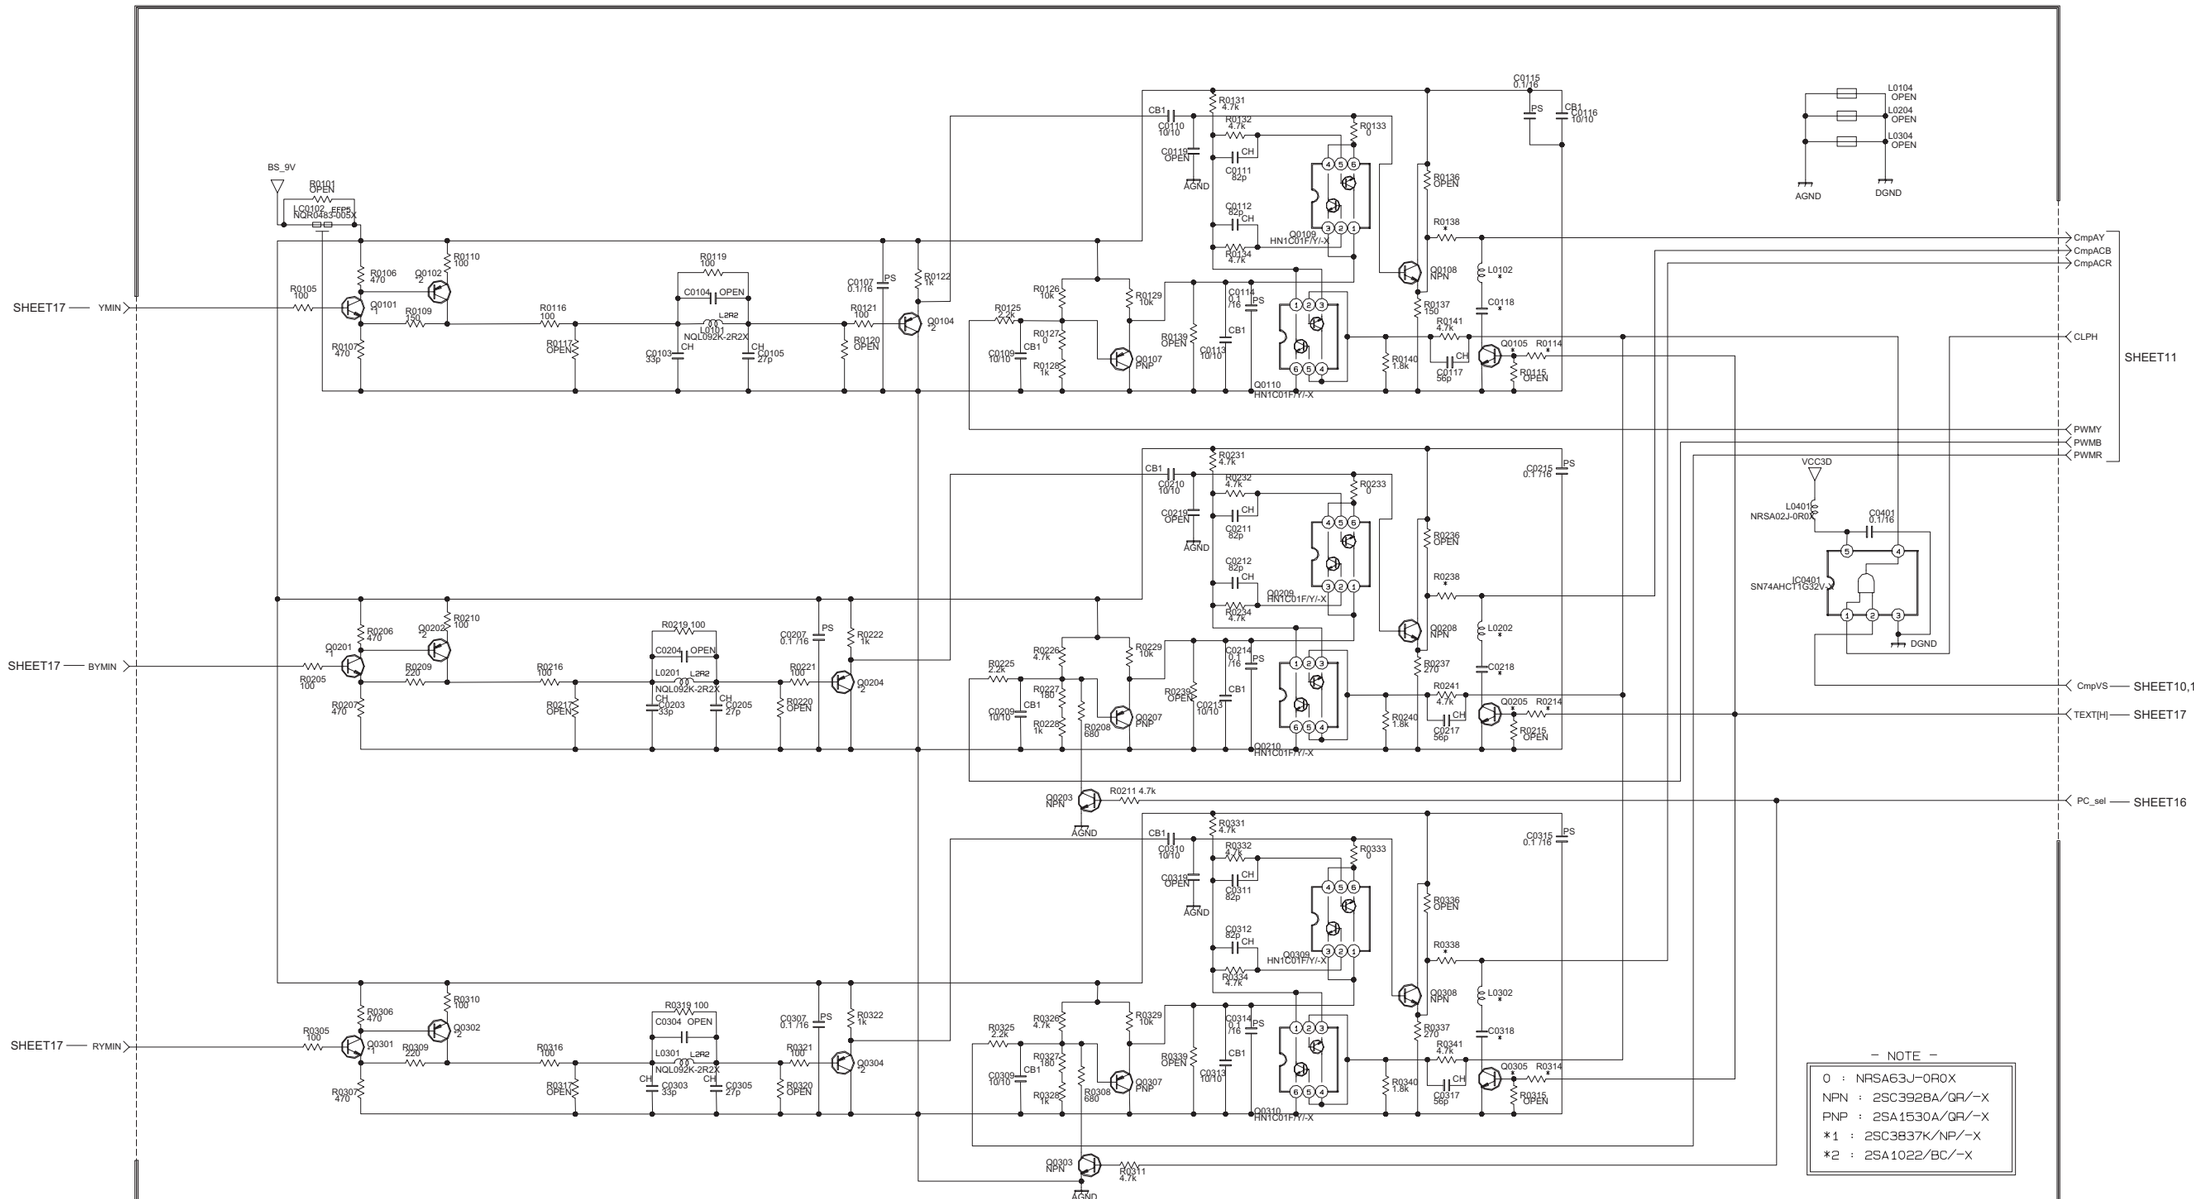

– NOTE –

0 : NRSA63J-0R0X
NPN : 2SC3928A/QR/-X
PNP : 2SA1530A/QR/-X
*1 : 2SC3837K/NP/-X
*2 : 2SA1022/BC/-X

ASSY NO. – MODEL LIST

SFL-0D002A	LT-26LC50BA/SA/BB
SFL-0D004A	LT-32LC50BA/SA
SFL-0D101A	LT-26X585KA
SFL-0D104A	LT-32X585KA
SFL-0D103A	LT-26X575KA
SFL-0D105A	LT-32X575KA
SFL-0D106A	LT-26X575TKA
SFL-0D107A	LT-32X575TKA
SFL-0D108A	LT-26X575KKA
SFL-0D109A	LT-32X575KKA
SFL-0D110A	LT-32X565TKA
SFL-0D201A	LT-26C50BJA/SJA/BJA
SFL-0D202A	LT-26C50BJA/SJA
SFL-0D203A	LT-32C50BJA/SJA/BJA
SFL-0D204A	LT-32C50BJA/SJA
SFL-0D301A	LT-Z26SX4BA/BEA
SFL-0D302A	LT-Z26SX4BSA/SSA
SFL-0D303A	LT-Z26SX4BAA
SFL-0D304A	LT-Z26SX4BCA
SFL-0D305A	LT-Z32SX4BA/BEA
SFL-0D306A	LT-Z32SX4BSA/SSA
SFL-0D307A	LT-Z32SX4BAA
SFL-0D308A	LT-Z32SX4BCA

#1 DIFFERENCE AREA
(EU, UK, ASIA MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134 -02 (etc)	OLLC06134 -05 (etc)	OLLC06134 -09 (etc)	OLLC06134 -10 (etc)	OLLC06134 -13 (etc)
C0118	OPEN	OPEN	150p CH	150p CH	150p CH
L0102	OPEN	OPEN	NQL092K -1R0X	NQL092K -1R0X	NQL092K -1R0X
Q0105	OPEN	OPEN	NPN	NPN	NPN
R0114	OPEN	OPEN	4.7k	4.7k	4.7k
R0138	0	0	33	33	33
C0218	OPEN	OPEN	150p CH	150p CH	150p CH
L0202	OPEN	OPEN	NQL092K -1R0X	NQL092K -1R0X	NQL092K -1R0X
Q0205	OPEN	OPEN	NPN	NPN	NPN
R0214	OPEN	OPEN	4.7k	4.7k	4.7k
R0238	0	0	33	33	33
C0318	OPEN	OPEN	150p CH	150p CH	150p CH
L0302	OPEN	OPEN	NQL092K -1R0X	NQL092K -1R0X	NQL092K -1R0X
Q0305	OPEN	OPEN	NPN	NPN	NPN
R0314	OPEN	OPEN	4.7k	4.7k	4.7k
R0338	0	0	33	33	33

DIGITAL SIGNAL PWB ASS'Y (2/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265001b_1110_1/12_0.0

— NOTE —

0 : NRSA63J-0R0X
NPN : 2SC3928A/QR/-X
PNP : 2SA1530A/QR/-X
DI : MA111-X
DTC : DTC124EKA-X
DTA : DTA124EKA-X
NRZ : NRZ0040-0R0X
CORE2 : NQR0489-002X
L1R5 : NQL092K-1R5X
L2R2 : NQL092K-2R2X
L4R7 : NQL092K-4R7X
L6R8 : NQL092K-6R8X
L10 : NQL79GM-100X
L22 : NQL79GM-220X
L27 : NQL092M-270X
L33 : NQL79GM-330X
L47 : NQL79GM-470X
L100 : NQL79GM-101X
L1R0 : NQL092K-1R0X

#1 DIFFERENCE AREA

SHEET15,17 — MAIN_CCD
SHEET7 — DEC_Y
SHEET17 — DEC_RY
DEC_BY
C_MAIN

IC1001
TC90A92AFG
A-D CONVERT/
YC SEPARAT/
COLOUR DEMOD

SHEET11

SHEET17 — C_SYNC
SHEET7,12,16 — SCL3A, SDA3A
SHEET16 — A92RES

#1 DIFFERENCE LIST
(JPN MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134 -02 (etc)	OLLC06134 -05 (etc)	OLLC06134 -09 (etc)	OLLC06134 -10 (etc)	OLLC06134 -13 (etc)
RA1001	OPEN	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV
RA1002	OPEN	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV
RA1003	OPEN	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV	NRC20J39 -103JV
R1003	OPEN	10k	10k	10k	10k
RA1011	NRC20J39 -103JV	OPEN	OPEN	OPEN	OPEN
RA1012	NRC20J39 -103JV	OPEN	OPEN	OPEN	OPEN
RA1013	NRC20J39 -103JV	OPEN	OPEN	OPEN	OPEN
R1016	22	OPEN	OPEN	OPEN	OPEN
R1017	OPEN	100	100	100	100
R1018	OPEN	3.3k	3.3k	3.3k	3.3k
Q1004	OPEN	PNP	PNP	PNP	PNP

#2 DIFFERENCE LIST
(EU,UK,ASIA MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134 -02 (etc)	OLLC06134 -05 (etc)	OLLC06134 -09 (etc)	OLLC06134 -10 (etc)	OLLC06134 -13 (etc)
R1010	560	560	18k	18k	18k
R1011	18k	18k	NQL093K -2810X	NQL093K -2810X	NQL093K -2810X
C1034	OPEN	OPEN	39p CH	39p CH	39p CH

ASSY NO. - MODEL LIST

SFL-0D002A	LT-26LC50BA/SA/BB
SFL-0D004A	LT-32LC50BA/SA
SFL-0D101A	LT-26X585KA
SFL-0D104A	LT-32X585KA
SFL-0D103A	LT-26X575KA
SFL-0D105A	LT-32X575KA
SFL-0D106A	LT-26X575TKA
SFL-0D107A	LT-32X575TKA
SFL-0D108A	LT-26X575KKA
SFL-0D109A	LT-32X575KKA
SFL-0D110A	LT-32X565TKA
SFL-0D201A	LT-26C50BUA/SUA/BJA
SFL-0D202A	LT-26C50BJA/SJA
SFL-0D203A	LT-32C50BUA/SUA/BJA
SFL-0D204A	LT-32C50BJA/SJA
SFL-0D301A	LT-Z26SX4BA/BEA
SFL-0D302A	LT-Z26SX4BSA/SSA
SFL-0D303A	LT-Z26SX4BAA
SFL-0D304A	LT-Z26SX4BCA
SFL-0D305A	LT-Z32SX4BA/BEA
SFL-0D306A	LT-Z32SX4BSA/SSA
SFL-0D307A	LT-Z32SX4BAA
SFL-0D308A	LT-Z32SX4BCA

DIGITAL SIGNAL PWB ASS'Y (3/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265002b_1110_2/12_0.0

DIGITAL SIGNAL PWB ASS'Y (4/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265009b_1110_9/12_0.0

#1 DIFFERENCE LIST

NOTE	UPN	US	EU	UK	ASIA
C2003	OPEN	0.1	0.1	0.1	OPEN
C2004	OPEN	0.1	0.1	0.1	OPEN
C2005	OPEN	0.1	0.1	0.1	OPEN
C2006	OPEN	0.1	0.1	0.1	OPEN
C2007	OPEN	0.1	0.1	0.1	OPEN
R2003	0	0	0	0	0
R2116	OPEN	0	OPEN	OPEN	OPEN
R2117	OPEN	0	OPEN	OPEN	OPEN
R2118	OPEN	0	OPEN	OPEN	OPEN
R2120	OPEN	0	OPEN	OPEN	OPEN
R2121	OPEN	0	OPEN	OPEN	OPEN
R2122	OPEN	0	OPEN	OPEN	OPEN
R2123	OPEN	0	OPEN	OPEN	OPEN

#2 DIFFERENCE LIST

NOTE	UPN	US	EU	UK	ASIA
C2004	OPEN	0.1	0.1	0.1	OPEN
C2005	OPEN	0.1	0.1	0.1	OPEN
R2148	OPEN	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X	OPEN
C2410	OPEN	0	0	0	0
C2411	OPEN	0	0	0	0
C2412	OPEN	0	0	0	0
C2413	OPEN	0	0	0	0
C2414	OPEN	0	0	0	0
C2415	OPEN	0	0	0	0
C2416	OPEN	0	0	0	0
C2417	OPEN	0	0	0	0
C2418	OPEN	0	0	0	0
C2419	OPEN	0	0	0	0
R2149	OPEN	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X
C2174	OPEN	0	0	0	0
C2175	OPEN	0	0	0	0
R2144	OPEN	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X

#3 DIFFERENCE LIST

NOTE	UPN	US	EU	UK	ASIA
C2001	OPEN	0.1	0.1	0.1	OPEN
C2002	OPEN	0.1	0.1	0.1	OPEN
R2013	0	0	OPEN	OPEN	OPEN
R2014	OPEN	0	0	0	0
R2015	OPEN	0	OPEN	OPEN	OPEN
R2016	OPEN	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X
R2017	OPEN	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X	NRD144J-0R0X

ASSY NO. – MODEL LIST

SFL-0D002A	LT-26LC50BA/SA/BB
SFL-0D004A	LT-32LC50BA/SA
SFL-0D101A	LT-26X585KA
SFL-0D104A	LT-32X585KA
SFL-0D103A	LT-26X575KA
SFL-0D105A	LT-32X575KA
SFL-0D106A	LT-26X575TKA
SFL-0D107A	LT-32X575TKA
SFL-0D108A	LT-26X575KKA
SFL-0D109A	LT-32X575KKA
SFL-0D110A	LT-32X565TKA
SFL-0D201A	LT-26C50BJA/SJA/BJA
SFL-0D202A	LT-26C50BJA/SJA
SFL-0D203A	LT-32C50BJA/SJA/BJA
SFL-0D204A	LT-32C50BJA/SJA
SFL-0D301A	LT-Z26SX4BA/BEA
SFL-0D302A	LT-Z26SX4BSA/SSA
SFL-0D303A	LT-Z26SX4BAA
SFL-0D304A	LT-Z26SX4BCA
SFL-0D305A	LT-Z32SX4BA/BEA
SFL-0D306A	LT-Z32SX4BSA/SSA
SFL-0D307A	LT-Z32SX4BAA
SFL-0D308A	LT-Z32SX4BCA

– NOTE –

0 : NRS463J-0R0X
NPN : 2SC3928A/GR/-X
PNP : 2SA1530A/GR/-X
#1 : DTC114EKA-X
#2 : NDP489-002X
NR2 : NRD2034-0R0W
0.1 : NDF31CZ-104X
10C/4 : NBE4D9H-107X
#3 : NDP413-003X

#1 DIFFERENCE AREA

#2 DIFFERENCE AREA

#3 DIFFERENCE AREA

FORMAT CONVERT/
MULTI SCREEN/
DETAIL ENCHANCE/
A-D CONVERT


EMC

RESET


SHEET10
SHEET16
SHEET10,17
SHEET8,10,17
SHEET9
SHEET12
SHEET10,12
SHEET12,16

DIGITAL SIGNAL PWB ASS'Y (5/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265003b_1110_3/12_0.0

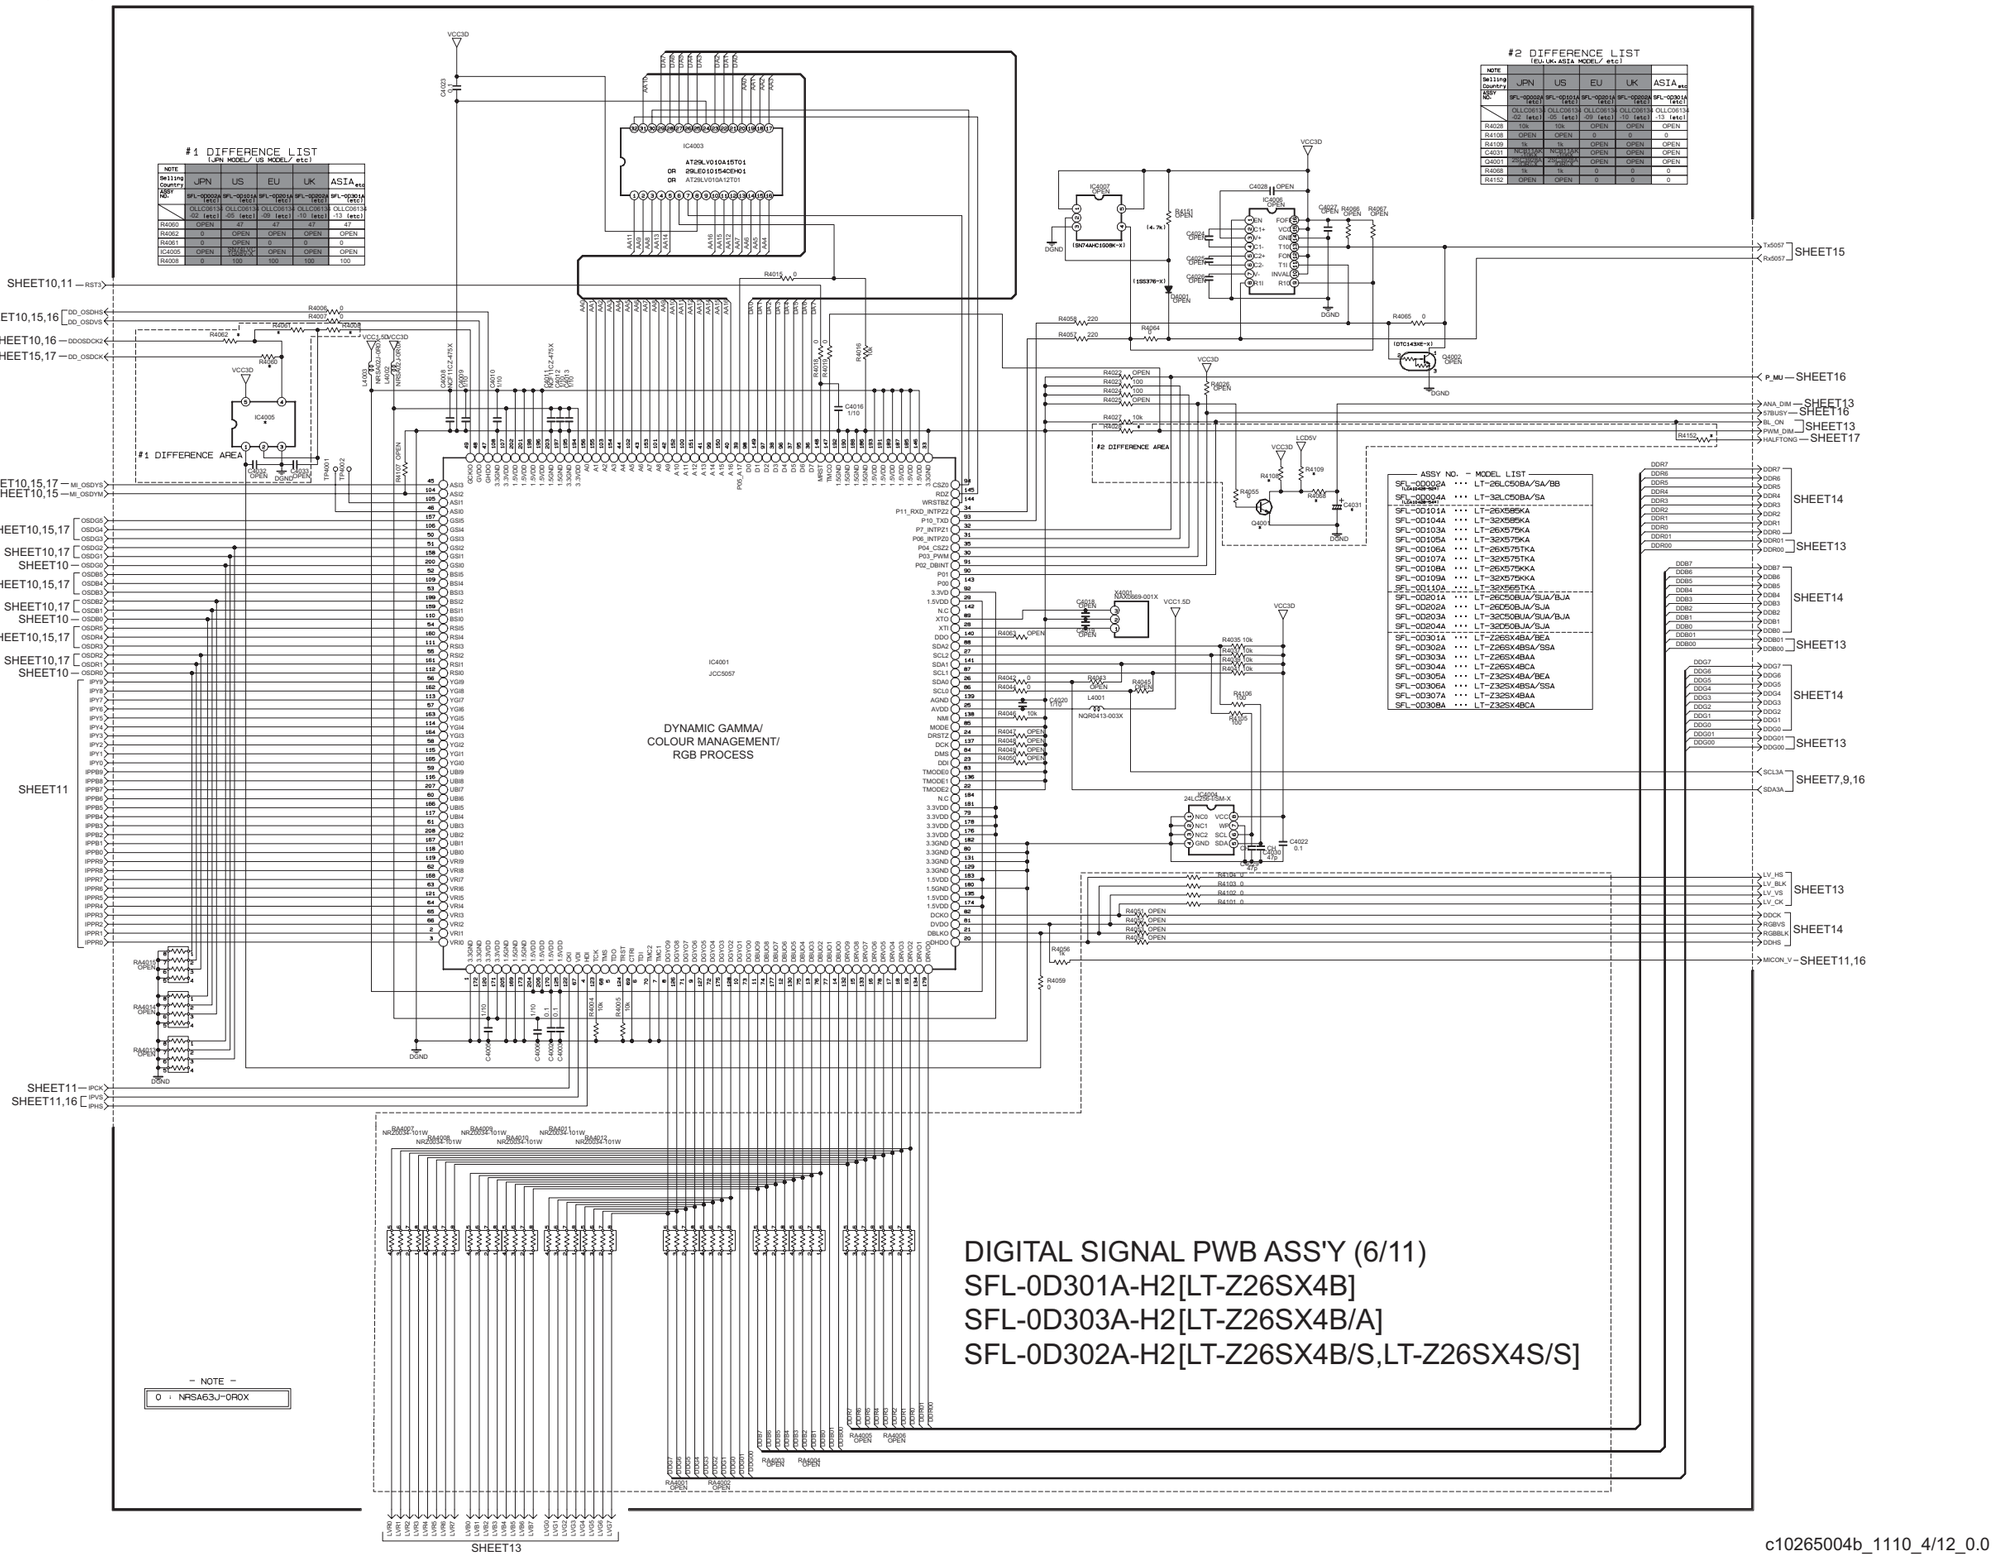

c10265004b_1110_4/12_0.0

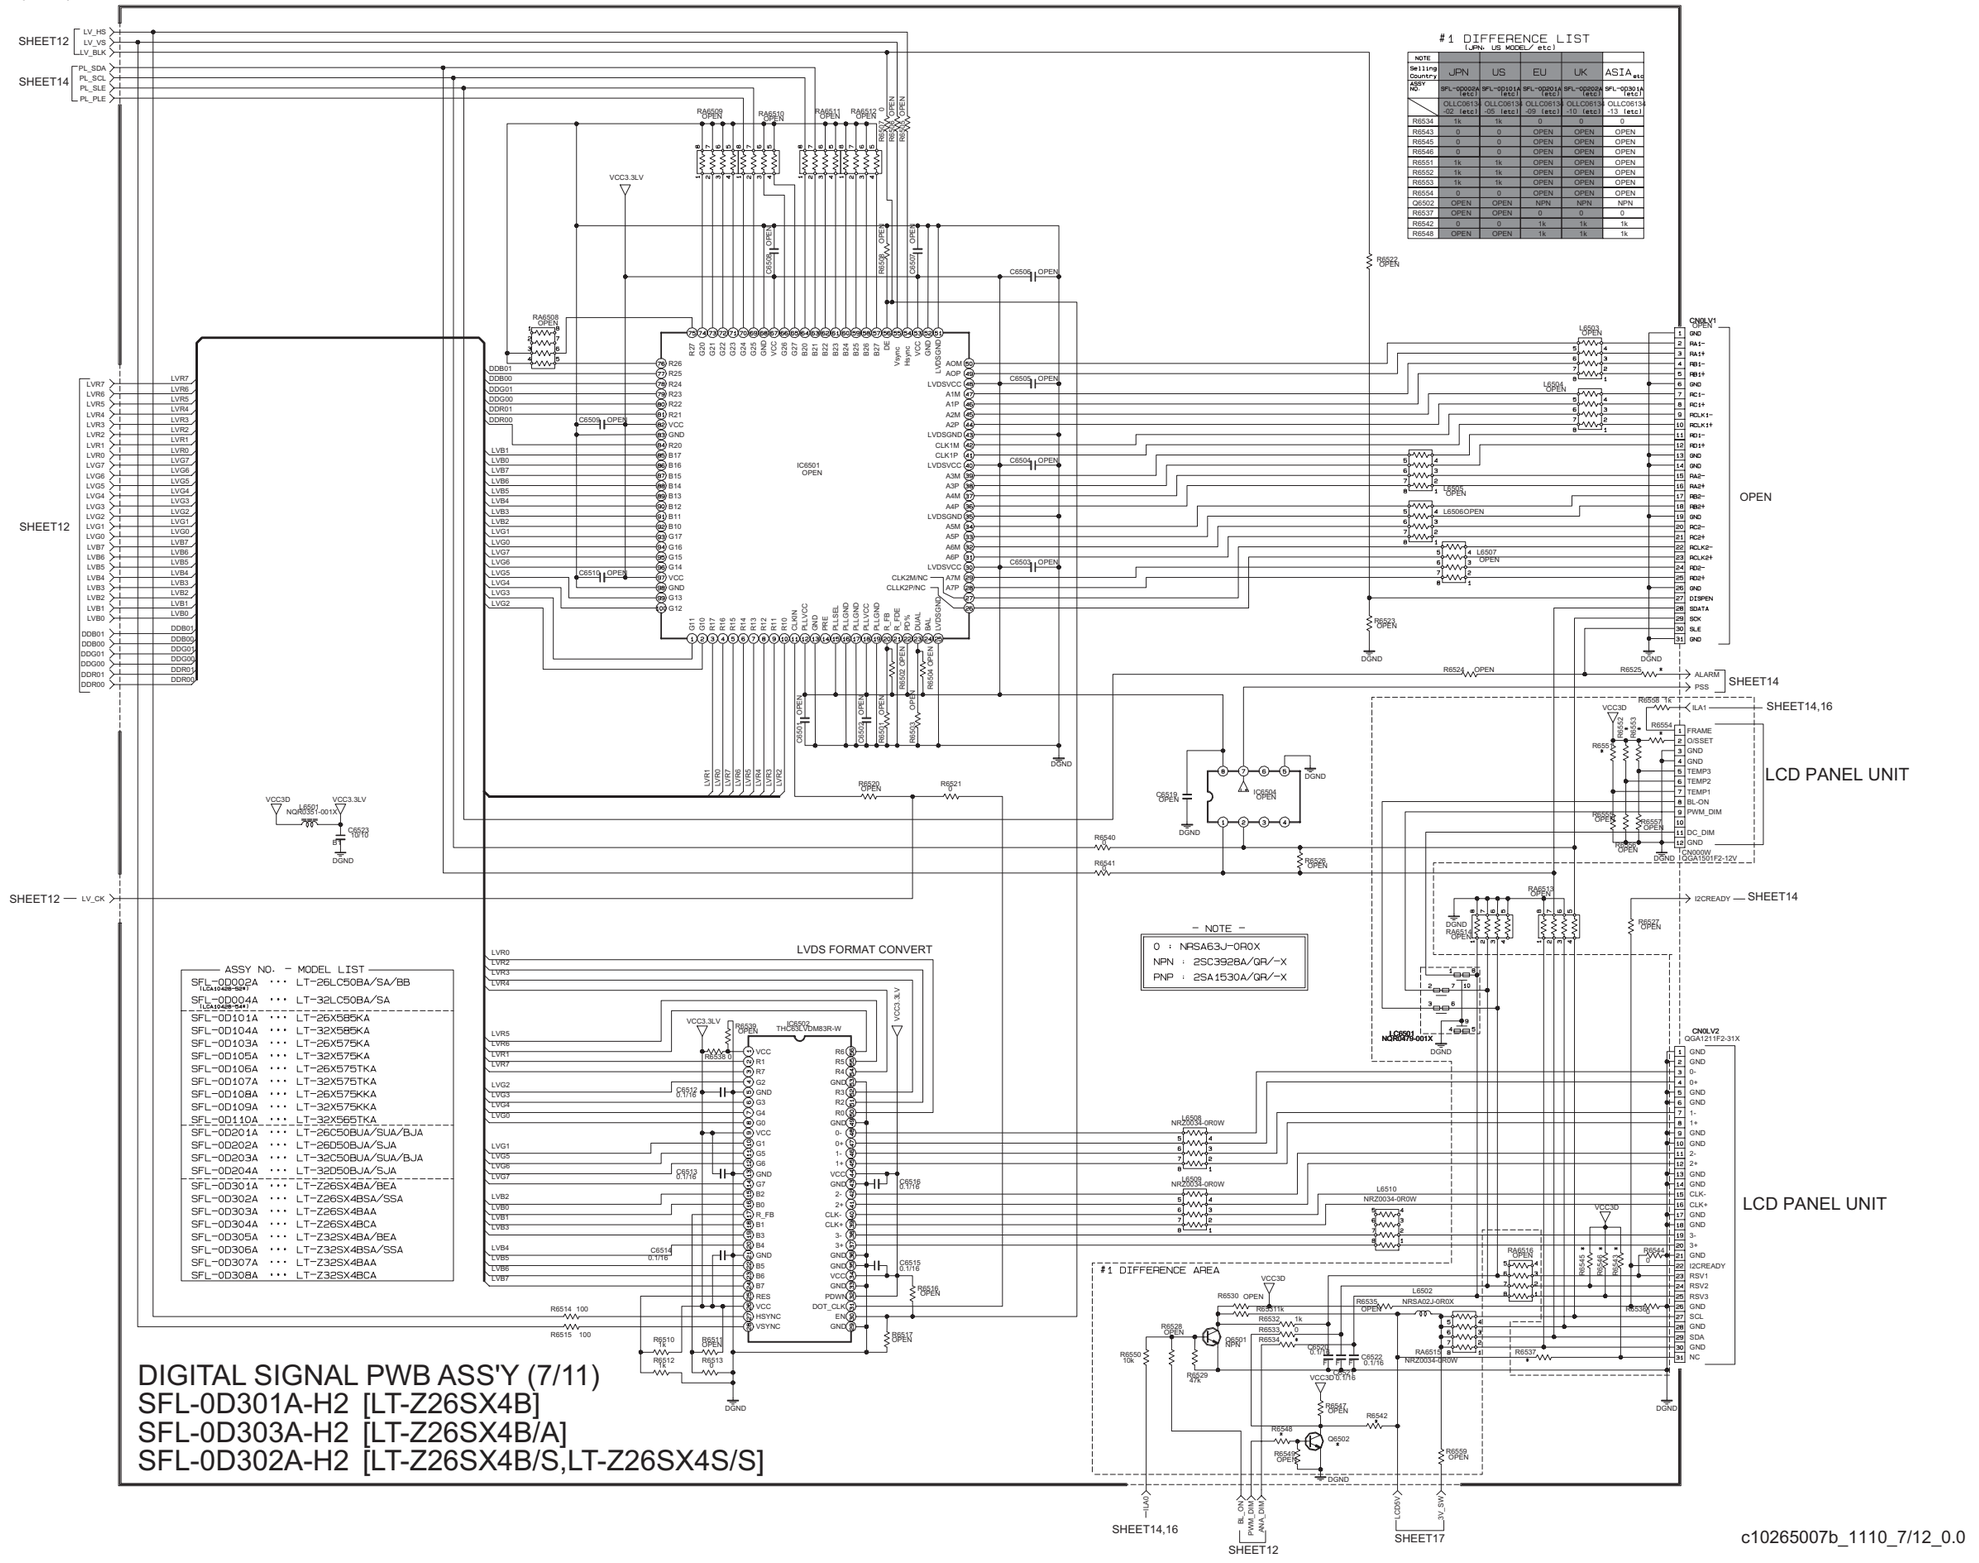
#1 DIFFERENCE LIST
(JPN, US MODEL, etc)
NOTE
Selling Country
ASSY NO.
JPN
US
EU
UK
ASIA etc
SFL-0D002A (etc)
SFL-0D101A (etc)
SFL-0D201A (etc)
SFL-0D202A (etc)
SFL-0D301A (etc)
OLLC0613-02 (etc)
OLLC0613-05 (etc)
OLLC0613-09 (etc)
OLLC0613-10 (etc)
OLLC0613-13 (etc)
R6534 1k 1k 0 0 0
R6543 0 0 OPEN OPEN OPEN
R6545 0 0 OPEN OPEN OPEN
R6546 0 0 OPEN OPEN OPEN
R6551 1k 1k OPEN OPEN OPEN
R6552 1k 1k OPEN OPEN OPEN
R6553 1k 1k OPEN OPEN OPEN
R6554 0 0 OPEN OPEN OPEN
Q6502 OPEN OPEN NPN NPN NPN
R6537 OPEN OPEN 0 0 0
R6542 0 0 1k 1k 1k
R6548 OPEN OPEN 1k 1k 1k
IC6501 OPEN
LVDS FORMAT CONVERT
IC6502 THC63LVDM83R-W
ASSY NO. - MODEL LIST
SFL-0D002A ••• LT-26LC50BA/SA/BB
(LCA104B-S04)
SFL-0D004A ••• LT-32LC50BA/SA
(LCA104B-S41)
SFL-0D101A ••• LT-26X585KA
SFL-0D104A ••• LT-32X585KA
SFL-0D103A ••• LT-26X575KA
SFL-0D105A ••• LT-32X575KA
SFL-0D106A ••• LT-26X575TKA
SFL-0D107A ••• LT-32X575TKA
SFL-0D108A ••• LT-26X575KKA
SFL-0D109A ••• LT-32X575KKA
SFL-0D110A ••• LT-32X565TKA
SFL-0D201A ••• LT-26C50BUA/SUA/BJA
SFL-0D202A ••• LT-26D50BJA/SJA
SFL-0D203A ••• LT-32C50BUA/SUA/BJA
SFL-0D204A ••• LT-32D50BJA/SJA
SFL-0D301A ••• LT-Z26SX4BA/BEA
SFL-0D302A ••• LT-Z26SX4BSA/SSA
SFL-0D303A ••• LT-Z26SX4BAA
SFL-0D304A ••• LT-Z26SX4BCA
SFL-0D305A ••• LT-Z32SX4BA/BEA
SFL-0D306A ••• LT-Z32SX4BSA/SSA
SFL-0D307A ••• LT-Z32SX4BAA
SFL-0D308A ••• LT-Z32SX4BCA
- NOTE -
0 : NRSA63J-0R0X
NPN : 2SC3928A/QR/-X
PNP : 2SA1530A/QR/-X
#1 DIFFERENCE AREA
LCD PANEL UNIT
LCD PANEL UNIT
OPEN
SHEET12
SHEET14
SHEET14,16
SHEET12
SHEET17
SHEET14,16
SHEET12
DIGITAL SIGNAL PWB ASS'Y (7/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]
c10265007b_1110_7/12_0.0

DIGITAL SIGNAL PWB ASS'Y (8/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

ASSY NO.	MODEL LIST
SFL-0D002A (LCA10428-524)	LT-26LC50BA/SA/BB
SFL-0D004A (LCA10428-544)	LT-32LC50BA/SA
SFL-0D101A	LT-26X585KA
SFL-0D104A	LT-32X585KA
SFL-0D103A	LT-26X575KA
SFL-0D105A	LT-32X575KA
SFL-0D106A	LT-26X575TKA
SFL-0D107A	LT-32X575TKA
SFL-0D108A	LT-26X575KKA
SFL-0D109A	LT-32X575KKA
SFL-0D110A	LT-32X565TKA
SFL-0D201A	LT-26D50BUA/SUA/BJA
SFL-0D202A	LT-26D50BJA/SJA
SFL-0D203A	LT-32C50BUA/SUA/BJA
SFL-0D204A	LT-32D50BJA/SJA
SFL-0D301A	LT-Z26SX4BA/BEA
SFL-0D302A	LT-Z26SX4BSA/SSA
SFL-0D303A	LT-Z26SX4BAA
SFL-0D304A	LT-Z26SX4BCA
SFL-0D305A	LT-Z32SX4BA/BEA
SFL-0D306A	LT-Z32SX4BSA/SSA
SFL-0D307A	LT-Z32SX4BAA
SFL-0D308A	LT-Z32SX4BCA


– NOTE –

0 : NRSA63J-0R0X
NPN : 2SC3928A/QR/–X
PNP : 2SA1530A/QR/–X
NRZ22 : NRZ0034-220W
*1 : NQR0389-001X
*2 : BAV99L–X
*3 : 2SK1374–X
*4 : MA111–X
*5 : 1SS355–X

NO MOUNT

MOUNT

DIGITAL SIGNAL PWB CIRCUIT DIAGRAM (9/11) SHEET 15

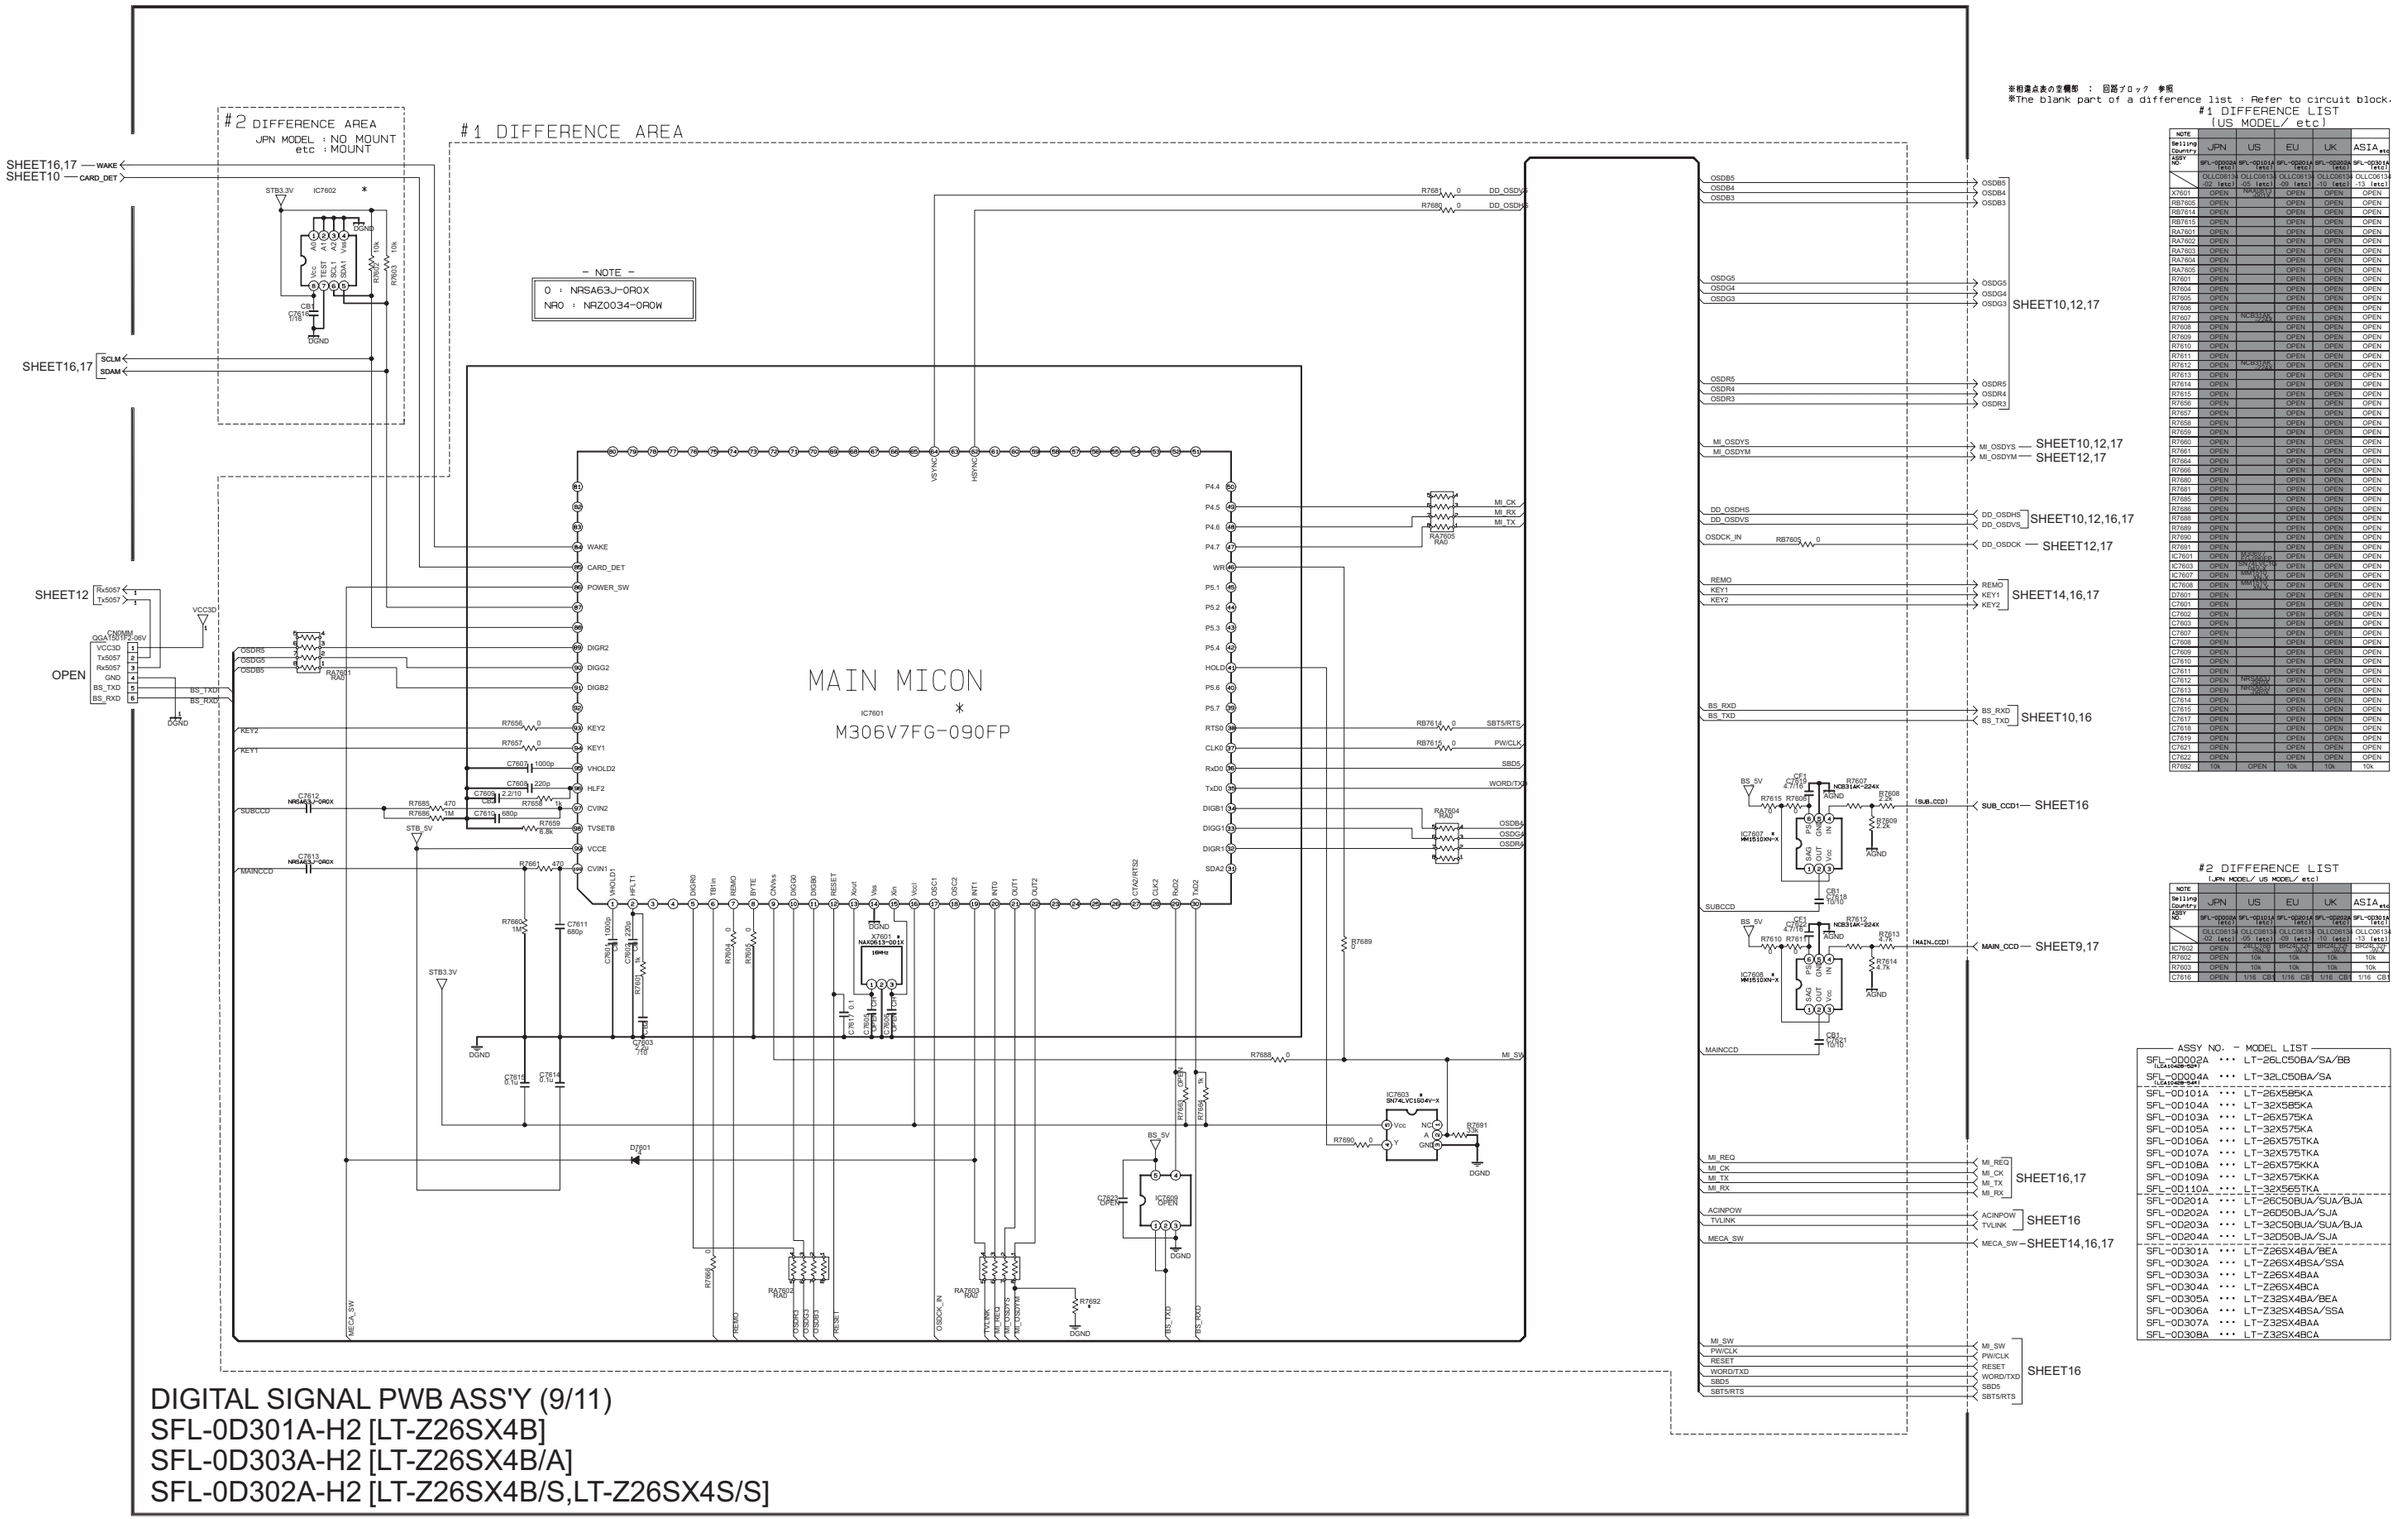

※相違点表の空欄部 : 回路ブロック 参照
※The blank part of a difference list : Refer to circuit block.

#1 DIFFERENCE LIST
(US MODEL/ etc)

NOTE / Selling Country / ASSY NO.	JPN	US	EU	UK	ASIA
	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC0613-02 (etc)	OLLC0613-05 (etc)	OLLC0613-09 (etc)	OLLC0613-10 (etc)	OLLC0613-13 (etc)
X7601	OPEN	10.000MHz	OPEN	OPEN	OPEN
RB7605	OPEN		OPEN	OPEN	OPEN
RB7614	OPEN		OPEN	OPEN	OPEN
RB7615	OPEN		OPEN	OPEN	OPEN
RA7601	OPEN		OPEN	OPEN	OPEN
RA7602	OPEN		OPEN	OPEN	OPEN
RA7603	OPEN		OPEN	OPEN	OPEN
RA7604	OPEN		OPEN	OPEN	OPEN
RA7605	OPEN		OPEN	OPEN	OPEN
R7601	OPEN		OPEN	OPEN	OPEN
R7604	OPEN		OPEN	OPEN	OPEN
R7605	OPEN		OPEN	OPEN	OPEN
R7606	OPEN		OPEN	OPEN	OPEN
R7607	OPEN	NCB31AK-224X	OPEN	OPEN	OPEN
R7608	OPEN		OPEN	OPEN	OPEN
R7609	OPEN		OPEN	OPEN	OPEN
R7610	OPEN		OPEN	OPEN	OPEN
R7611	OPEN		OPEN	OPEN	OPEN
R7612	OPEN	NCB31AK-224X	OPEN	OPEN	OPEN
R7613	OPEN		OPEN	OPEN	OPEN
R7614	OPEN		OPEN	OPEN	OPEN
R7615	OPEN		OPEN	OPEN	OPEN
R7656	OPEN		OPEN	OPEN	OPEN
R7657	OPEN		OPEN	OPEN	OPEN
R7659	OPEN		OPEN	OPEN	OPEN
R7660	OPEN		OPEN	OPEN	OPEN
R7661	OPEN		OPEN	OPEN	OPEN
R7664	OPEN		OPEN	OPEN	OPEN
R7666	OPEN		OPEN	OPEN	OPEN
R7680	OPEN		OPEN	OPEN	OPEN
R7681	OPEN		OPEN	OPEN	OPEN
R7685	OPEN		OPEN	OPEN	OPEN
R7688	OPEN		OPEN	OPEN	OPEN
R7689	OPEN		OPEN	OPEN	OPEN
R7690	OPEN		OPEN	OPEN	OPEN
R7691	OPEN		OPEN	OPEN	OPEN
IC7601	OPEN	M306V7FG-090FP	OPEN	OPEN	OPEN
IC7603	OPEN	SN74LVC1G04Y-X	OPEN	OPEN	OPEN
IC7607	OPEN	NJM1510V-X	OPEN	OPEN	OPEN
IC7608	OPEN	NJM1510DV-X	OPEN	OPEN	OPEN
D7601	OPEN		OPEN	OPEN	OPEN
C7601	OPEN		OPEN	OPEN	OPEN
C7602	OPEN		OPEN	OPEN	OPEN
C7603	OPEN		OPEN	OPEN	OPEN
C7607	OPEN		OPEN	OPEN	OPEN
C7608	OPEN		OPEN	OPEN	OPEN
C7609	OPEN		OPEN	OPEN	OPEN
C7610	OPEN		OPEN	OPEN	OPEN
C7611	OPEN		OPEN	OPEN	OPEN
C7612	OPEN	NRSA63J-0R0X	OPEN	OPEN	OPEN
C7613	OPEN	NRSA63J-0R0X	OPEN	OPEN	OPEN
C7614	OPEN		OPEN	OPEN	OPEN
C7615	OPEN		OPEN	OPEN	OPEN
C7617	OPEN		OPEN	OPEN	OPEN
C7618	OPEN		OPEN	OPEN	OPEN
C7619	OPEN		OPEN	OPEN	OPEN
C7621	OPEN		OPEN	OPEN	OPEN
C7622	OPEN		OPEN	OPEN	OPEN
R7692	10k	OPEN	10k	10k	10k

#2 DIFFERENCE LIST
(JPN MODEL/ US MODEL/ etc)

NOTE / Selling Country / ASSY NO.	JPN	US	EU	UK	ASIA
	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC0613-02 (etc)	OLLC0613-05 (etc)	OLLC0613-09 (etc)	OLLC0613-10 (etc)	OLLC0613-13 (etc)
IC7602	OPEN	24LC16B/SN-X	BR24L16F-WE2	BR24L16F-WE2	BR24L16F-WE2
R7602	OPEN	10k	10k	10k	10k
R7603	OPEN	10k	10k	10k	10k
C7618	OPEN	1/16 CB1	1/16 CB1	1/16 CB1	1/16 CB1

ASSY NO. - MODEL LIST

SFL-0D002A (LEA1048-004Y)	•••	LT-26LC50BA/SA/BB
SFL-0D004A (LEA1048-004Y)	•••	LT-32LC50BA/SA
SFL-0D101A	•••	LT-26X585KA
SFL-0D104A	•••	LT-32X585KA
SFL-0D103A	•••	LT-26X575KA
SFL-0D105A	•••	LT-32X575KA
SFL-0D106A	•••	LT-26X575TKA
SFL-0D107A	•••	LT-32X575TKA
SFL-0D108A	•••	LT-26X575KKA
SFL-0D109A	•••	LT-32X575KKA
SFL-0D110A	•••	LT-32X565TKA
SFL-0D201A	•••	LT-26C50BUA/SUA/BJA
SFL-0D202A	•••	LT-26D50BJA/SJA
SFL-0D203A	•••	LT-32C50BUA/SUA/BJA
SFL-0D204A	•••	LT-32D50BJA/SJA
SFL-0D301A	•••	LT-Z26SX4BA/BEA
SFL-0D302A	•••	LT-Z26SX4BSA/SSA
SFL-0D303A	•••	LT-Z26SX4BAA
SFL-0D304A	•••	LT-Z26SX4BCA
SFL-0D305A	•••	LT-Z32SX4BA/BEA
SFL-0D306A	•••	LT-Z32SX4BSA/SSA
SFL-0D307A	•••	LT-Z32SX4BAA
SFL-0D308A	•••	LT-Z32SX4BCA

DIGITAL SIGNAL PWB ASS'Y (9/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265005b_1110_5/12_0.0

DIGITAL SIGNAL PWB ASS'Y (10/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

– NOTE –

0 : NRSA63J-0R0X
NPN : 2SC3928A/GR/-X
PNP : 2SA1530A/GR/-X
0.1 : NCF31CZ-104X
DTA : DTA144EKA-X
DTC : DTC144EKA-X
*1 : NQR0450-001X
*2 : NQR0415-005X
*3 : NQR0498-001X
*4 : NQR0416-001X

#1 DIFFERENCE LIST
[JPN MODEL/ etc]

NOTE Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-1D0000W -02 (etc)	SFL-0D0314 OLLC0513A -02 (etc)	SFL-1D0001A OLLC0513A -05 (etc)	SFL-0D0209 OLLC0513A -09 (etc)	SFL-0D0210 OLLC0513A -10 (etc)	SFL-0D0214 OLLC0513A -13 (etc)
R7030	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7053	100	OPEN	OPEN	OPEN	OPEN	OPEN
R7055	100	OPEN	OPEN	OPEN	OPEN	OPEN
R7112	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7013	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7050	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7036	0	OPEN	OPEN	OPEN	OPEN	OPEN
C7015	0.001	OPEN	OPEN	OPEN	OPEN	OPEN
J7002	CP1-2003	OPEN	OPEN	OPEN	OPEN	OPEN
R7125	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7129	47	OPEN	OPEN	OPEN	OPEN	OPEN
D7004	MA111-X	OPEN	OPEN	OPEN	OPEN	OPEN
R7131	0	OPEN	OPEN	OPEN	OPEN	OPEN
Q7401	2SK1374-X	OPEN	OPEN	OPEN	OPEN	OPEN
Q7402	2SK1374-X	OPEN	OPEN	OPEN	OPEN	OPEN
R7402	10k	OPEN	OPEN	OPEN	OPEN	OPEN
C7302	1000p 500V	OPEN	OPEN	OPEN	OPEN	OPEN
R7311	1k	OPEN	OPEN	OPEN	OPEN	OPEN
R7312	100	OPEN	OPEN	OPEN	OPEN	OPEN
R7313	100	OPEN	OPEN	OPEN	OPEN	OPEN
C7303	1000p 500V	OPEN	OPEN	OPEN	OPEN	OPEN
C7304	0.01	OPEN	OPEN	OPEN	OPEN	OPEN
C7305	1/10	OPEN	OPEN	OPEN	OPEN	OPEN
C7306	0.1	OPEN	OPEN	OPEN	OPEN	OPEN
R7351	22	OPEN	OPEN	OPEN	OPEN	OPEN
R7352	22	OPEN	OPEN	OPEN	OPEN	OPEN
R7353	6.8k	OPEN	OPEN	OPEN	OPEN	OPEN
R7354	6.8k	OPEN	OPEN	OPEN	OPEN	OPEN
R7355	12k	OPEN	OPEN	OPEN	OPEN	OPEN
R7356	12k	OPEN	OPEN	OPEN	OPEN	OPEN
R7157	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7074	10k	OPEN	OPEN	OPEN	OPEN	OPEN
R7075	10k	OPEN	OPEN	OPEN	OPEN	OPEN
R7141	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7142	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7136	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7114	0	OPEN	OPEN	OPEN	OPEN	OPEN
R7032	0	OPEN	OPEN	OPEN	OPEN	OPEN

#2 DIFFERENCE LIST
[EU, UK MODEL/ etc]

NOTE Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-1D0000W -02 (etc)	SFL-0D0314 OLLC0513A -02 (etc)	SFL-1D0001A OLLC0513A -05 (etc)	SFL-0D0209 OLLC0513A -09 (etc)	SFL-0D0210 OLLC0513A -10 (etc)	SFL-0D0214 OLLC0513A -13 (etc)
Q7201	OPEN	OPEN	PNP	PNP	PNP	OPEN
Q7202	OPEN	OPEN	NPN	NPN	NPN	OPEN
Q7203	OPEN	OPEN	NPN	NPN	NPN	OPEN
Q7204	OPEN	OPEN	NPN	NPN	NPN	OPEN
Q7205	OPEN	OPEN	NPN	NPN	NPN	OPEN
D7201	OPEN	OPEN	MA111-X	MA111-X	MA111-X	OPEN
D7202	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN
C7201	OPEN	OPEN	1/10	1/10	1/10	OPEN
C7202	OPEN	OPEN	0.1/16	0.1/16	0.1/16	OPEN
R7202	OPEN	OPEN	27k	27k	27k	OPEN
R7203	OPEN	OPEN	220	220	220	OPEN
R7204	OPEN	OPEN	10k	10k	10k	OPEN
R7205	OPEN	OPEN	1k	1k	1k	OPEN
R7206	OPEN	OPEN	10k	10k	10k	OPEN
R7207	OPEN	OPEN	10k	10k	10k	OPEN
R7208	OPEN	OPEN	1k	1k	1k	OPEN
R7209	OPEN	OPEN	1.5k	1.5k	1.5k	OPEN
R7210	OPEN	OPEN	10k	10k	10k	OPEN
R7211	OPEN	OPEN	10k	10k	10k	OPEN
R7212	OPEN	OPEN	47k	47k	47k	OPEN
R7213	OPEN	OPEN	1k	1k	1k	OPEN
R7078	OPEN	OPEN	0	0	0	OPEN
R7079	OPEN	OPEN	0	0	0	OPEN

#3 DIFFERENCE LIST
[US MODEL/ etc]

NOTE Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-1D0000W (etc)	SFL-0D0314 (etc)	SFL-1D0001A (etc)	SFL-0D0209 (etc)	SFL-0D0210 (etc)
	OLLC0513A -02 (etc)	OLLC0513A -05 (etc)	OLLC0513A -09 (etc)	OLLC0513A -10 (etc)	OLLC0513A -13 (etc)
R7122	OPEN	0	OPEN	OPEN	OPEN	OPEN
R7160	OPEN	0	OPEN	OPEN	OPEN	OPEN
R7108	100	1k	100	100	100	100
R7063	150k	OPEN	150k	150k	150k	150k


#4 DIFFERENCE LIST
[JPN MODEL/ US MODEL/ etc]

NOTE Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-1D0000W (etc)	SFL-0D0314 (etc)	SFL-1D0001A (etc)	SFL-0D0209 (etc)	SFL-0D0210 (etc)
	OLLC0513A -02 (etc)	OLLC0513A -05 (etc)	OLLC0513A -09 (etc)	OLLC0513A -10 (etc)	OLLC0513A -13 (etc)
R7151	OPEN	OPEN	27k	27k	27k	27k
R7158	OPEN	OPEN	27k	27k	27k	27k
R7060	33k	22k	47k	47k	47k	47k
R7061	150k	33k	100k	100k	100k	100k
C7012	1/10	0.015	0.1/16	0.1/16	0.1/16	0.1/16
R7058	1k	22k	1k	1k	1k	1k
R7059	OPEN	33k	33k	33k	33k	33k
R7037	0	0	OPEN	OPEN	OPEN	OPEN
R7133	0	0	OPEN	OPEN	OPEN	OPEN
IC7001	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
IC7002	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
IC7003	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
R7144	OPEN	OPEN	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
R7145	OPEN	OPEN	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
R7146	OPEN	OPEN	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR	NC4053UBDTR
C7203	0.047	0.047	0.1/16	0.1/16	0.1/16	0.1/16
R7040	OPEN	OPEN	10k	10k	10k	10k

SUB(CHASSIS)
CPU

CONNECTOR PWB ASS'Y
CN0001 (SHEET18)

DIGITAL SIGNAL PWB CIRCUIT DIAGRAM (11/11) SHEET 17

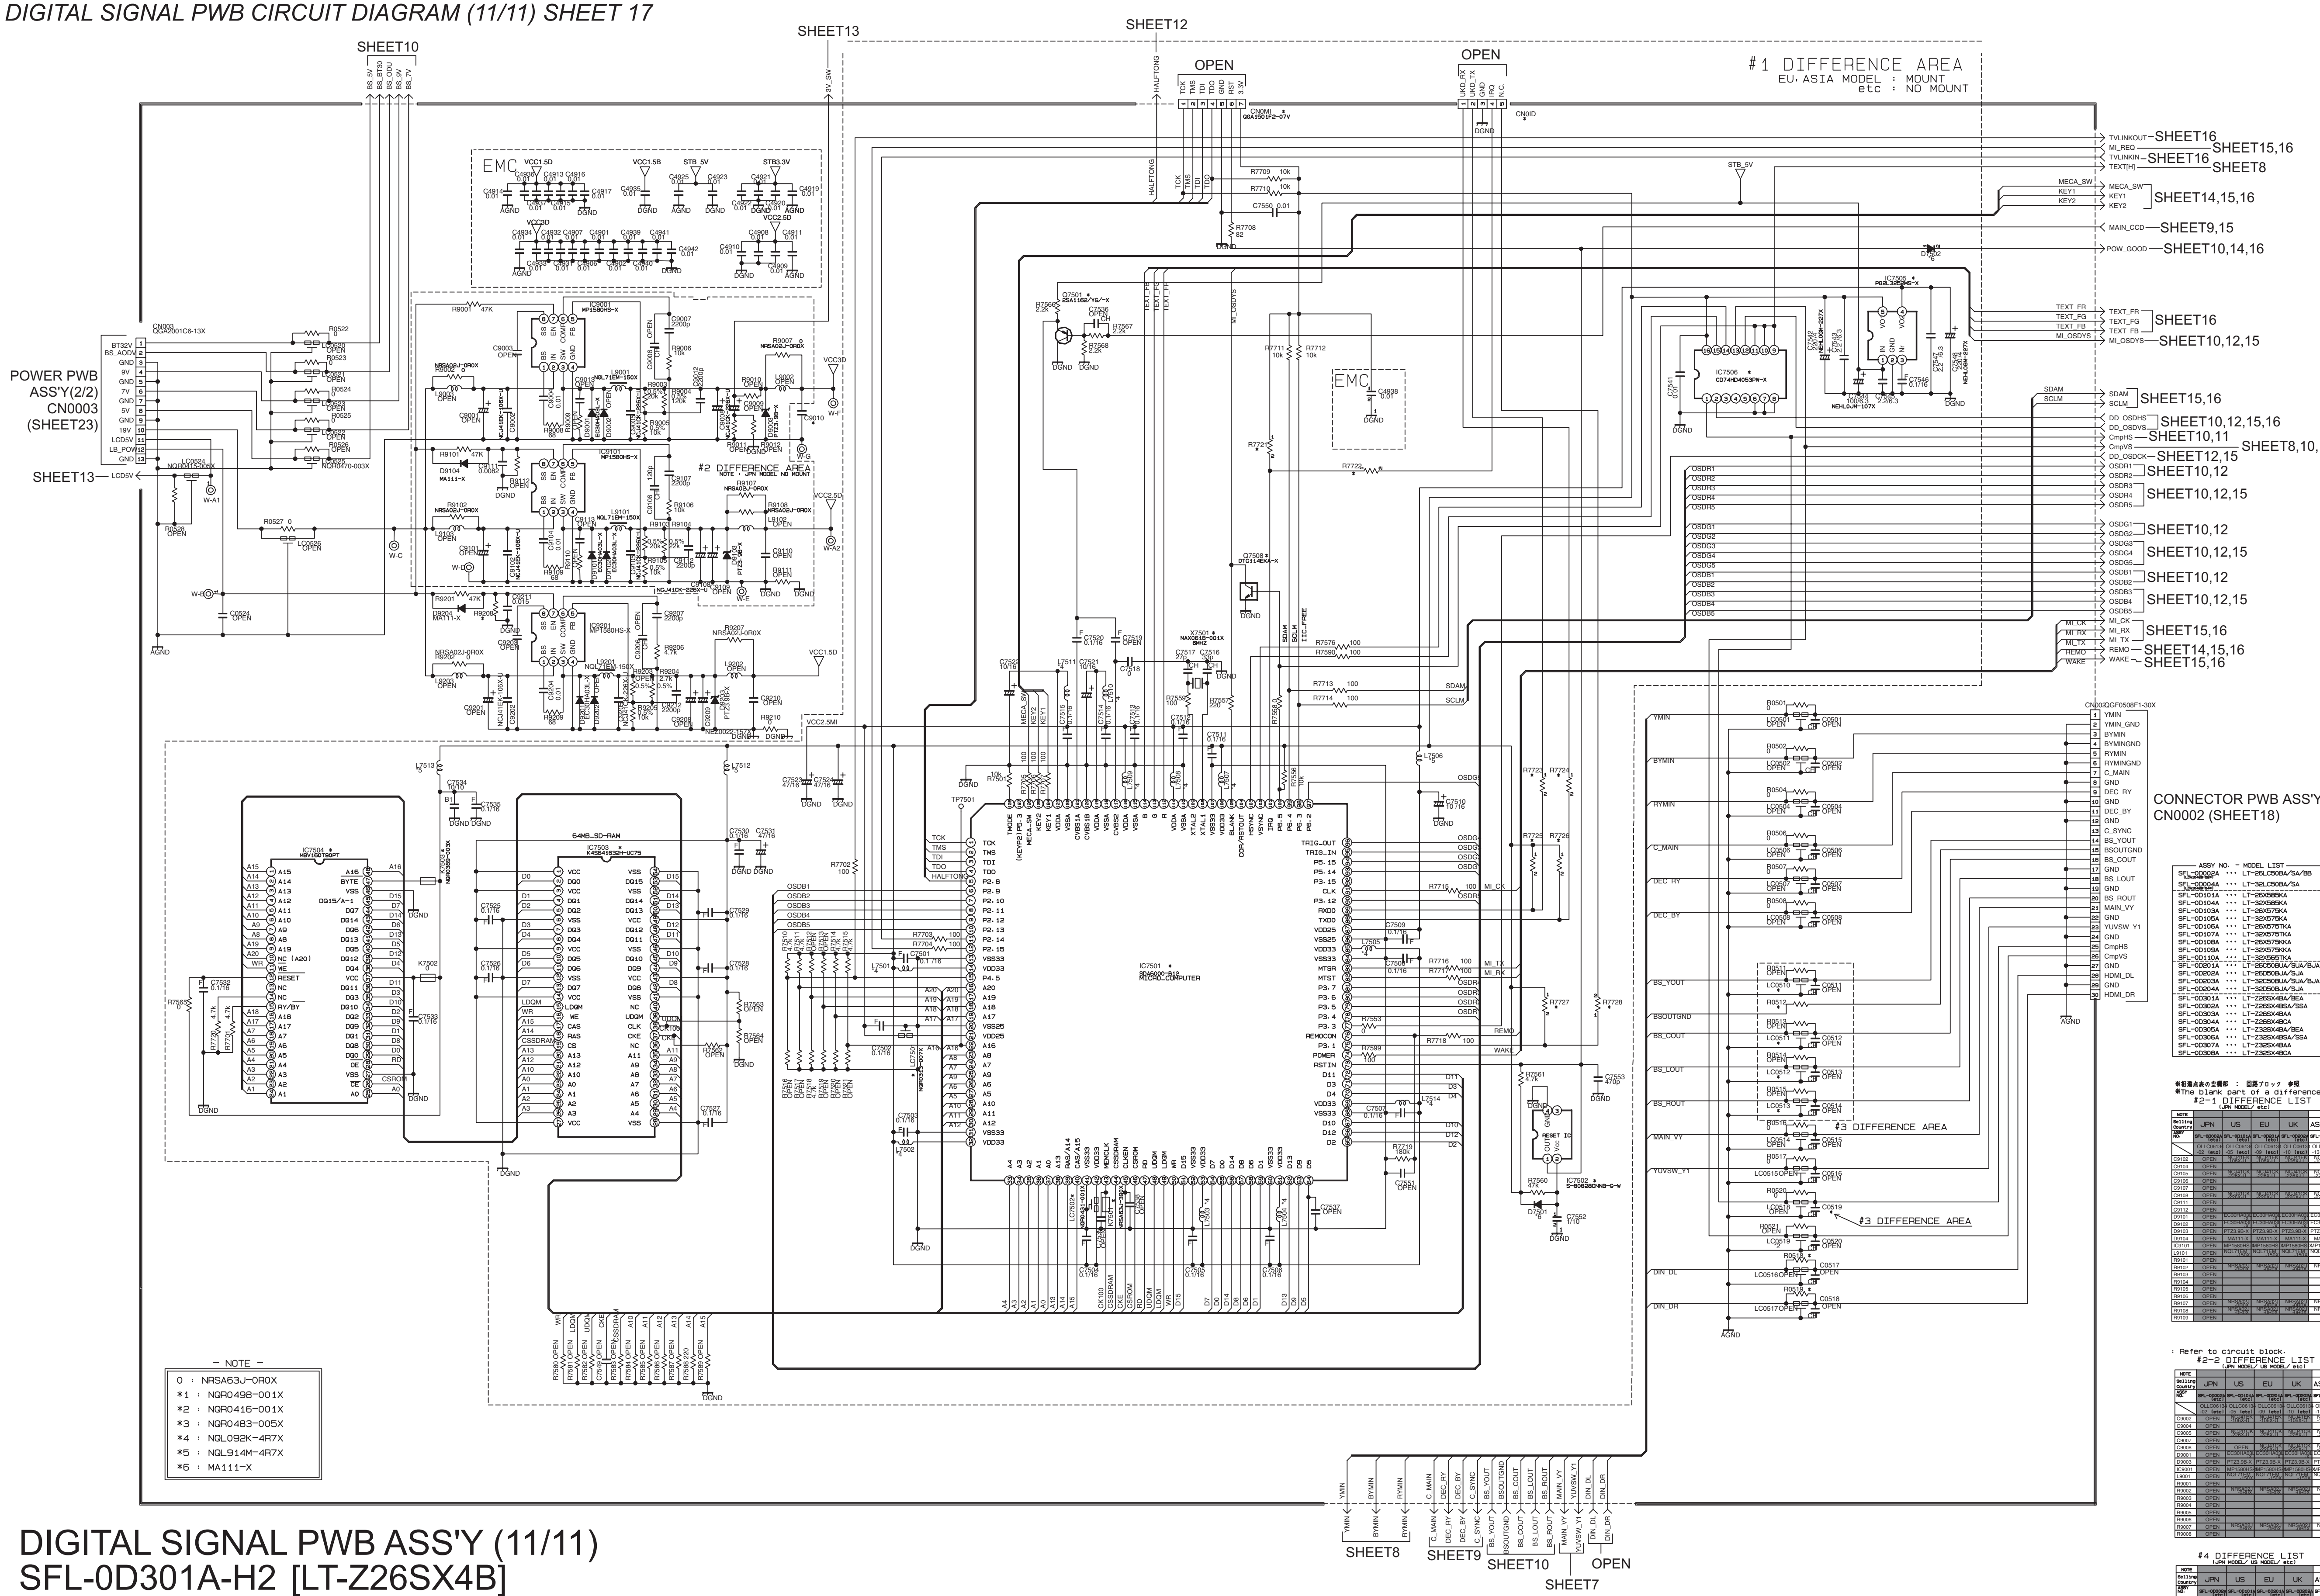

ASSY NO. - MODEL LIST

SFL-0D002A ··· LT-26LC50BA/SA/BB
SFL-0D004A ··· LT-32LC50BA/SA
SFL-0D101A ··· LT-26X585KA
SFL-0D104A ··· LT-32X585KA
SFL-0D103A ··· LT-26X575KA
SFL-0D105A ··· LT-32X575KA
SFL-0D106A ··· LT-26X575TKA
SFL-0D107A ··· LT-32X575TKA
SFL-0D108A ··· LT-26X575KKA
SFL-0D109A ··· LT-32X575KKA
SFL-0D110A ··· LT-32X565TKA
SFL-0D201A ··· LT-26C50BUA/SUA/BJA
SFL-0D202A ··· LT-26D50BJA/SJA
SFL-0D203A ··· LT-32C50BUA/SUA/BJA
SFL-0D204A ··· LT-32D50BJA/SJA
SFL-0D301A ··· LT-Z26SX4BA/BEA
SFL-0D302A ··· LT-Z26SX4BSA/SSA
SFL-0D303A ··· LT-Z26SX4BAA
SFL-0D304A ··· LT-Z26SX4BCA
SFL-0D305A ··· LT-Z32SX4BA/BEA
SFL-0D306A ··· LT-Z32SX4BSA/SSA
SFL-0D307A ··· LT-Z32SX4BAA
SFL-0D308A ··· LT-Z32SX4BCA

※相違点表の空欄部 : 回路ブロック 参照
※The blank part of a difference list : Refer to circuit block.

#1 DIFFERENCE LIST
(EU, UK, ASIA MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
R7701	OPEN	OPEN			
R7702	OPEN	OPEN			
R7703	OPEN	OPEN			
R7704	OPEN	OPEN			
R7705	OPEN	OPEN			
R7706	OPEN	OPEN			
R7707	OPEN	OPEN			
R7708	OPEN	OPEN			
R7709	OPEN	OPEN			
R7710	OPEN	OPEN			
R7711	OPEN	OPEN			
R7712	OPEN	OPEN			
R7713	OPEN	OPEN			
R7714	OPEN	OPEN			
R7715	OPEN	OPEN			
R7716	OPEN	OPEN			
R7717	OPEN	OPEN			
R7718	OPEN	OPEN			
R7720	OPEN	OPEN			
X7501	OPEN	OPEN	NAX0618-001X	NAX0618-001X	NAX0618-001X
TP7501	OPEN	OPEN			
R7501	OPEN	OPEN			
R7510	OPEN	OPEN			
R7511	OPEN	OPEN			
R7512	OPEN	OPEN			
R7513	OPEN	OPEN			
R7514	OPEN	OPEN			
R7515	OPEN	OPEN			
R7516	OPEN	OPEN			
R7517	OPEN	OPEN			
R7518	OPEN	OPEN			
R7519	OPEN	OPEN			
R7520	OPEN	OPEN			
R7521	OPEN	OPEN			
R7553	OPEN	OPEN			
R7556	OPEN	OPEN			
R7557	OPEN	OPEN			
R7558	OPEN	OPEN			
R7559	OPEN	OPEN			
R7560	OPEN	OPEN			
R7561	OPEN	OPEN			
R7562	OPEN	OPEN			
R7563	OPEN	OPEN			
R7564	OPEN	OPEN			
R7565	OPEN	OPEN			
R7566	OPEN	OPEN			
R7567	OPEN	OPEN			
R7568	OPEN	OPEN			
R7576	OPEN	OPEN			
R7580	OPEN	OPEN			
R7581	OPEN	OPEN			
R7582	OPEN	OPEN			
R7583	OPEN	OPEN			
R7584	OPEN	OPEN			
R7585	OPEN	OPEN			
R7586	OPEN	OPEN			
R7587	OPEN	OPEN			
R7588	OPEN	OPEN			
R7589	OPEN	OPEN			
R7590	OPEN	OPEN			
R7599	OPEN	OPEN			
Q7501	OPEN	OPEN	2SA1162 /YG/-X	2SA1162 /YG/-X	2SA1162 /YG/-X
Q7508	OPEN	OPEN	DTC114EKA-X	DTC114EKA-X	DTC114EKA-X
LC7501	OPEN	OPEN	NQR0313-007X	NQR0313-007X	NQR0313-007X
LC7502	OPEN	OPEN	NQR0431-001X	NQR0431-001X	NQR0431-001X
L7501	OPEN	OPEN			
L7502	OPEN	OPEN			
L7503	OPEN	OPEN			
L7504	OPEN	OPEN			
L7505	OPEN	OPEN			
L7506	OPEN	OPEN			
L7507	OPEN	OPEN			
L7508	OPEN	OPEN			
L7509	OPEN	OPEN			
L7510	OPEN	OPEN			
L7511	OPEN	OPEN			
L7512	OPEN	OPEN			
L7513	OPEN	OPEN			
L7514	OPEN	OPEN			
K7501	OPEN	OPEN	NRSA63J-390X	NRSA63J-390X	NRSA63J-390X
K7502	OPEN	OPEN			
K7503	OPEN	OPEN	NQR0389-003X	NQR0389-003X	NQR0389-003X
IC7501	OPEN	OPEN	SDA6000-B12	SDA6000-B12	SDA6000-B12
IC7502	OPEN	OPEN	S-80828CNNB-G-W	S-80828CNNB-G-W	S-80828CNNB-G-W
IC7503	OPEN	OPEN	K4S641632H-UC75	K4S641632H-UC75	K4S641632H-UC75
IC7504	OPEN	OPEN	MBV160T90PT	MBV160T90PT	MBV160T90PT
IC7505	OPEN	OPEN	PQ2L3252MS-X	PQ2L3252MS-X	PQ2L3252MS-X
IC7506	OPEN	OPEN	CD74HC4053PW-X	CD74HC4053PW-X	CD74HC4053PW-X
D7501	OPEN	OPEN			
C7501	OPEN	OPEN			
C7502	OPEN	OPEN			
C7503	OPEN	OPEN			
C7504	OPEN	OPEN			
C7505	OPEN	OPEN			
C7506	OPEN	OPEN			
C7507	OPEN	OPEN			
C7508	OPEN	OPEN			
C7509	OPEN	OPEN			
C7510	OPEN	OPEN			
C7511	OPEN	OPEN			
C7512	OPEN	OPEN			
C7513	OPEN	OPEN			
C7514	OPEN	OPEN			
C7515	OPEN	OPEN			
C7516	OPEN	OPEN			
C7517	OPEN	OPEN			
C7518	OPEN	OPEN			
C7519	OPEN	OPEN			
C7520	OPEN	OPEN			
C7521	OPEN	OPEN			
C7522	OPEN	OPEN			
C7523	OPEN	OPEN			
C7524	OPEN	OPEN			
C7525	OPEN	OPEN			
C7526	OPEN	OPEN			
C7527	OPEN	OPEN			
C7528	OPEN	OPEN			
C7529	OPEN	OPEN			
C7530	OPEN	OPEN			
C7531	OPEN	OPEN			
C7532	OPEN	OPEN			
C7533	OPEN	OPEN			
C7534	OPEN	OPEN			
C7535	OPEN	OPEN			
C7536	OPEN	OPEN			
C7541	OPEN	OPEN			
C7542	OPEN	OPEN	NEHL0GM-227X	NEHL0GM-227X	NEHL0GM-227X
C7543	OPEN	OPEN			
C7544	OPEN	OPEN	NEHL0JM-107X	NEHL0JM-107X	NEHL0JM-107X
C7545	OPEN	OPEN			
C7546	OPEN	OPEN			
C7547	OPEN	OPEN			
C7548	OPEN	OPEN	NEHL0GM-227X	NEHL0GM-227X	NEHL0GM-227X
C7549	OPEN	OPEN			
C7550	OPEN	OPEN			
C7553	OPEN	OPEN			
CN0MI	OPEN	OPEN	QGA1501F2-07V	QGA1501F2-07V	QGA1501F2-07V
C7552	OPEN	OPEN			
D7502	OPEN	OPEN			
R7719	OPEN	OPEN			

※相違点表の空欄部 : 回路ブロック 参照
※The blank part of a difference list

#2-1 DIFFERENCE LIST
(JPN MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
C9102	OPEN	NCJ41EK-106X-U	NCJ41EK-106X-U	NCJ41EK-106X-U	NCJ41EK-106X-U
C9104	OPEN				
C9105	OPEN	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U
C9106	OPEN				
C9107	OPEN				
C9108	OPEN	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U
C9111	OPEN				
C9112	OPEN				
D9101	OPEN	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X
D9102	OPEN	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X
D9103	OPEN	PTZ3.9B-X	PTZ3.9B-X	PTZ3.9B-X	PTZ3.9B-X
D9104	OPEN	MA111-X	MA111-X	MA111-X	MA111-X
IC9101	OPEN	MP1580HS-X	MP1580HS-X	MP1580HS-X	MP1580HS-X
L9101	OPEN	NQL71EM-150X	NQL71EM-150X	NQL71EM-150X	NQL71EM-150X
R9101	OPEN				
R9102	OPEN	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X
R9103	OPEN				
R9104	OPEN				
R9105	OPEN				
R9106	OPEN				
R9107	OPEN	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X
R9108	OPEN	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X
R9109	OPEN				

: Refer to circuit block.

#2-2 DIFFERENCE LIST
(JPN MODEL/ US MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
C9002	OPEN	NCJ41EK-106X-U	NCJ41EK-106X-U	NCJ41EK-106X-U	NCJ41EK-106X-U
C9004	OPEN				
C9005	OPEN	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U
C9006	OPEN				
C9007	OPEN				
C9008	OPEN	OPEN	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U
D9001	OPEN	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X	EC30HA03L-X
D9003	OPEN	PTZ3.9B-X	PTZ3.9B-X	PTZ3.9B-X	PTZ3.9B-X
IC9001	OPEN	MP1580HS-X	MP1580HS-X	MP1580HS-X	MP1580HS-X
L9001	OPEN	NQL71EM-150X	NQL71EM-150X	NQL71EM-150X	NQL71EM-150X
R9001	OPEN				
R9002	OPEN	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X
R9003	OPEN				
R9004	OPEN				
R9005	OPEN				
R9006	OPEN				
R9007	OPEN	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X	NRSA02J-0R0X
R9008	OPEN				

#4 DIFFERENCE LIST
(JPN MODEL/ US MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
R9208	470k	1M	1M	1M	1M
C9010	NCJ41CK-226X-U	OPEN	NCJ41CK-226X-U	NCJ41CK-226X-U	NCJ41CK-226X-U

#5 DIFFERENCE LIST
(US MODEL/ etc)

NOTE		DIGITAL IN BLOCK USED			
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
R0518	OPEN	0	OPEN	OPEN	OPEN
R0519	OPEN	0	OPEN	OPEN	OPEN

#3 DIFFERENCE LIST
(JPN MODEL/ US MODEL/ etc)

NOTE					
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
LC0510	*1	OPEN	OPEN	OPEN	OPEN
LC0511	*1	OPEN	OPEN	OPEN	OPEN
LC0512	*1	OPEN	OPEN	OPEN	OPEN
LC0513	*1	OPEN	OPEN	OPEN	OPEN
R0512	0	OPEN	OPEN	OPEN	OPEN
C0519	56p	56p	OPEN	OPEN	OPEN


#6 DIFFERENCE LIST
(UK MODEL/ etc)

NOTE				UK DIGITAL CONNECT	
Selling Country	JPN	US	EU	UK	ASIA etc
ASSY NO.	SFL-0D002A (etc)	SFL-0D101A (etc)	SFL-0D201A (etc)	SFL-0D202A (etc)	SFL-0D301A (etc)
	OLLC06134-02 (etc)	OLLC06134-05 (etc)	OLLC06134-09 (etc)	OLLC06134-10 (etc)	OLLC06134-13 (etc)
R7721	OPEN	OPEN	OPEN	10k	OPEN
R7722	OPEN	OPEN	OPEN	1k	OPEN
R7723	OPEN	OPEN	OPEN	0	OPEN
R7724	OPEN	OPEN	OPEN	0	OPEN
R7725	OPEN	OPEN	OPEN	4.7k	OPEN
R7726	OPEN	OPEN	OPEN	4.7k	OPEN
R7727	OPEN	OPEN	OPEN	47k	OPEN
R7728	OPEN	OPEN	OPEN	100	OPEN
CN0ID	OPEN	OPEN	OPEN	QGA1501F4-05W	OPEN

DIGITAL SIGNAL PWB ASS'Y (11/11)
SFL-0D301A-H2 [LT-Z26SX4B]
SFL-0D303A-H2 [LT-Z26SX4B/A]
SFL-0D302A-H2 [LT-Z26SX4B/S,LT-Z26SX4S/S]

c10265012b_1110_12/12_0.0

CONNECTOR PWB CIRCUIT DIAGRAM SHEET 18

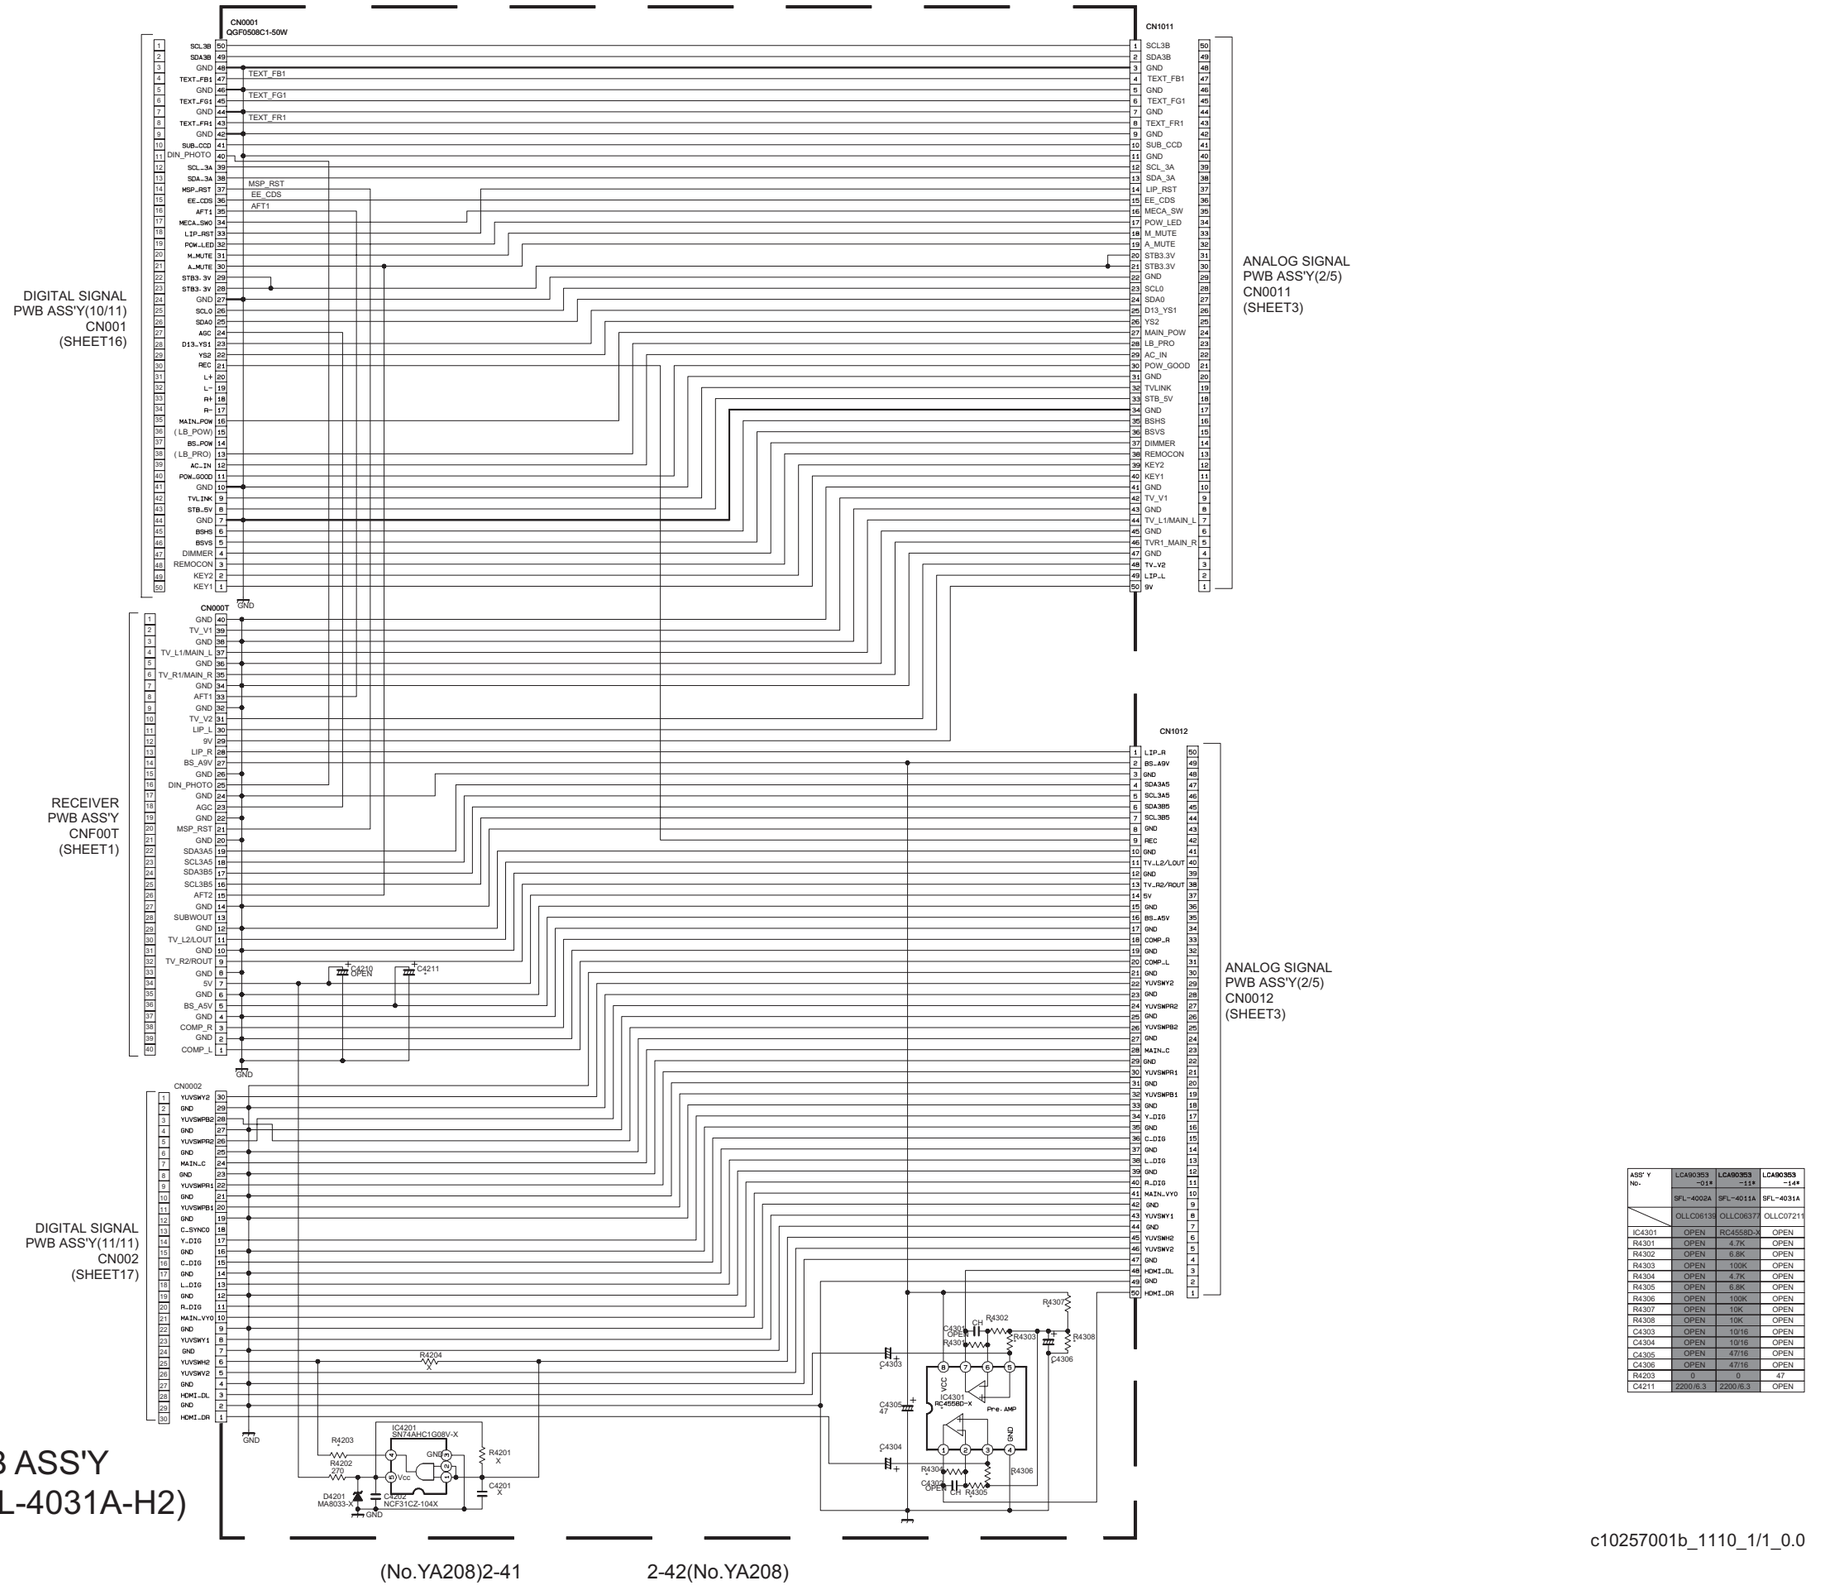

ASS'Y No.	LCA90353 -01A	LCA90353 -11A	LCA90353 -14A
	SFL-4002A	SFL-4011A	SFL-4031A
	OLLC06139	OLLC06377	OLLC07211
IC4301	OPEN	RC4558D-X	OPEN
R4301	OPEN	4.7K	OPEN
R4302	OPEN	6.8K	OPEN
R4303	OPEN	100K	OPEN
R4304	OPEN	4.7K	OPEN
R4305	OPEN	6.8K	OPEN
R4306	OPEN	100K	OPEN
R4307	OPEN	10K	OPEN
R4308	OPEN	10K	OPEN
C4303	OPEN	10/16	OPEN
C4304	OPEN	10/16	OPEN
C4305	OPEN	47/16	OPEN
C4306	OPEN	47/16	OPEN
R4203	0	0	47
C4211	2200/6.3	2200/6.3	OPEN

CONNECTOR PWB ASS'Y
LCA90353-14A (SFL-4031A-H2)

c10257001b_1110_1/1_0.0

CN100R
QGA1501C2-11V

KEY1 1
KEY2 2
MECA_SW 3
REMOCON 4
STB5V 5
GND 6
DIMMER 7
POW_LED 8
5V 9
EE_CDS 10
REC 11

ANALOG SIGNAL
PWB ASS'Y(2/5)
CN000R
(SHEET3)

CN0008
QGB2542K1-08

5V 1
EE_CDS 2
GND 3
GND 4
STB5V 5
REMOCON 6
POWERLED(SCLO) 7
ON_TIMER(SDAO) 8

FRONT SENSOR
PWB ASS'Y
CN1008
(SHEET20)

C7701 X
S7707 QSW0797-001
POWER
S7703 QSW0797-001 MENU
S7702 QSW0797-001 CH +
S7701 QSW0797-001 CH −
R7701 5.6k
R7702 15k
C7702 X
S7706 QSW0797-001 VOL −
S7705 QSW0797-001 VOL +
S7704 QSW0797-001 INPUT
R7703 5.6k
R7704 15k
C7703 X
GND

FRONT CONTROL
PWB ASS'Y
SFL-7031A-H2

R7711 * R7712 * R7713 * R7714 * R7715 * R7716 OPEN R7717 *
Q7703 *
Q7705 *1
Q7707 OPEN
Q7706 *
Q7701 *2
Q7709 *
Q7704 *
Q7708 OPEN
Q7702 *
D7702 *
D7701 *

GND GND GND GND GND
POWER
J7001 HEADPHONE
QMS3004-C01

CN100U
QGA1501C2-04V

HP_L 1
HP_GND 2
HP_R 3
HP_DET 4


ANALOG SIGNAL
PWB ASS'Y(4/5)
CN000U
(SHEET5)

R7015 10K
R7013 100
L7001 NRSA02J-0R0X
R7011 1K
K7001 0
C7011 0.1
R7012 1K
C7012 0.1
HPGND
R7016 100
R7014 100
L7002 NRSA02J-0R0X
D7011 MA8062/M/-X
HPGND
R7017 OPEN
R7018 0
HPGND HPGND

ASS' Y No.	LCA90351 -01*	LCA90351 -11*	LCA90351 -18*
	SFL-7002A	SFL-7011A	SFL-7031A
	OLLC06137	OLLC06375	OLLC07209
D7701	SML1216W	OPEN	OPEN
D7702	OPEN	HLMPNS30 J00-T16	HLMPNS30 J00-T16
Q7702	OPEN	UN2212-X	OPEN
Q7703	OPEN	UN2110-X	OPEN
Q7704	OPEN	UN2110-X	OPEN
Q7706	UN2110-X	OPEN	OPEN
Q7709	UN2212-X	OPEN	OPEN
R7712	OPEN	10K	OPEN
R7713	OPEN	330	OPEN
R7714	1.5K	2.2K	1.5K
R7715	1.5K	OPEN	OPEN
R7717	10K	OPEN	OPEN
R7711	10K	10K	1.5K

c30124001b_1110_1/1_0.0


FRONT SENSOR PWB ASS'Y
SFL-8031A-H2

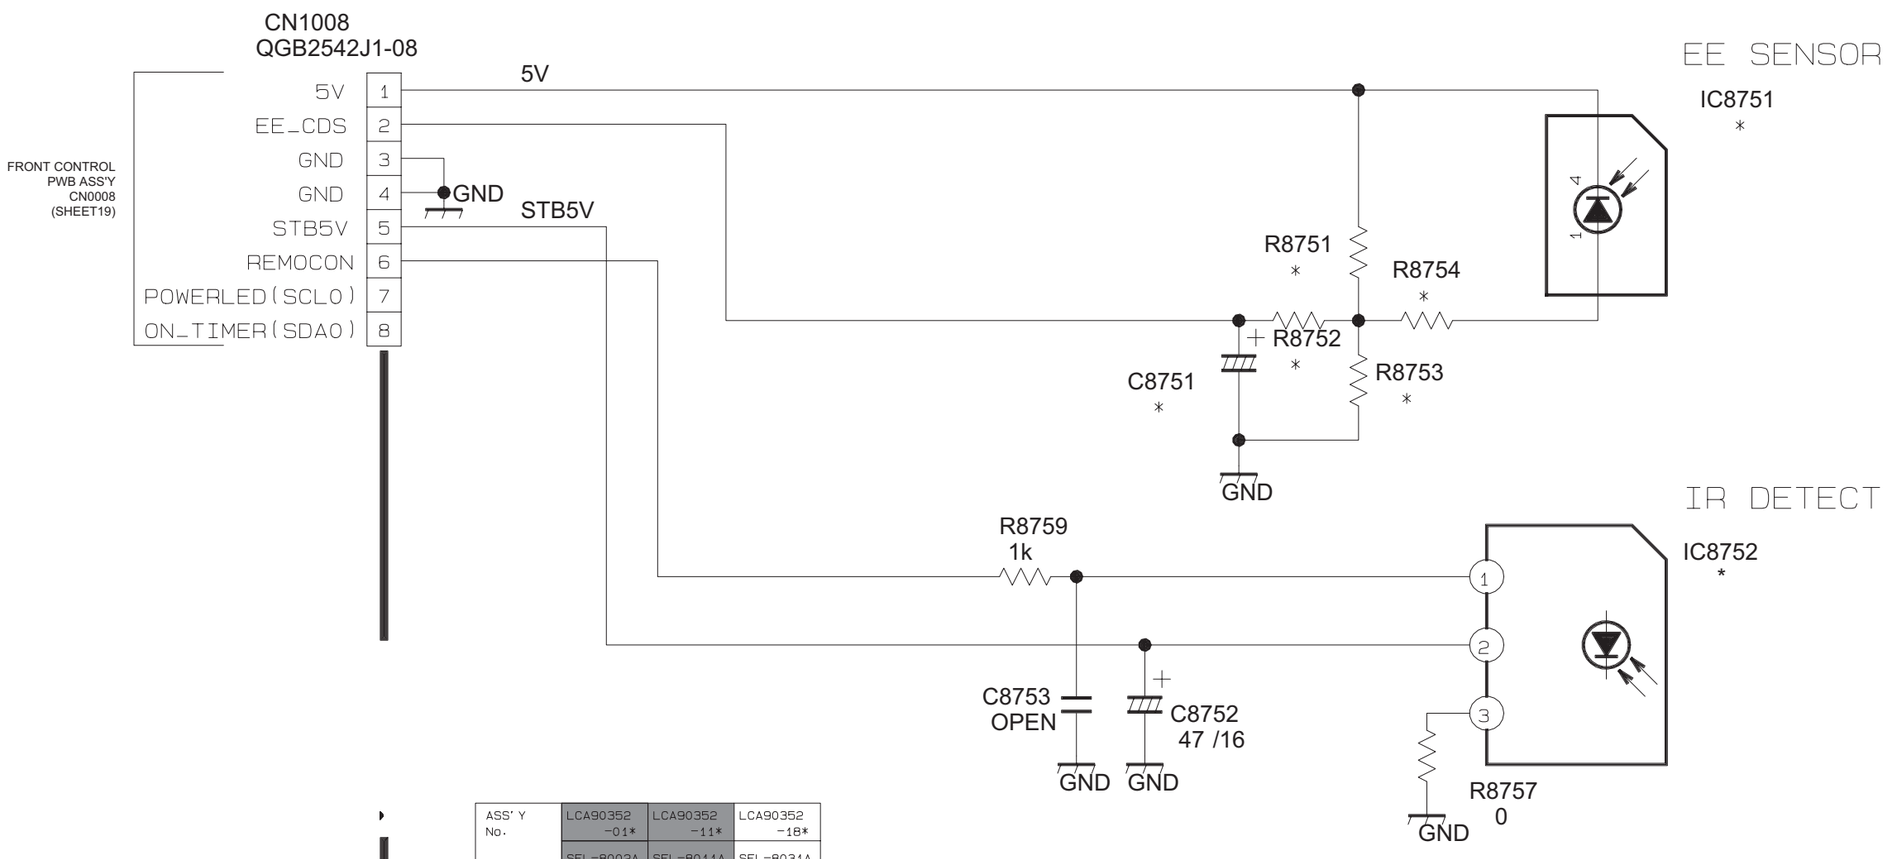

ASS' Y No.	LCA90352 -01*	LCA90352 -11*	LCA90352 -18*
	SFL-8002A	SFL-8011A	SFL-8031A
	OLLC06139	OLLC06377	OLLC07210
IC8751	S9066-11	OPEN	OPEN
R8751	270K	OPEN	OPEN
R8752	100	OPEN	OPEN
R8753	68K	OPEN	OPEN
R8754	33K	OPEN	OPEN
C8751	22/6.3	OPEN	OPEN
IC8752	GP1UM281QK	GP1UM281QK	GP1UM281QKVF

c30125001b_1110_1/1_0.0

REGULATOR PWB ASS'Y
SFL-9113A-H2

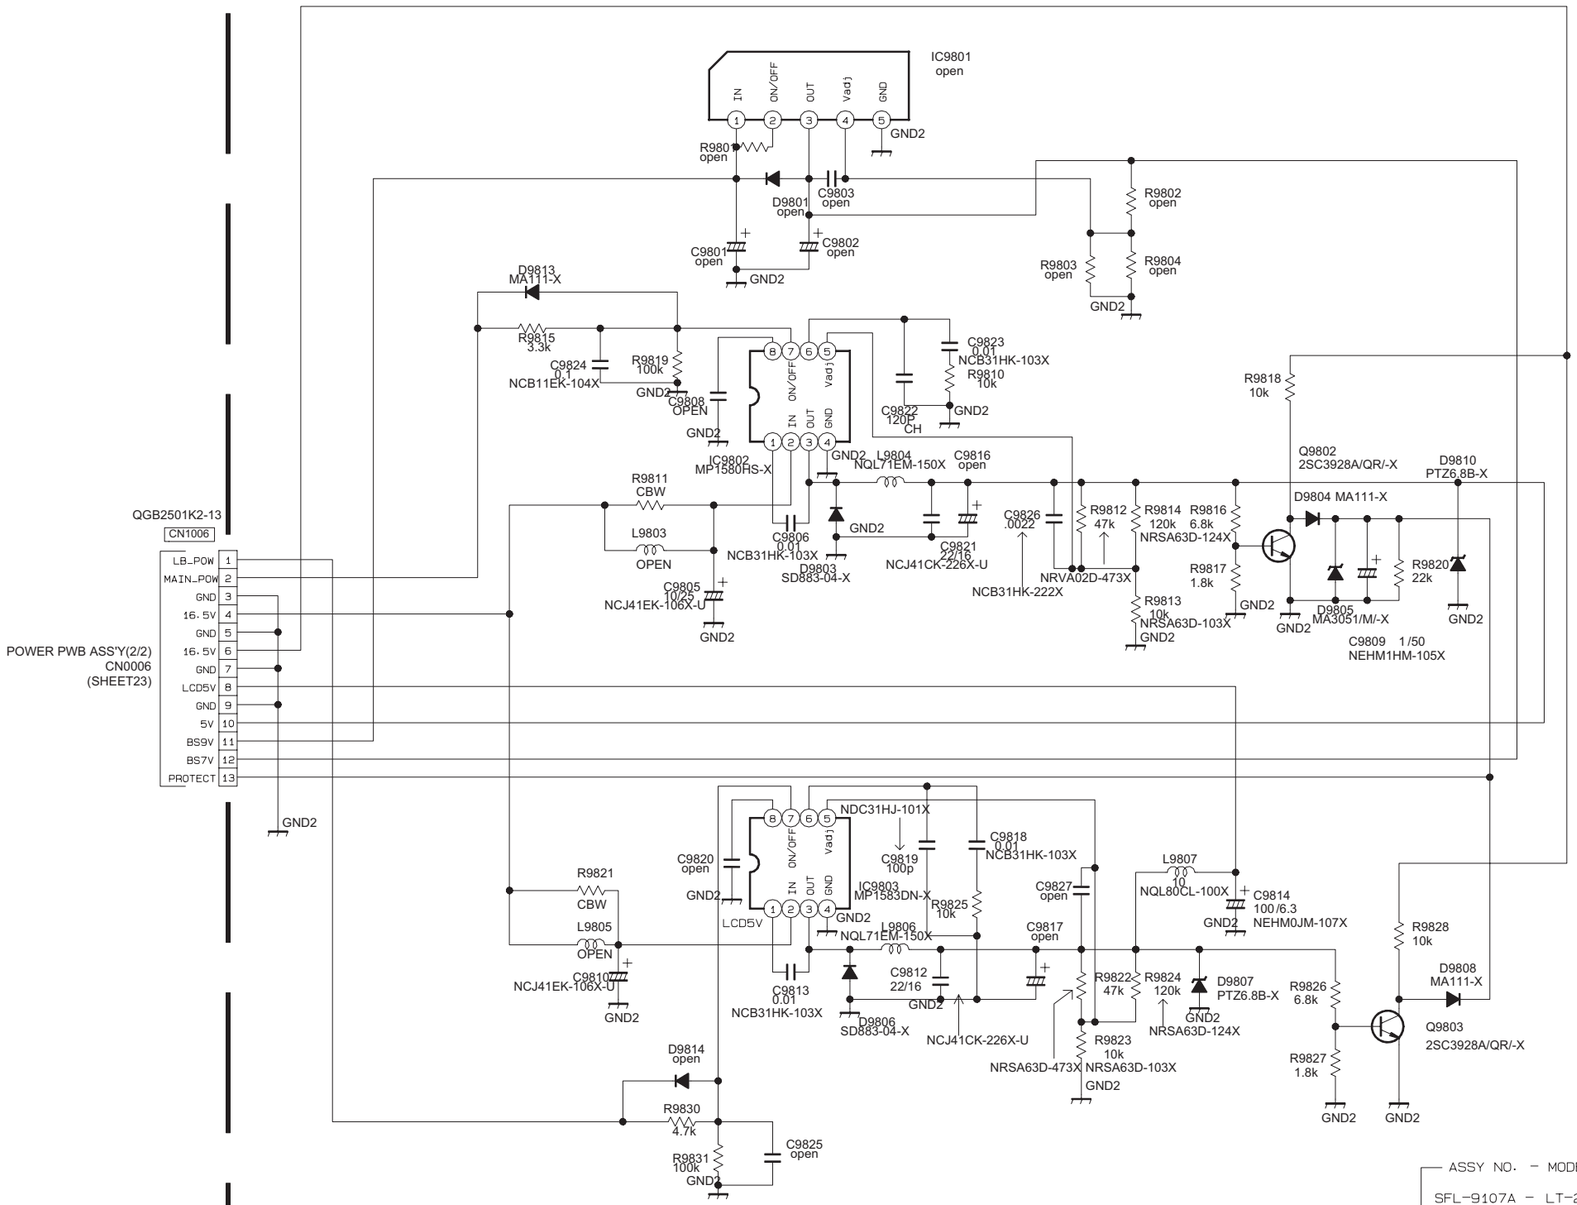

ASSY NO. - MODEL LIST

SFL-9107A	LT-26C50***
SFL-9108A	LT-32C50***
SFL-9109A	LT-26D50***
SFL-9110A	LT-32D50***
SFL-9113A	LT-Z26SX4***
SFL-9114A	LT-Z32SX4***

c20317001a_1102_1/1_0.0

POWER PWB ASS'Y (1/2)
SFL-9013A-H2

ASSY NO. - MODEL LIST

SFL-9007A	LT-26C50***
SFL-9008A	LT-32C50***
SFL-9009A	LT-26D50***
SFL-9010A	LT-32D50***
SFL-9013A	LT-Z26SX4***
SFL-9014A	LT-Z32SX4***

LIVE

ISOLATED

POWER CORD — CN00PW — QGA7901C1-025

OPEN — CN00E1


SHEET23

DIFFERENCE LIST

NOTE	C50	D50	SX4
	SFL-9007A SFL-9008A	SFL-9009A SFL-9010A	SFL-9013A SFL-9014A
R9141	QRK01GJ -1R0	QRK01GJ -1R0	QRT01EJ -1R0X
R9142	QRK01GJ -R82	QRK01GJ -R82	QRT01EJ -R82X
C9101	QCZ9078 -472	QCZ9078 -472	QCZ9082 -4722
C9102	QCZ9078 -472	QCZ9078 -472	QCZ9082 -4722
C9103	QCZ9078 -472	QCZ9078 -472	QCZ9082 -4722


DIFFERENCE LIST

NOTE	C50	D50	SX4
	SFL-9007A SFL-9008A	SFL-9009A SFL-9010A	SFL-9013A SFL-9014A
C9201	QCZ9078 -222	QCZ9078 -222	QCZ9082 -2222
C2903	QCZ9078 -222	QCZ9078 -222	QCZ9082 -2222
C9204	QCZ9078 -222	QCZ9078 -222	QCZ9082 -2222
C9205	QCZ9078 -222	QCZ9078 -222	QCZ9082 -2222
C9219	QCZ0340 -331	QCZ0340 -331	QCZ0354 -3312

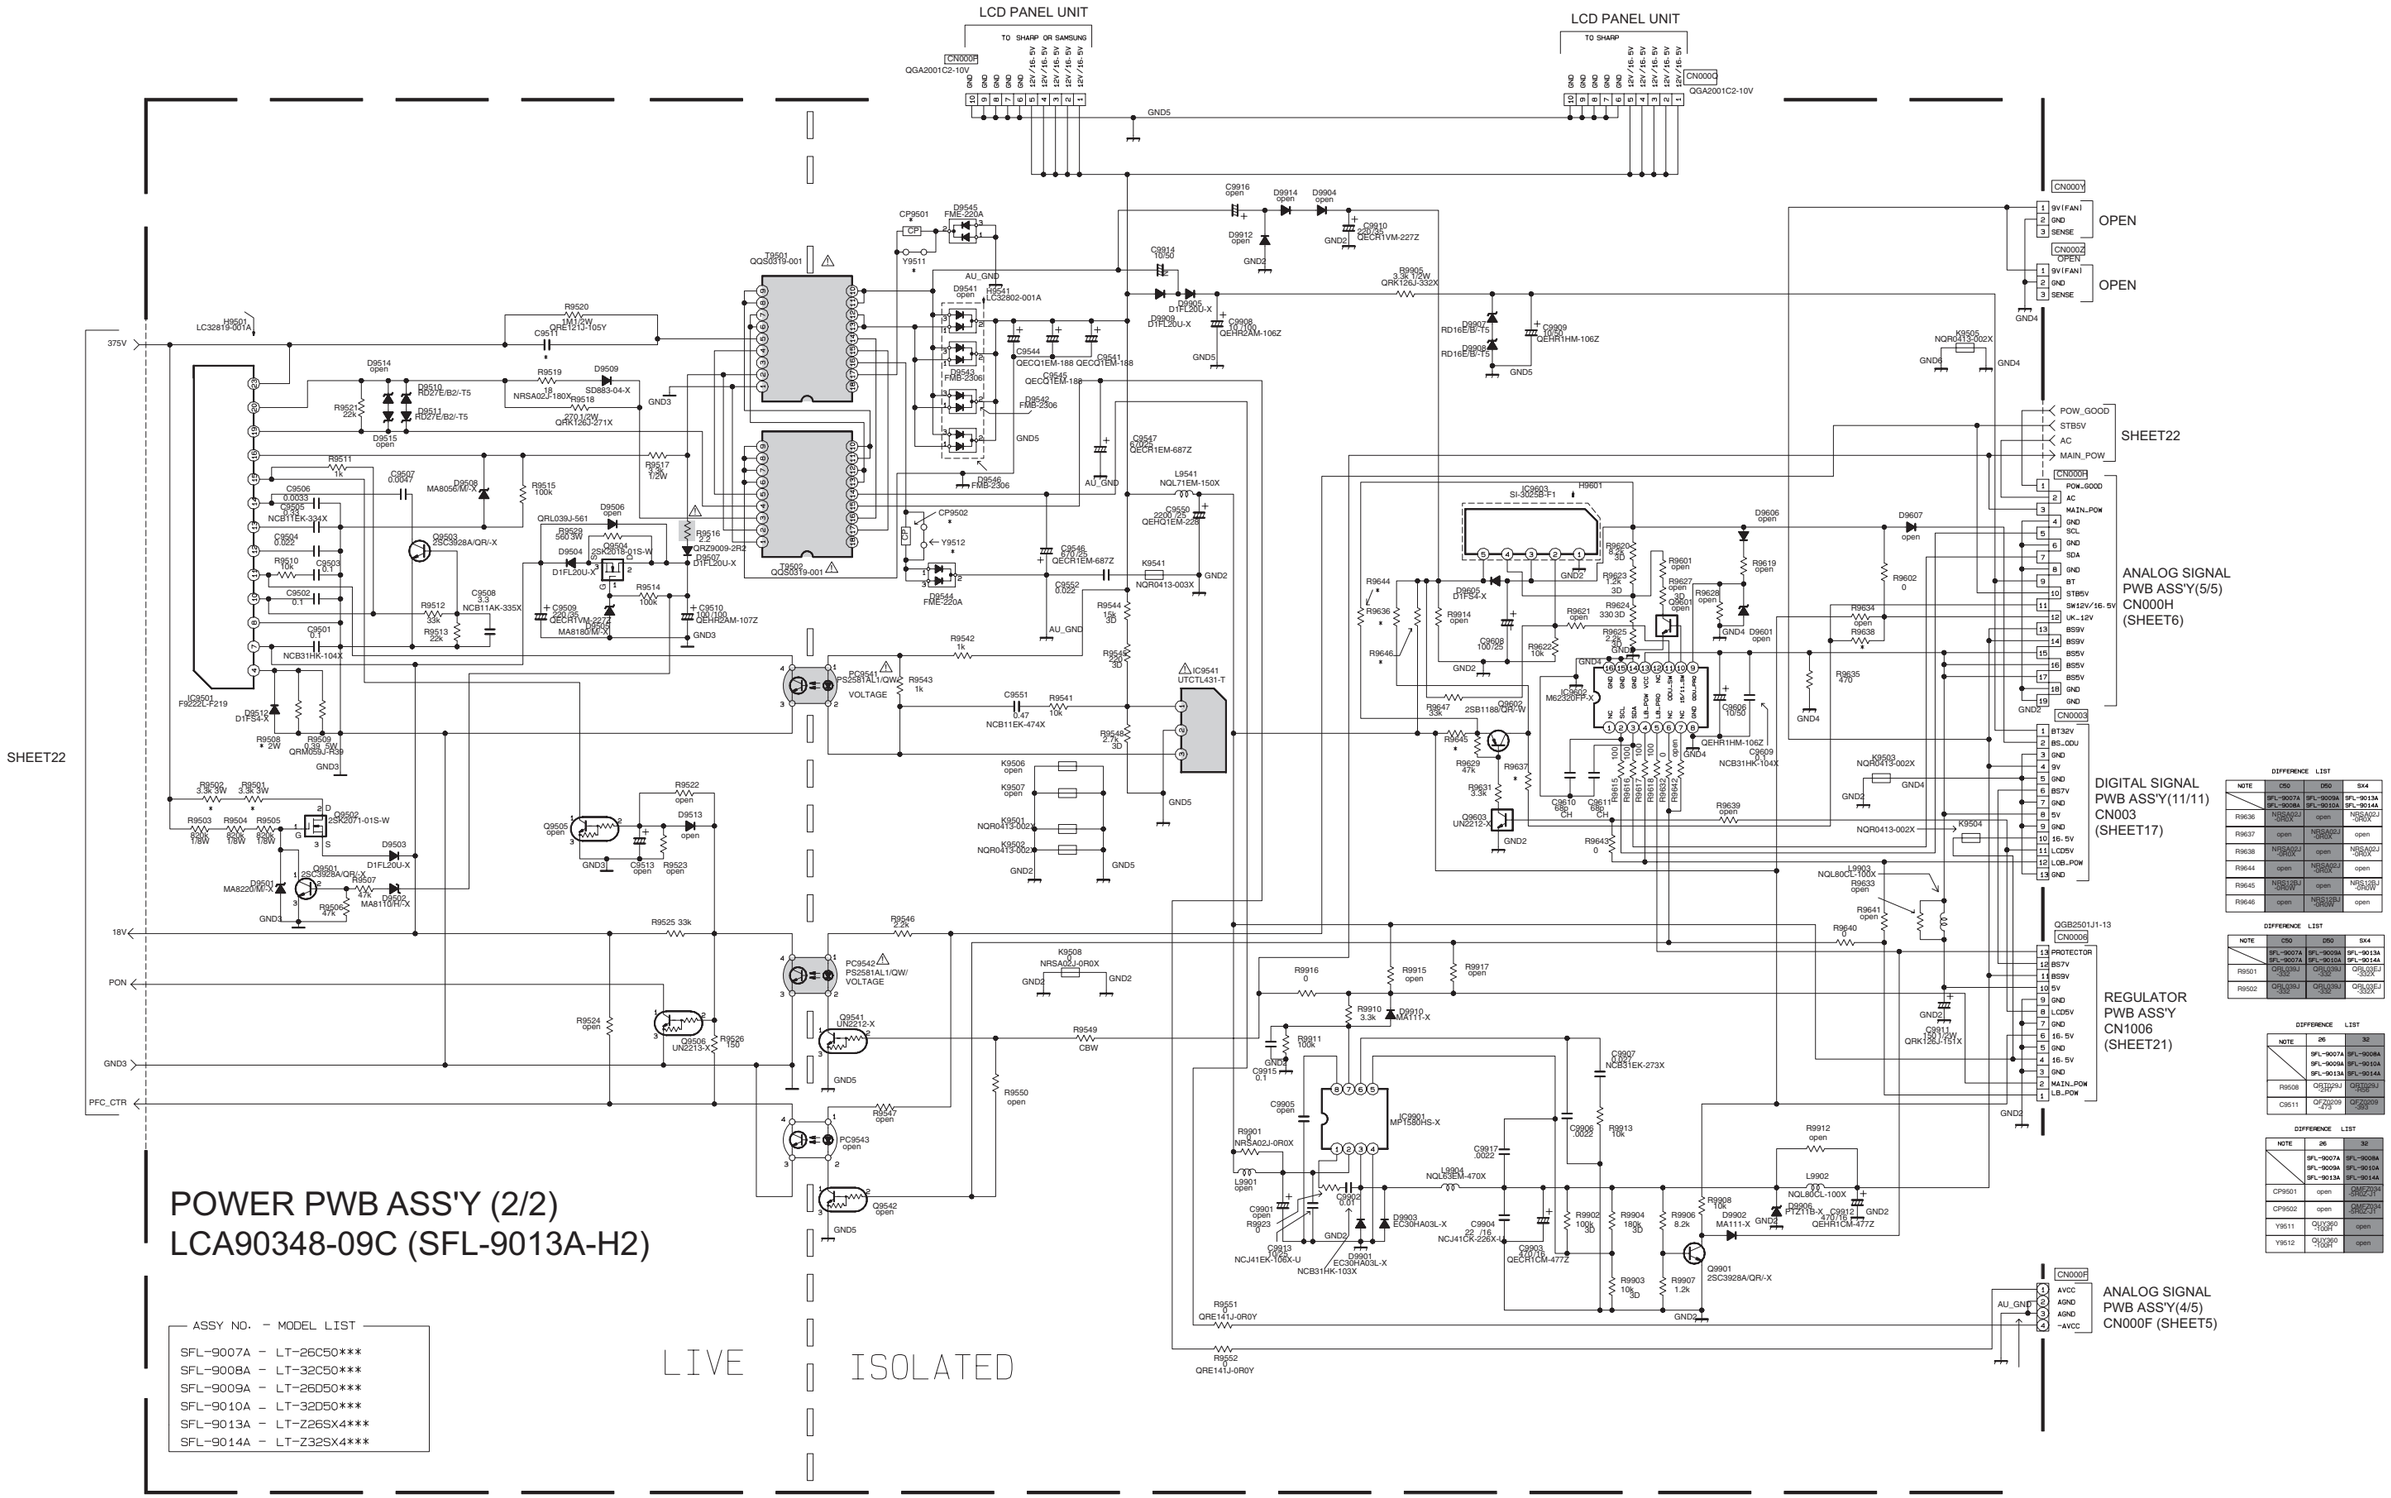

LCD PANEL UNIT
TO SHARP OR SAMSUNG
CN000E
QGA2001C2-10V
LCD PANEL UNIT
TO SHARP
CN000C
QGA2001C2-10V
GND5
CN000Y
OPEN
CN0002
OPEN
SHEET22
CN000H
ANALOG SIGNAL PWB ASS'Y(5/5) CN000H (SHEET6)
CN0003
DIGITAL SIGNAL PWB ASS'Y(11/11) CN003 (SHEET17)
CN0006
REGULATOR PWB ASS'Y CN1006 (SHEET21)
CN000F
ANALOG SIGNAL PWB ASS'Y(4/5) CN000F (SHEET5)
SHEET22
375V
18V
PON
GND3
PFC_CTR
POWER PWB ASS'Y (2/2)
LCA90348-09C (SFL-9013A-H2)
ASSY NO. - MODEL LIST
SFL-9007A - LT-26C50***
SFL-9008A - LT-32C50***
SFL-9009A - LT-26D50***
SFL-9010A - LT-32D50***
SFL-9013A - LT-Z26SX4***
SFL-9014A - LT-Z32SX4***
LIVE
ISOLATED
DIFFERENCE LIST
DIFFERENCE LIST
DIFFERENCE LIST
DIFFERENCE LIST

PATTERN DIAGRAMS


RECEIVER PWB PATTERN [SOLDER SIDE]

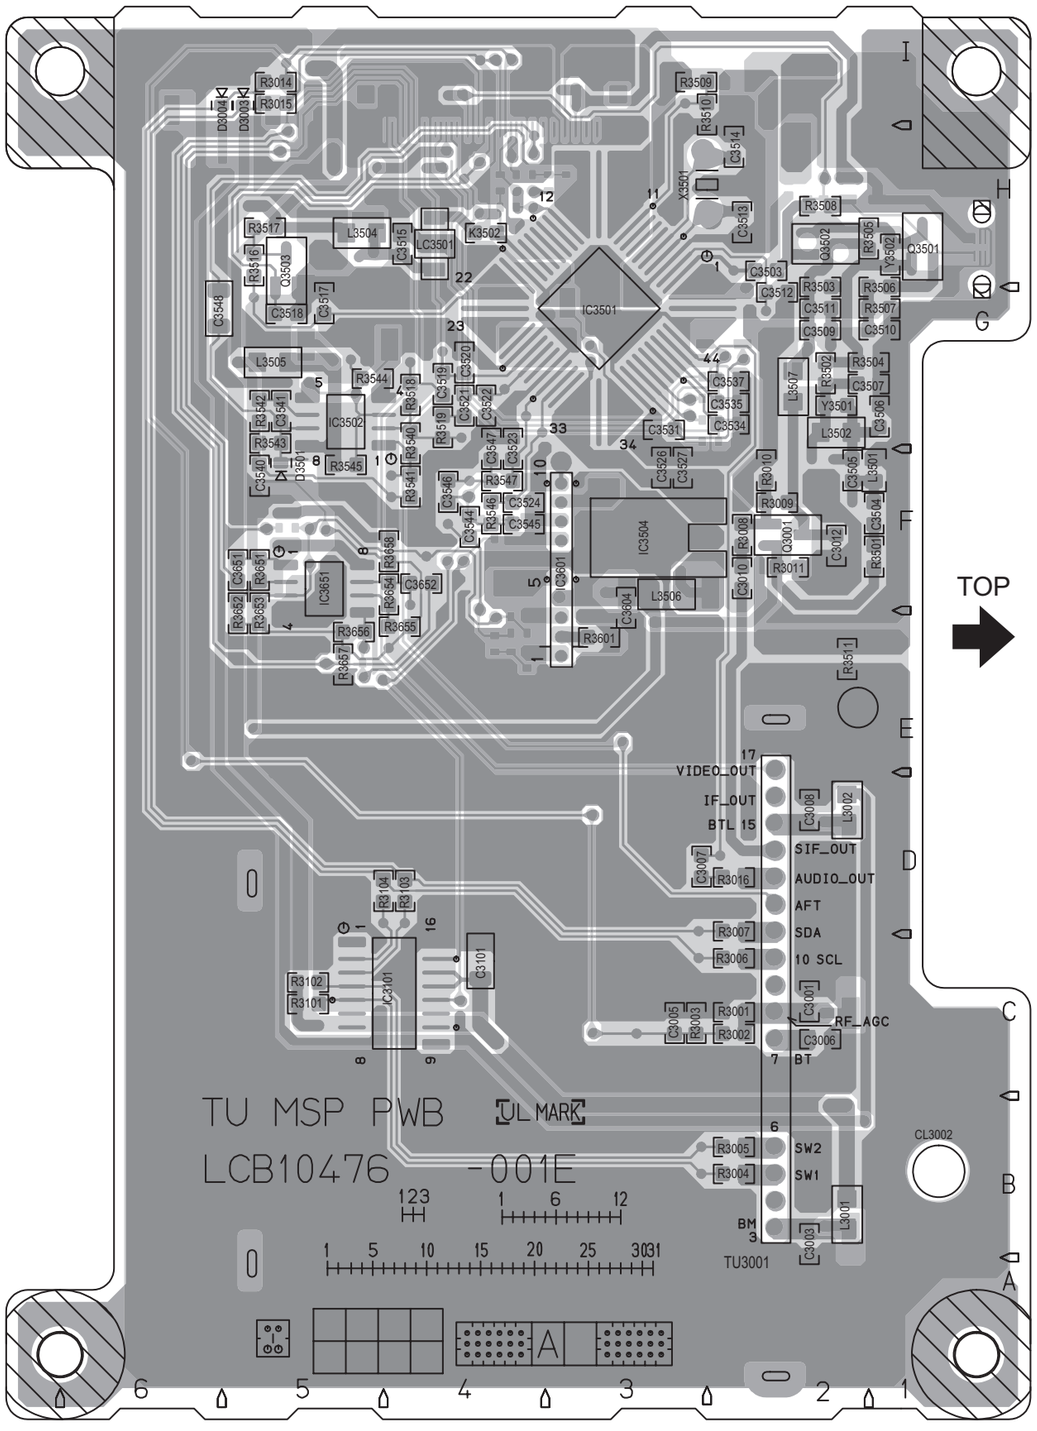


RECEIVER PWB PATTERN[PARTS SIDE]

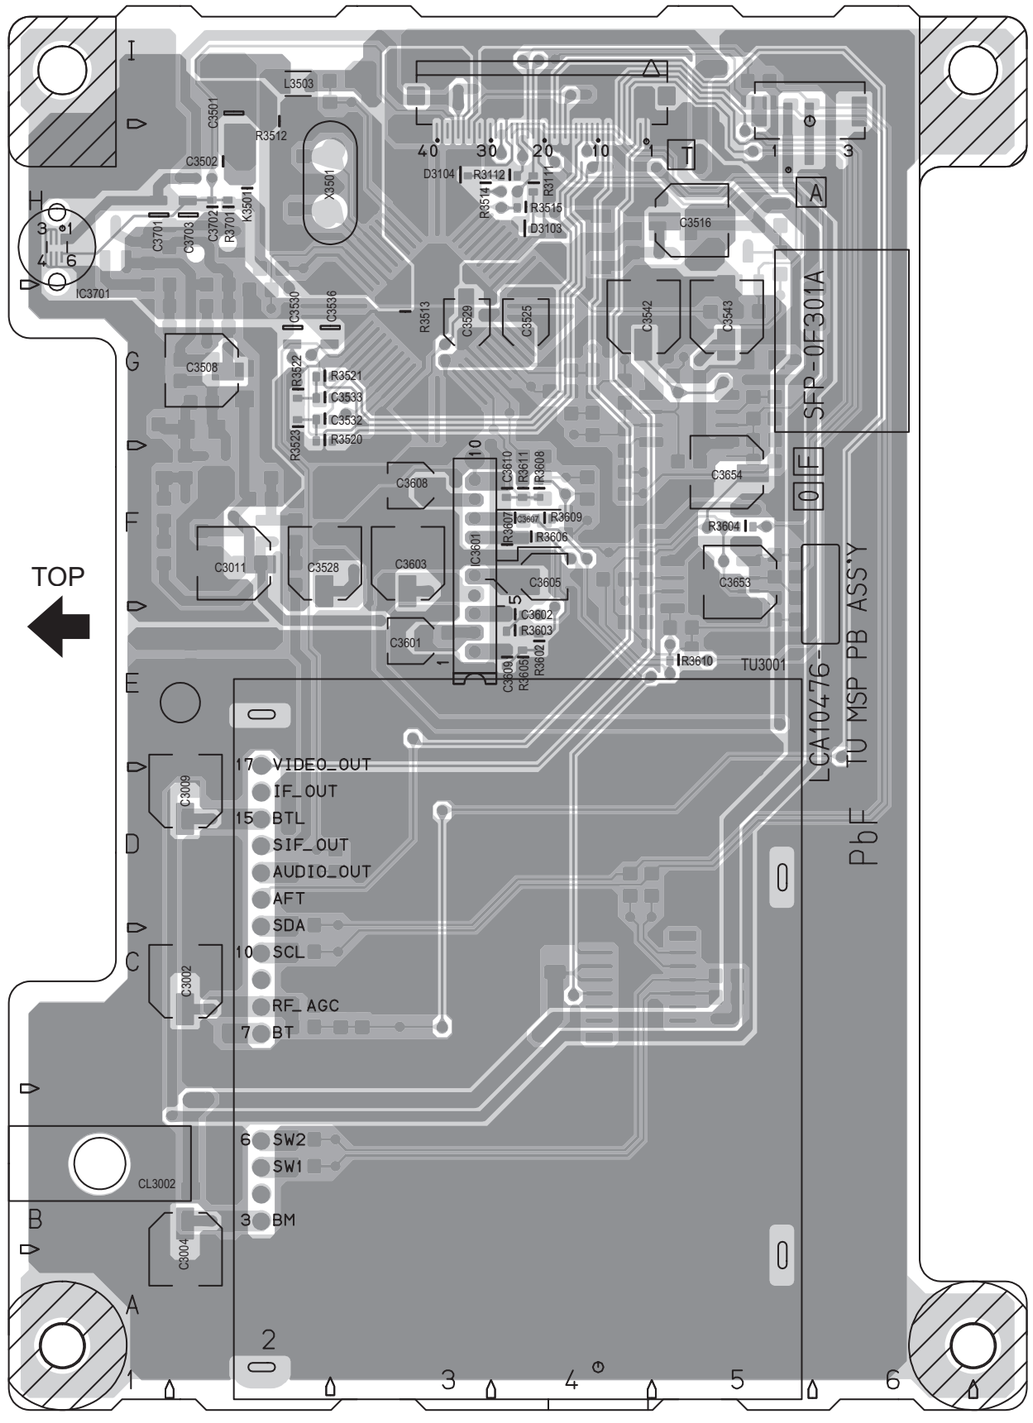


ANALOG SIGNAL PWB PATTERN [SOLDER SIDE]

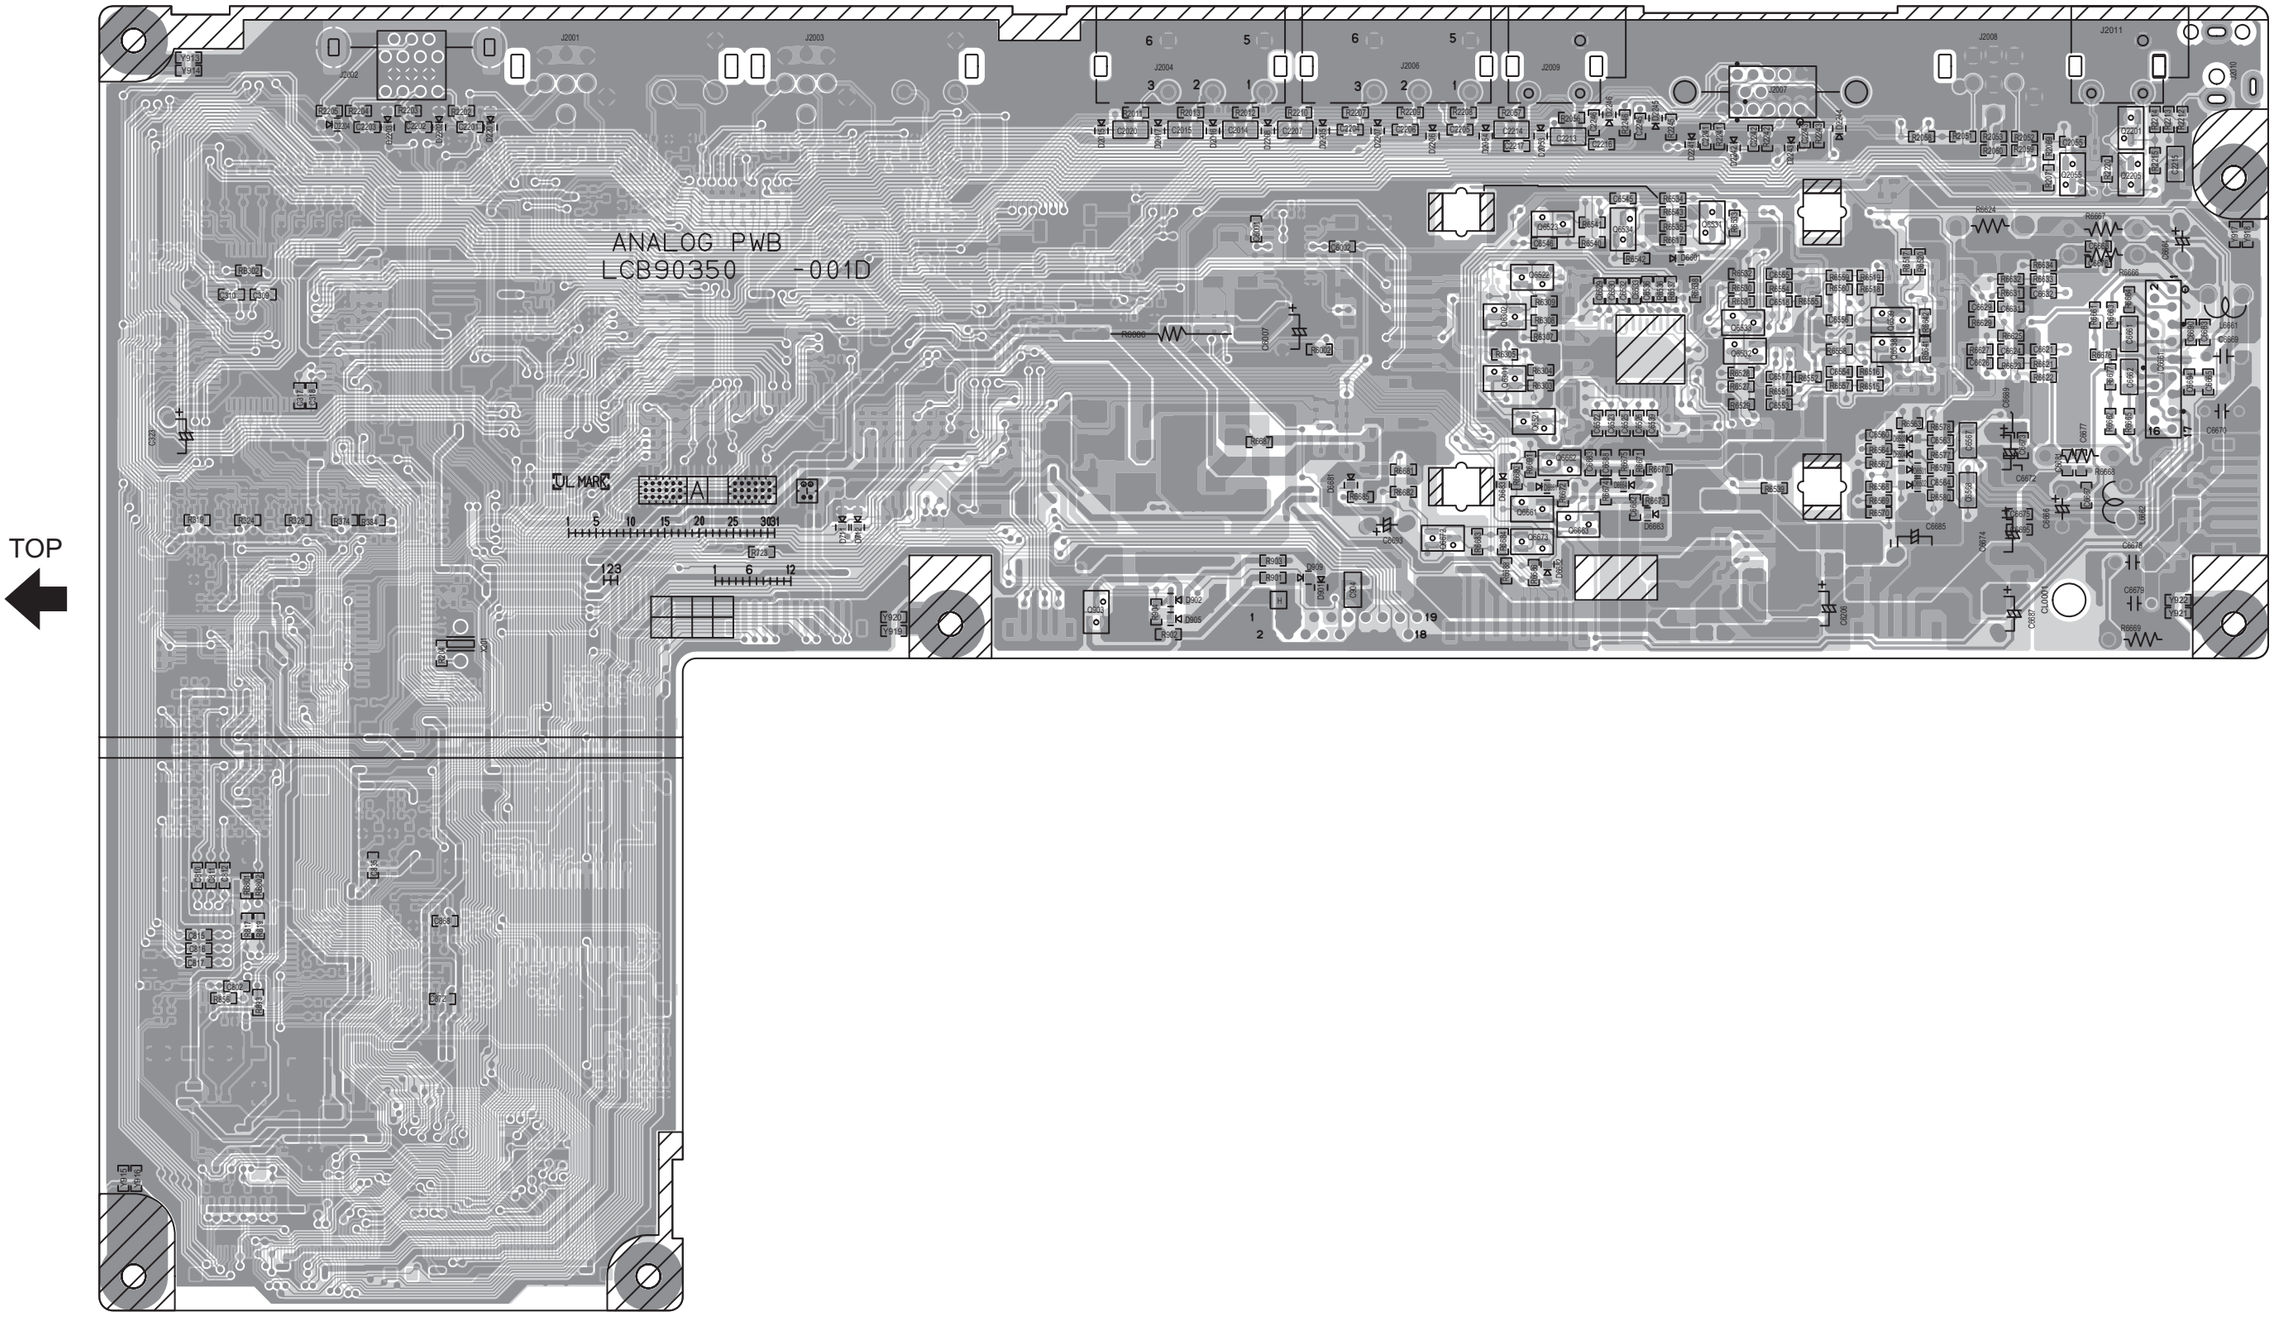


ANALOG SIGNAL PWB PATTERN [PARTS SIDE]

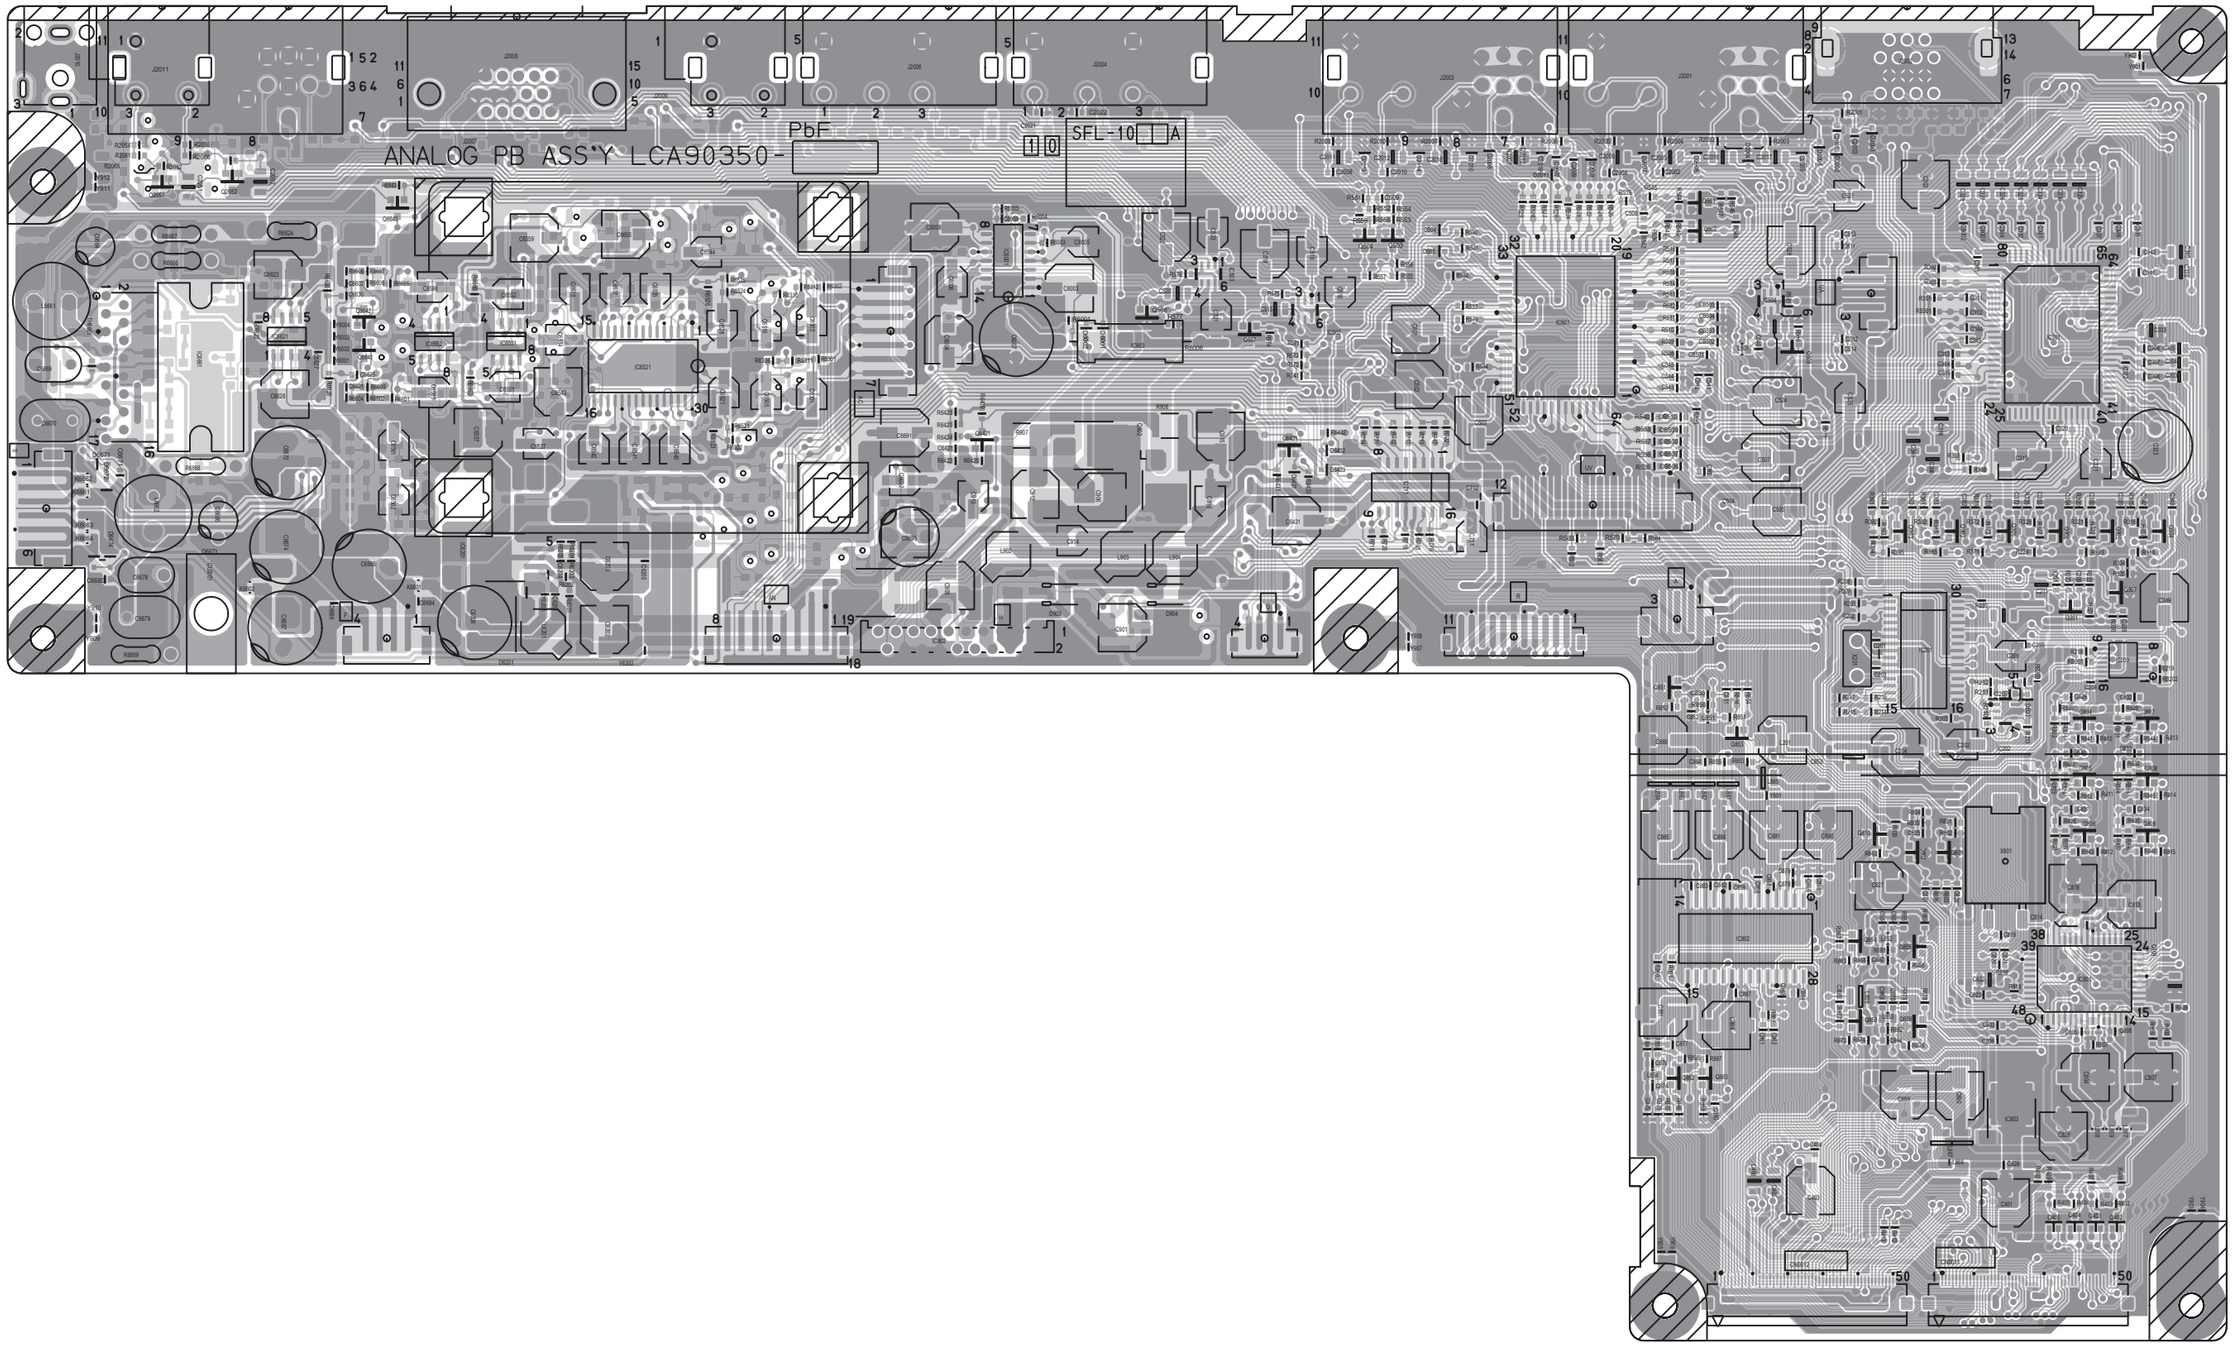


DIGITAL SIGNAL PWB PATTERN [SOLDER SIDE]

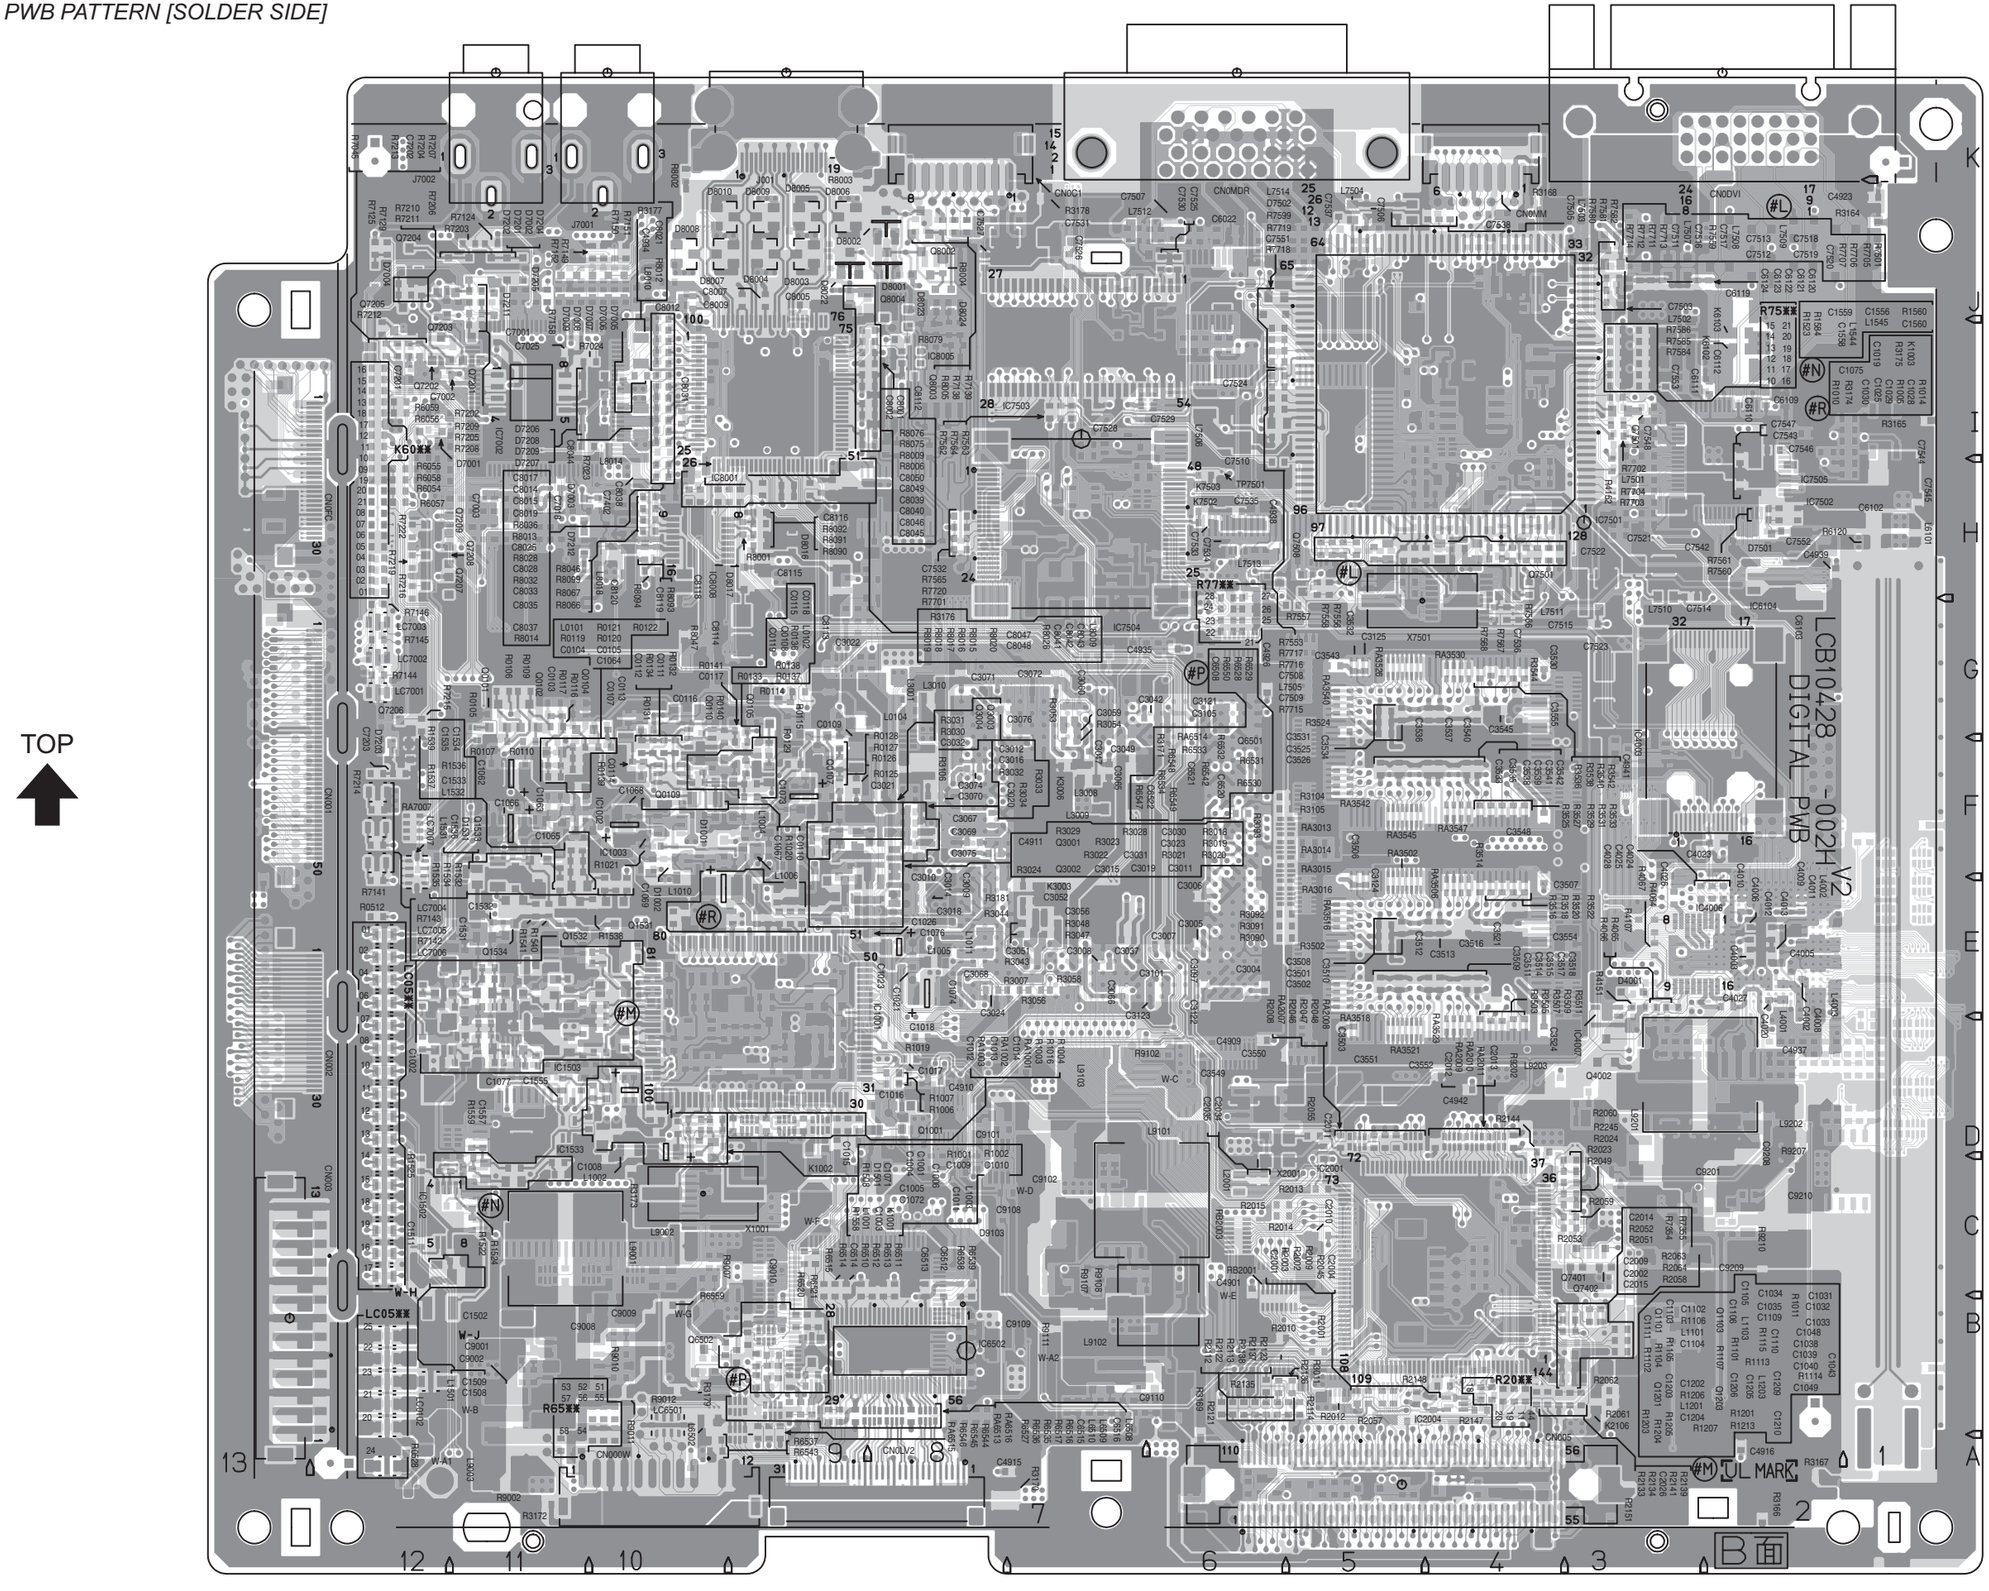


DIGITAL SIGNAL PWB PATTERN [PARTS SIDE]

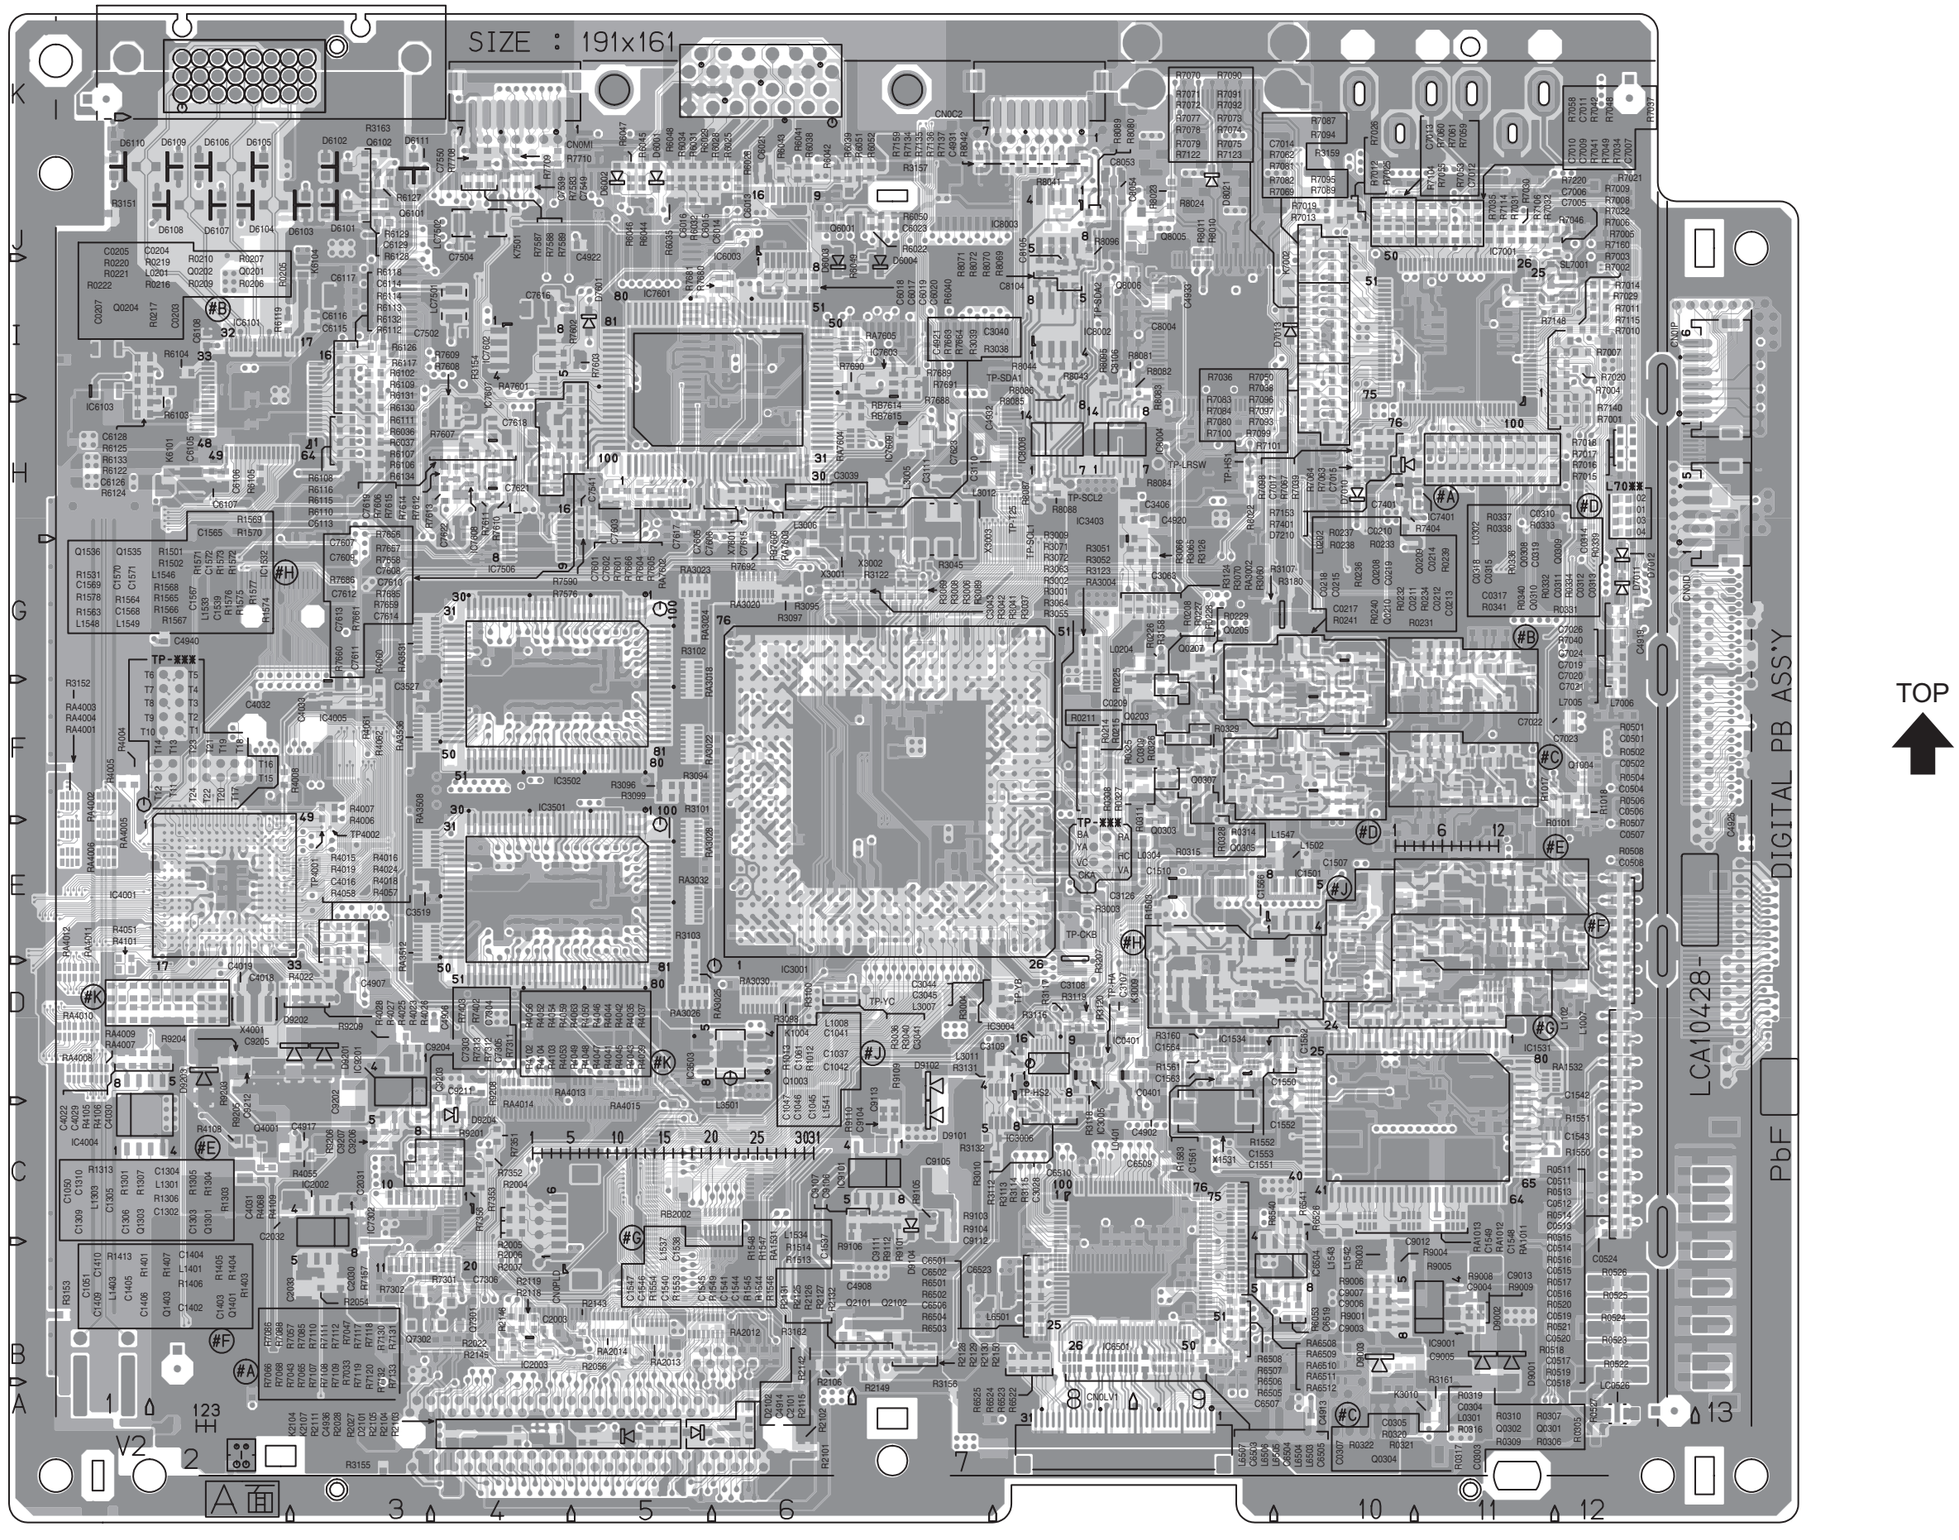


CONNECTOR PWB PATTERN [SOLDER SIDE]

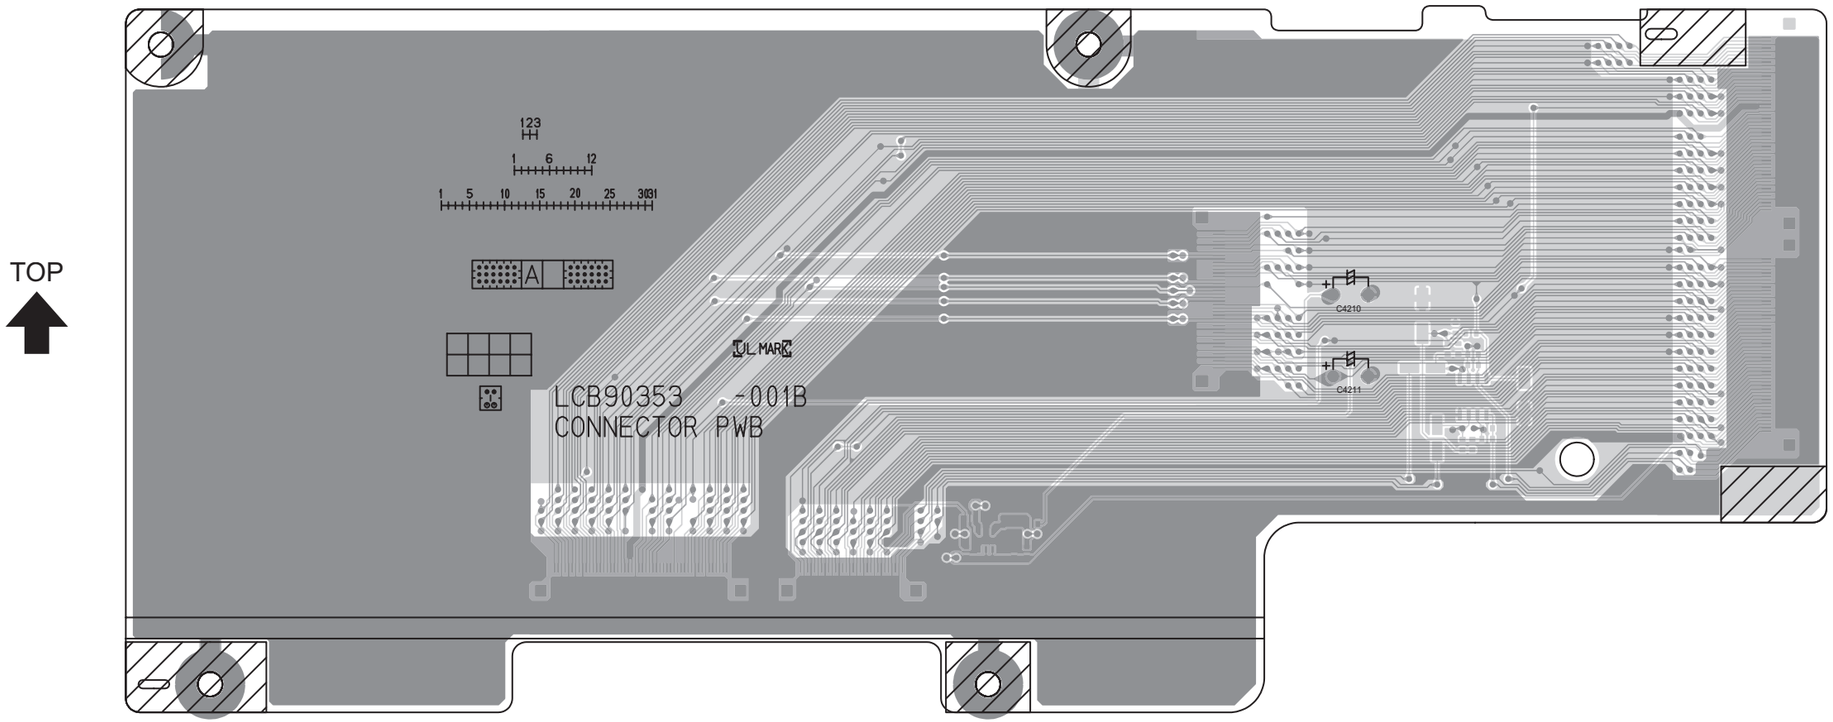


CONNECTOR PWB PATTERN [PARTS SIDE]

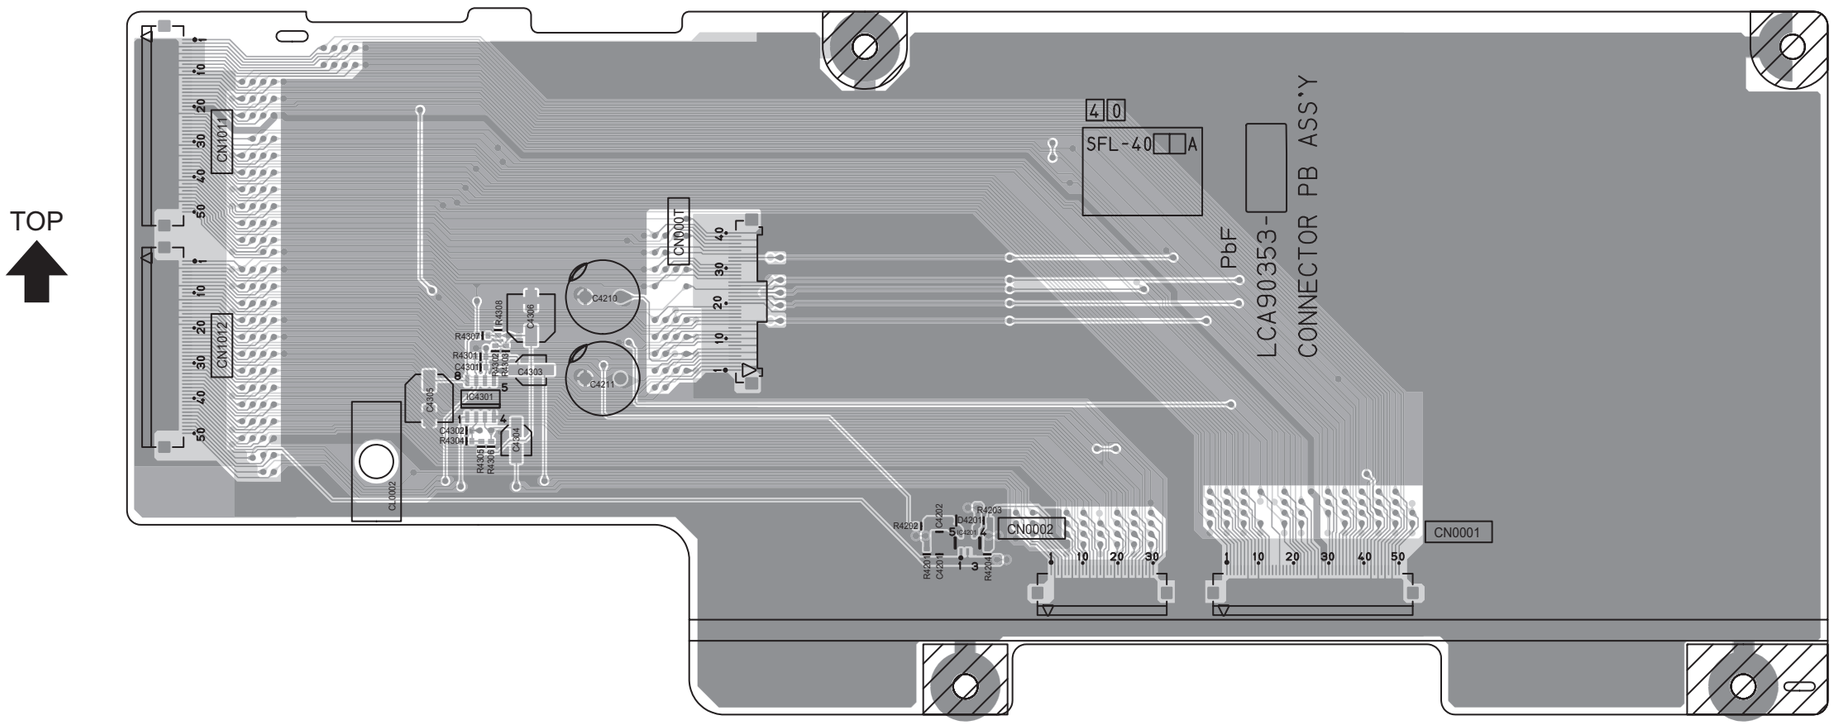


FRONT CONTROL PWB PATTERN [SOLDER SIDE]

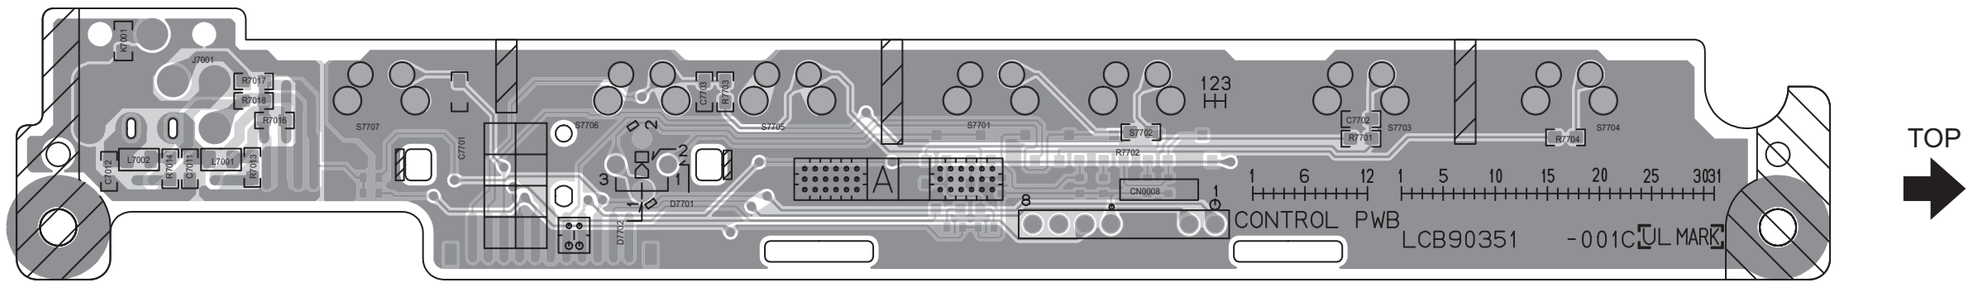


FRONT CONTROL PWB PATTERN [PARTS SIDE]

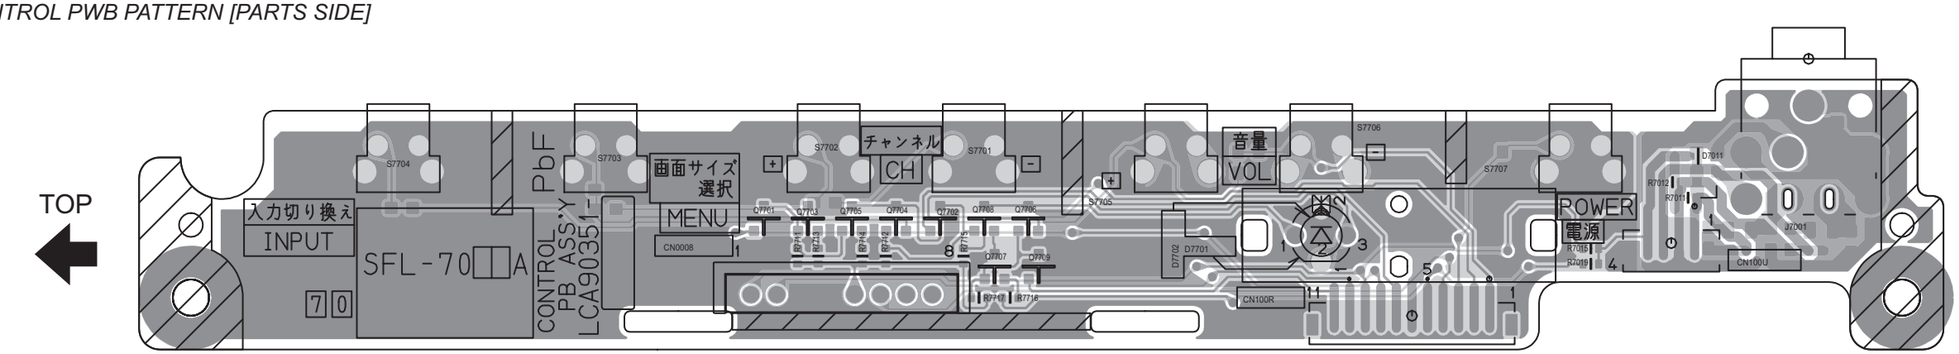


FRONT SENSOR PWB PATTERN [SOLDER SIDE]

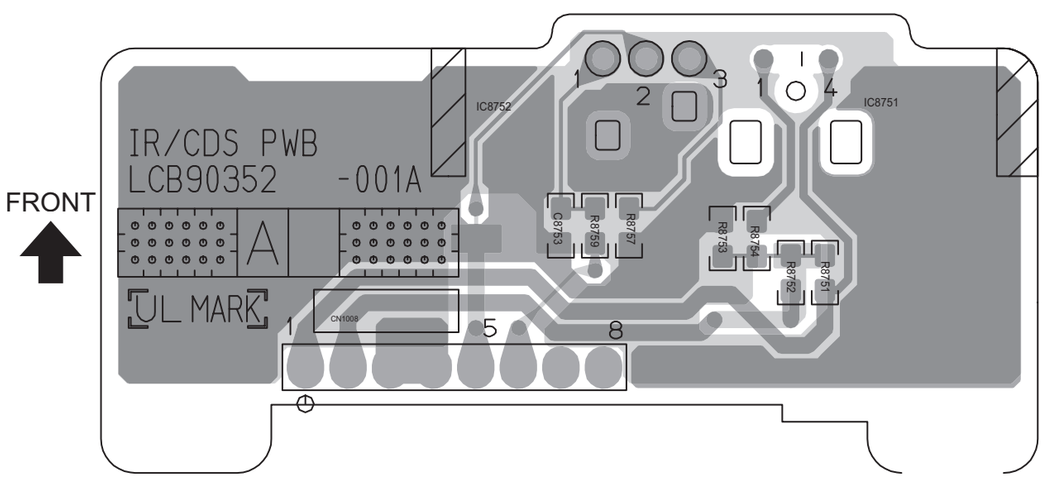


FRONT SENSOR PWB PATTERN [PARTS SIDE]

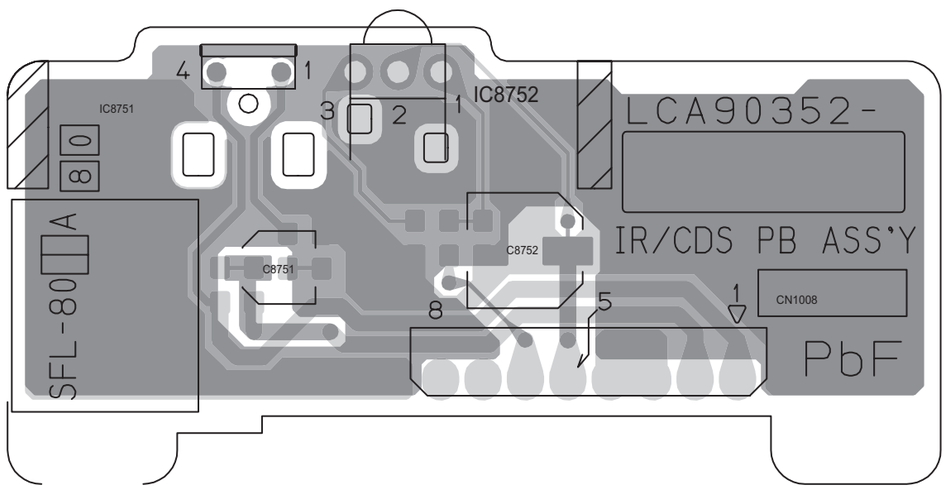


REGULATOR PWB PATTERN [SOLDER SIDE]

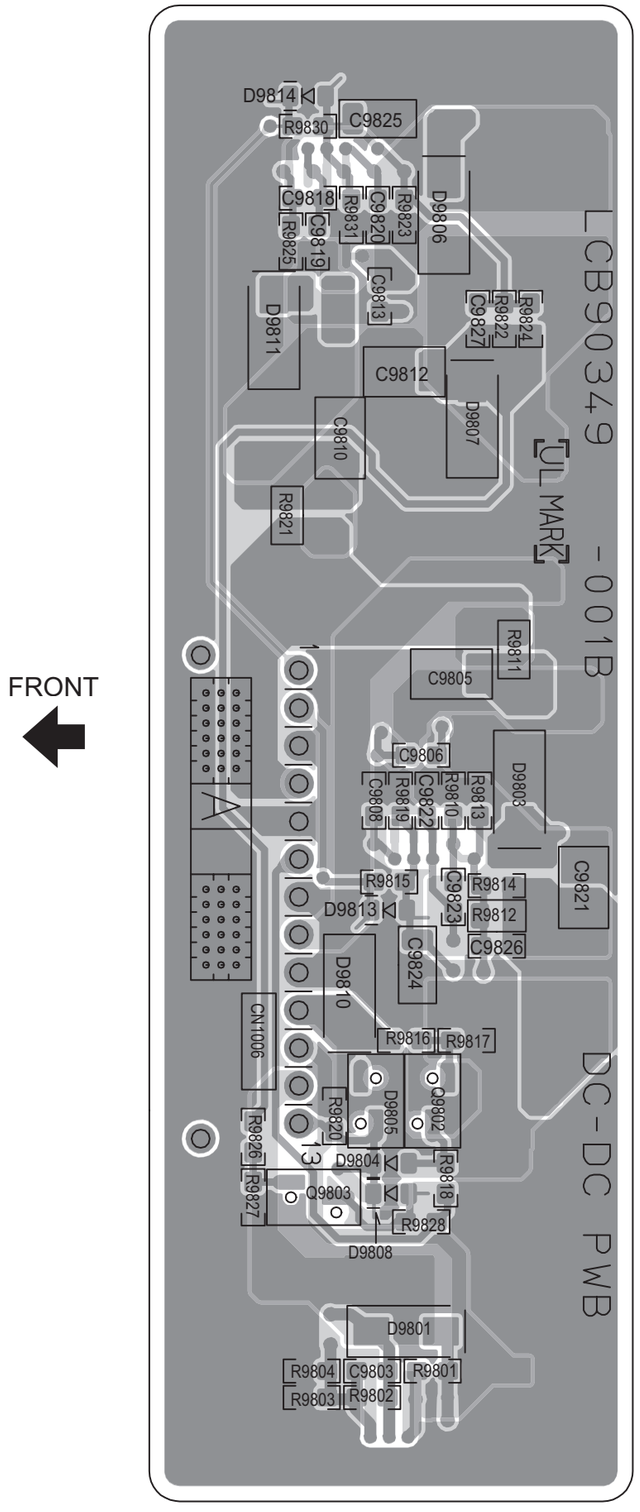

REGULATOR PWB PATTERN [PARTS SIDE]

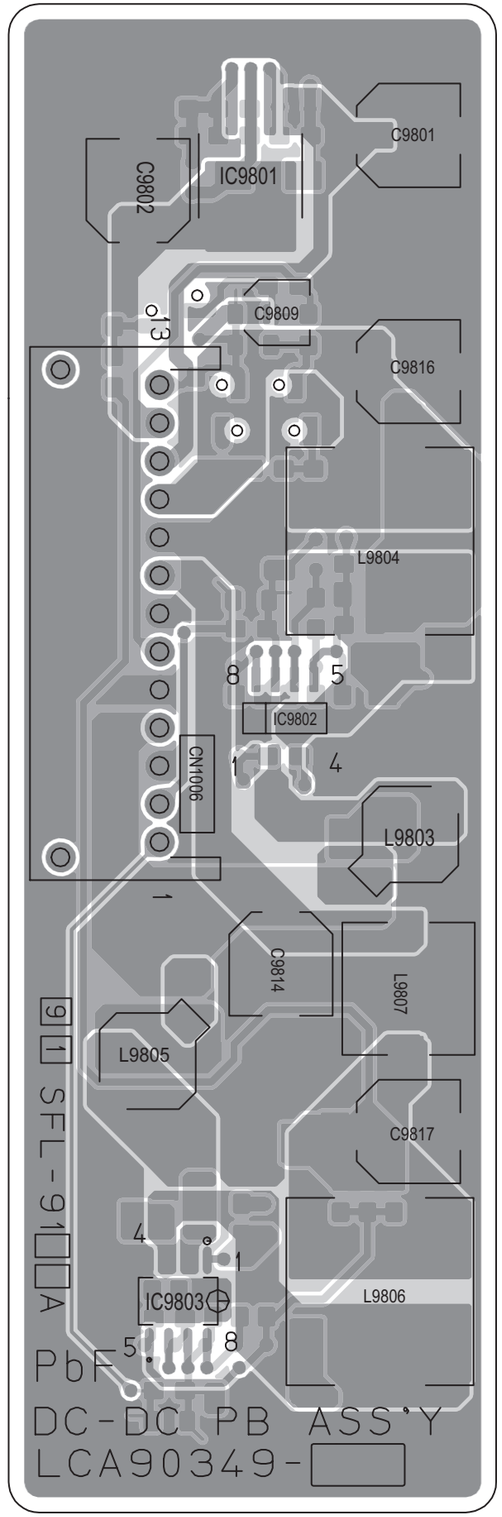


POWER PWB PATTERN [SOLDER SIDE]

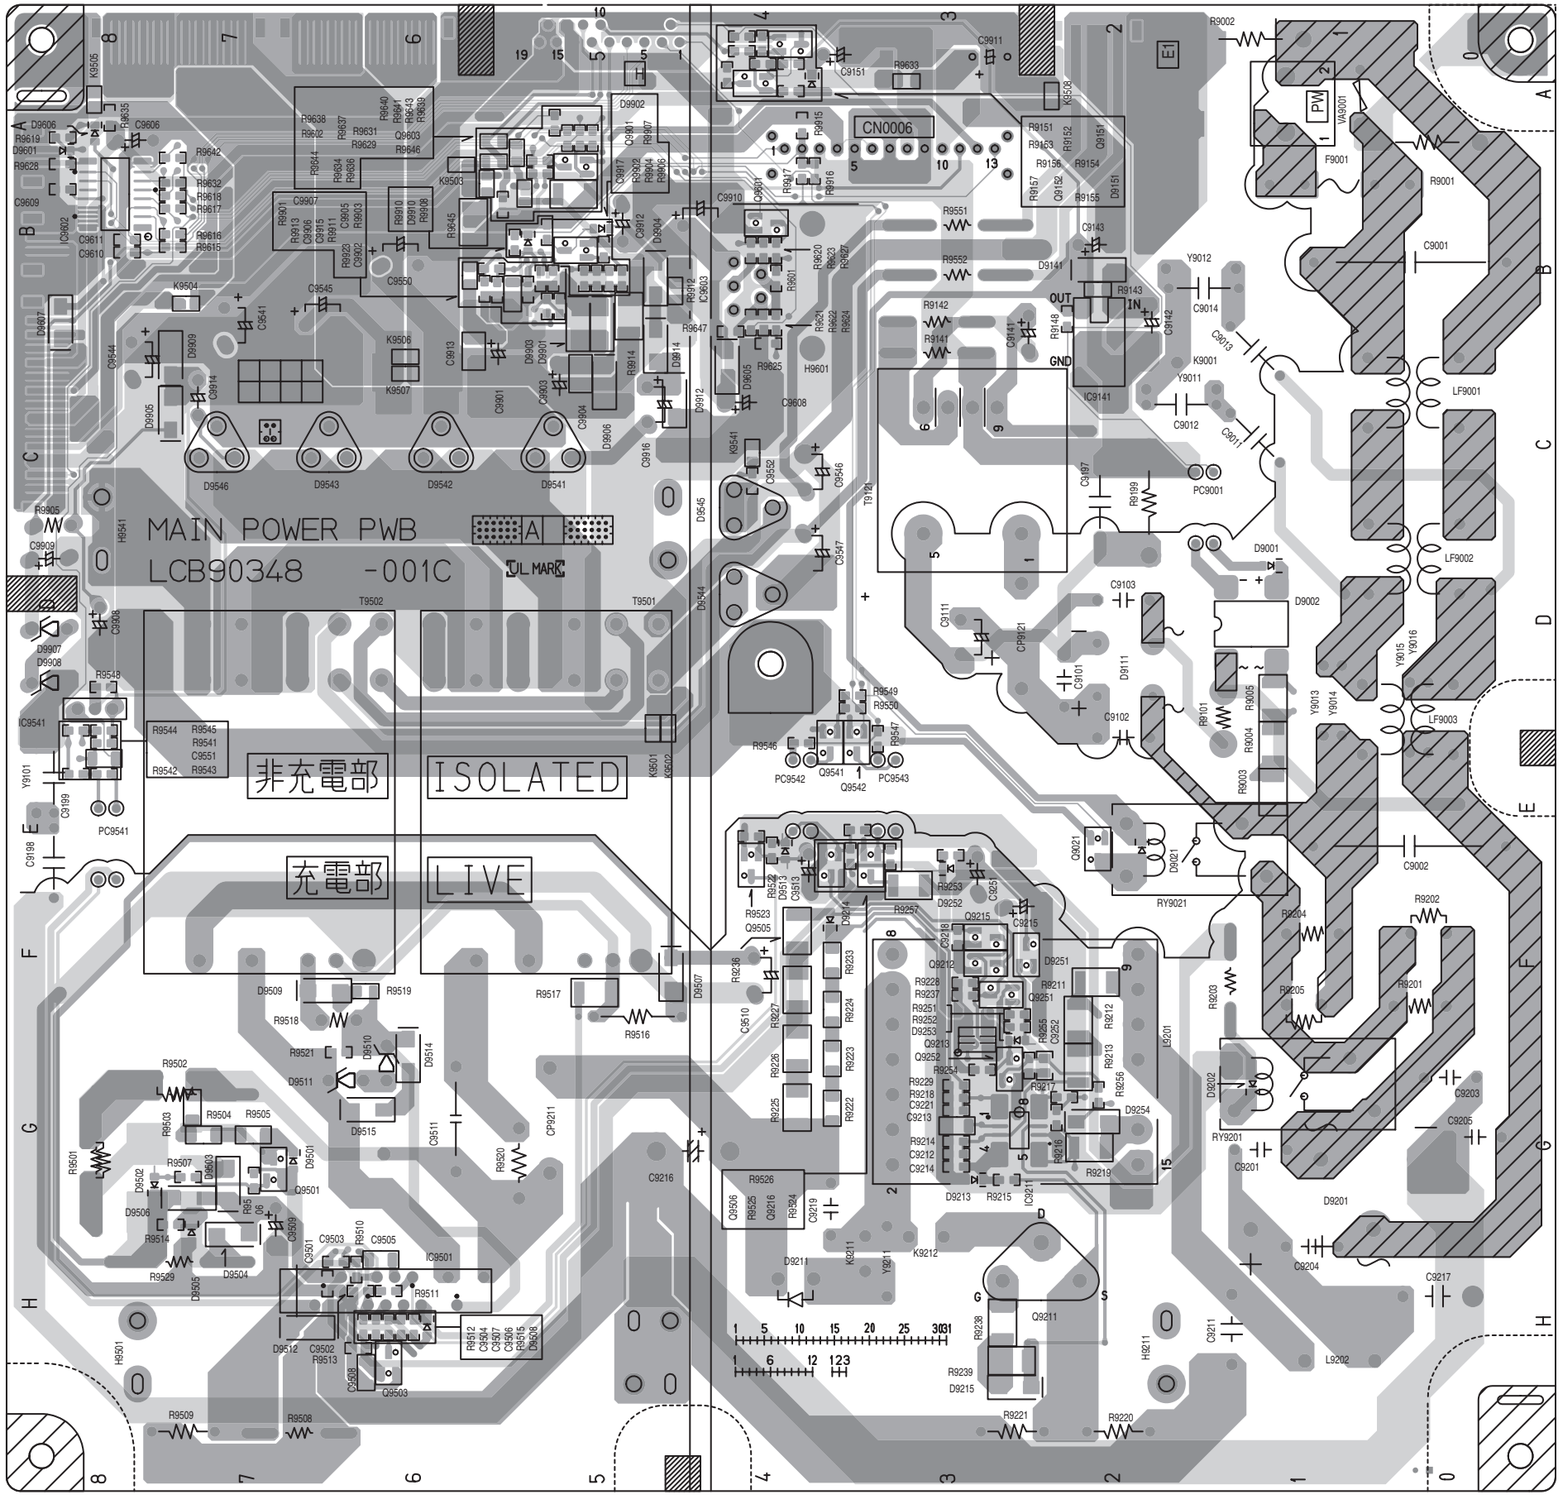

POWER PWB PATTERN [PARTS SIDE]

TOP

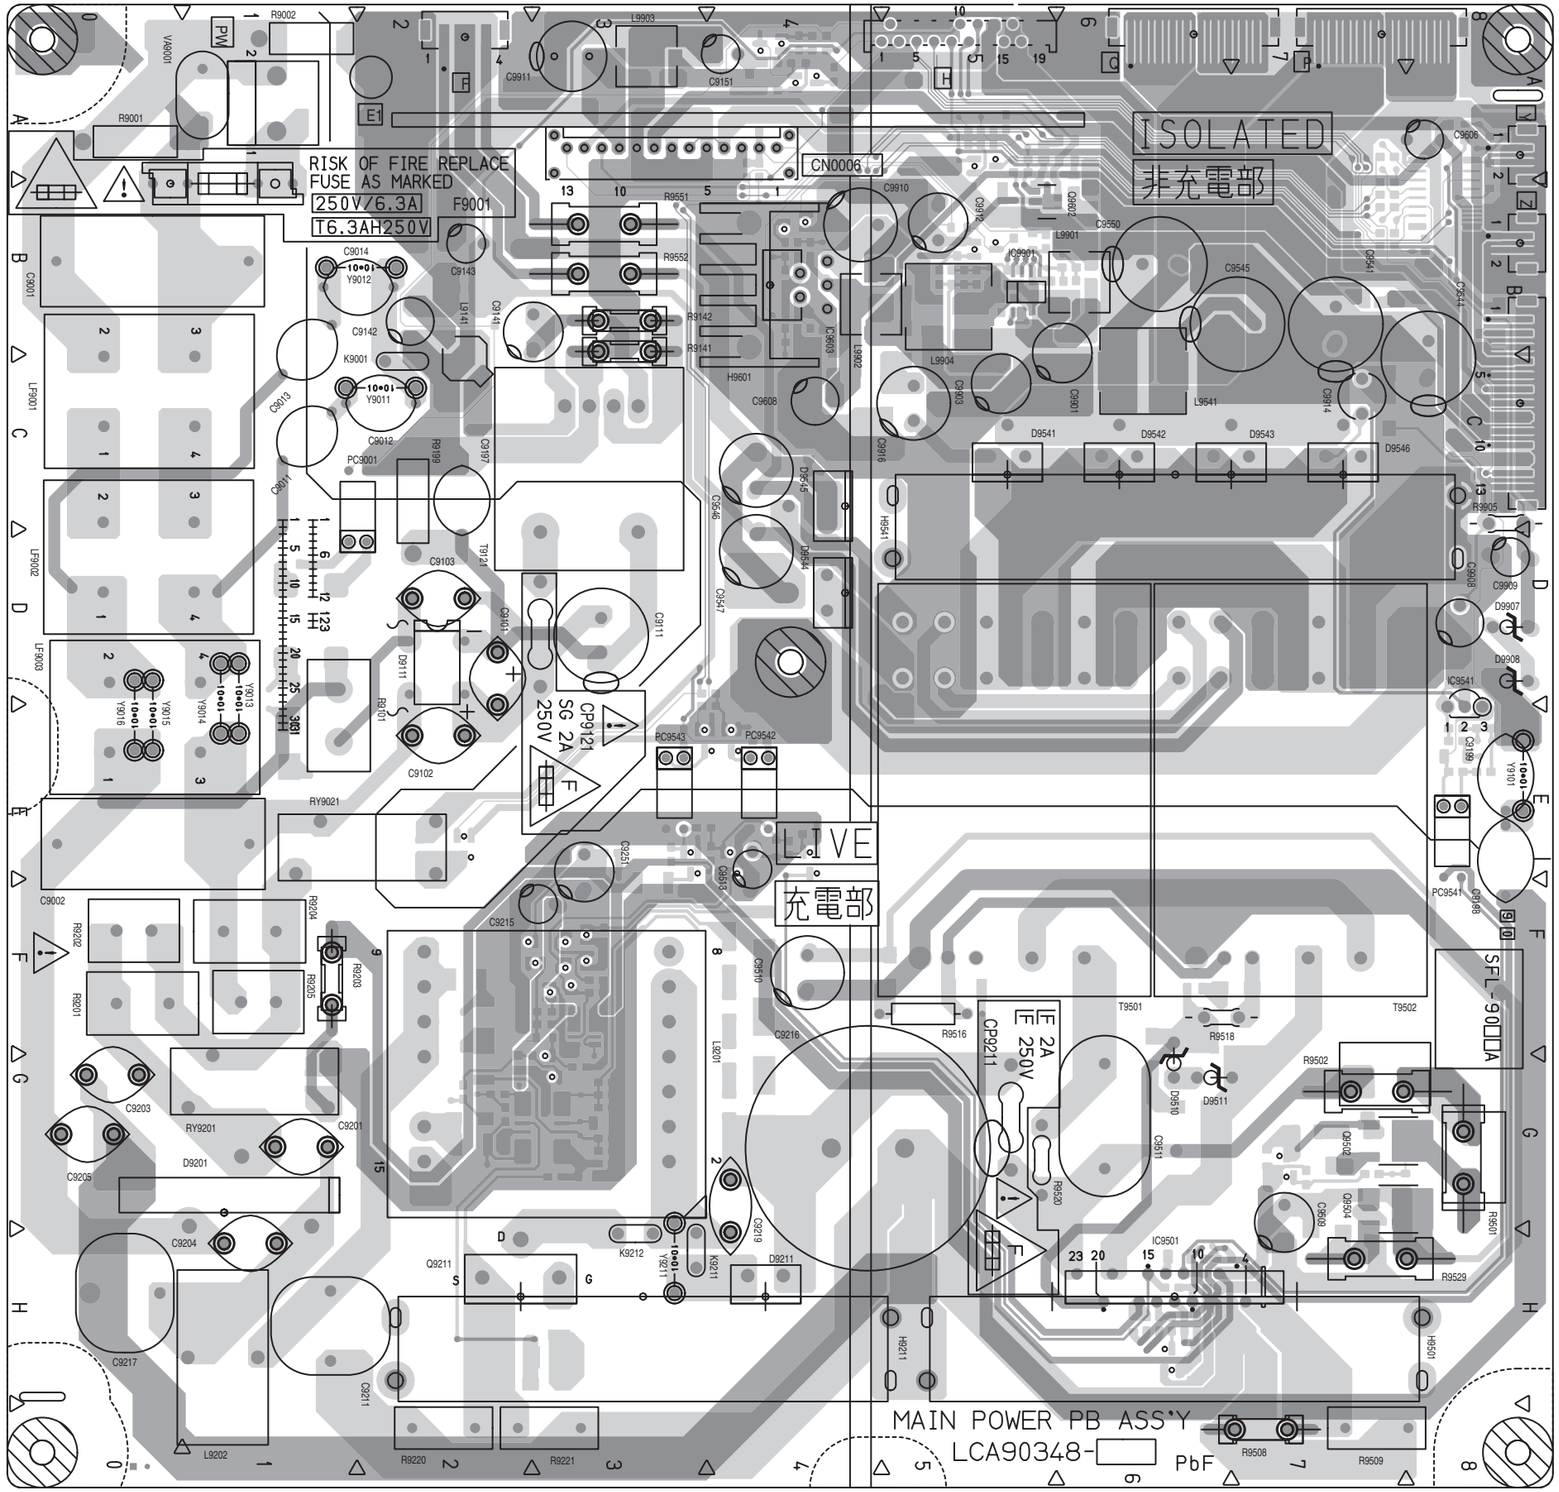

VOLTAGE CHARTS

<RECEIVER>
[P.2-7 - P.2-8]

MODE PIN NO.	DC (V)
IC3101	
1	0
2	5.2
3	5.2
4	0.2
5	5.0
6	0
7	0
8	0
9	0
10	0
11	0
12	4.9
13	4.9
14	4.9
15	0
16	0
IC3501	
1	5.0
2	1.5
3	1.5
4	0
5	2.4
6	2.2
7	0
8	0
9	0
10	2.5
11	5.0
12	5.0
13	5.0
14	2.2
15	2.5
16	0.7
17	0.7
18	0
19	5.0
20	0
21	0
22	5.0
23	0
24	0
25	0
26	2.0
27	2.1
28	0
29	0
30	3.3
31	3.4
32	0
33	8.0
34	6.3
35	0
36	3.8
37	3.8
38	3.7
39	0
40	3.6
41	3.8
42	2.6
43	3.8
44	0
IC3503	
1	4.5
2	4.5
3	4.4
4	0
5	4.5
6	0
7	4.5
8	9.0
IC3504	
1	9.0
2	0
3	8.0
IC3505	
1	0.3
2	1.3
3	1.1
4	0
5	0
6	0
7	0.3
8	2.5
IC3506	
1	0
2	0.3
3	0
4	0.7
5	5.1
IC3507	
1	0
2	0.7
3	0
4	0.2
5	2.5

MODE PIN NO.	DC (V)
IC3508	
1	0
2	2.5
3	0
4	1.1
5	2.5
IC3509	
1	0
2	2.0
3	0
4	1.0
5	2.5
IC3510	
1	2.5
2	0
3	5.0
4	5.0
IC3601	
1	4.4
2	1
3	4.5
4	8.9
5	0
6	0
7	3.4
8	4.5
9	1.9
10	4.4
IC3651	
1	4.4
2	4.4
3	4.4
4	0
5	4.4
6	4.4
7	4.4
8	8.9
Q3001	
E	2.2
C	9.0
B	2.8
Q3502	
E	0
C	9.0
B	0
Q3503	
E	0
C	5.0
B	0
TU3001	
1	3.7
2	2.7
3	0
4	5.3
5	5.2
6	0
7	4.9
8	0
9	30.6
10	0
11	3.0
12	0
13	3.0
14	0
15	5.0
16	1.6
17	3.6
18	4.2
19	5.3
20	5.3
21	2.0
22	1.0

<ANALOG SIGNAL>
[P.2-9 - P.2-10]

MODE PIN NO.	DC (V)
IC501	
1	4.0
2	4.5
3	4.4
4	4.5
5	4.4
6	3.5
7	3.5
8	4.4
9	4.5
10	4.4
11	4.5
12	4.5
13	0
14	3.5
15	4.0
16	4.5
17	4.0
18	4.5
19	4.4
20	0
21	0
22	4.0
23	4.5
24	4.0
25	4.5
26	4.4
27	0.2
28	5.0
29	4.5
30	4.0
31	4.58
32	9.0
33	4.9
34	5.0
35	0
36	0
37	4.4
38	4.5
39	0
40	4.5
41	4.4
42	9.1
43	4.4
44	4.4
45	4.5
46	3.8
47	4.4
48	0
49	0
50	0
51	4.4
52	4.5
53	4.4
54	4.5
55	3.7
56	4.1
57	0.3
58	4.3
59	4.5
60	4.0
61	4.5
62	4.5
63	4.5
64	4.5
IC502	
1	3.2
2	3.5
3	9.0
4	2.9
5	0
6	9.0
IC503	
1	2.9
2	3.0
3	9.0
4	2.7
5	0
6	9.0
IC504	
1	2.1
2	2.1
3	9.0
4	2.3
5	0
6	9.0
Q507	
E	1.5
C	0
B	0.9
Q508	
E	2.9
C	0
B	2.2

MODE PIN NO.	DC (V)
Q509	
E	2.8
C	0
B	2.2
Q511	
E	0
C	5.2
B	0.4
Q512	
E	5.2
C	0
B	4.6
Q513	
1	0
2	0.7
3	0.7
4	0
5	0.2
6	0
Q2051	
E	0
C	0
B	0
Q2052	
E	0
C	0
B	0
Q2053	
E	0
C	0
B	0
Q2055	
E	0
C	0
B	0
Q2151	
E	0
C	0
B	0
Q2152	
E	0
C	0
B	0
Q2153	
E	0
C	0
B	0
Q2171	
E	4.9
C	4.3
B	4.8
Q2172	
E	4.6
C	5.0
B	4.9
Q2173	
E	0
C	5.3
B	0
Q2451	
E	0
C	0
B	0
Q2452	
E	0
C	0
B	0
Q2453	
E	0
C	0
B	0

[P.2-11 - P.2-12]

MODE PIN NO.	DC (V)
IC711	
1	5.2
2	5.3
3	4.6
4	4.6
5	0.4
6	0.4
7	0.4
8	0
9	5.4
10	5.3
11	5.4
12	5.4
13	0
14	5.1
15	4.9
16	5.4
IC801	
1	2.3
2	2.0
3	1.5
4	0
5	2.4
6	5.2
7	2.6
8	0
9	0.4
10	0.8
11	2.5
12	5.2
13	4.9
14	4.9
15	0
16	0
17	0
18	0
19	0
20	2.5
21	1.8
22	1.9
23	1.9
24	0
25	2.6
26	2.6
27	0
28	0
29	0
30	0
31	0
32	5.2
33	2.6
34	2.6
35	2.6
36	0.6
37	5.2
38	4.1
39	1.8
40	3.3
41	2.1
42	4.7
43	1.8
44	2.0
45	5.2
46	2.1
47	3.9
48	1.8
IC802	
1	1.3
2	3.2
3	5.1
4	2.5
5	0
6	1.9
7	2.4
8	0
9	0
10	0
11	5.1
12	0
13	5.2
14	0
15	4.9
16	5.0
17	0
18	0
19	2.5
20	5.1
21	0
22	2.9
23	2.9
24	3.5
25	3.4
26	0
27	3.4
28	1.7

MODE PIN NO.	DC (V)
Q402	
S	3.2
D	2.9
G	5.0
Q403	
S	3.1
D	3.0
G	5.0
Q404	
S	3.2
D	3.1
G	5.3
Q405	
S	3.1
D	3.2
G	5.3
Q801	
E	2.7
C	0
B	2.1
Q802	
E	2.9
C	0
B	2.3
Q804	
E	1.6
C	5.2
B	2.1
Q805	
E	1.6
C	5.2
B	2.2
Q806	
E	1.6
C	5.2
B	2.2
Q807	
E	1.6
C	5.1
B	2.2
Q808	
E	1.6
C	5.2
B	2.2
Q809	
E	1.6
C	5.2
B	2.0
Q810	
E	2.1
C	0
B	1.5
Q851	
E	1.6
C	0
B	1.0
Q853	
E	1.9
C	9.0
B	2.7
Q854	
E	2.8
C	9.0
B	3.3
Q855	
E	2.0
C	0
B	1.4
Q858	
E	2.8
C	9.0
B	3.3
Q859	
E	3.4
C	0.2
B	2.8
Q862	
E	1.0
C	4.1
B	1.6
Q863	
E	3.5
C	5.2
B	4.1

[P.2-13 - P.2-14]

MODE PIN NO.	DC (V)
IC201	
1	0.3
2	0.2
3	0
4	0
5	0
6	0
7	6.2
8	0
9	4.8
10	0
11	8.8
12	1.3
13	0
14	0
15	0.2
16	0
17	0
18	0
19	0.5
20	0
21	5.0
22	5.1
23	0
24	2.1
25	1.2
26	2.1
27	0
28	0.8
29	0.4
30	0.6
IC203	
1	0
2	0
3	0
4	0
5	0
6	0
7	0
8	0
9	0.6
10	0.6
11	0.5
12	0
13	0
14	0
15	0
16	5.2
IC301	
1	5.2
2	4.8
3	5.0
4	0
5	4.4
6	0
7	4.7
8	5.1
9	4.7
10	0.6
11	4.5
12	4.5
13	0
14	4.7
15	0
16	4.7
17	5.1
18	4.7
19	0.6
20	4.5
21	4.5
22	0
23	4.5
24	4.5
25	0
26	0.5
27	4.4
28	0
29	0
30	4.4
31	9.0
32	4.5
33	4.5
34	0
35	4.5
36	4.5
37	0
38	4.54
39	4.5
40	4.5
41	4.5
42	0
43	4.4
44	4.5
45	0
46	4.4
47	9.0
48	4.7

MODE PIN NO.	DC (V)
49	0.4
50	0.4
51	0
52	4.7
53	0
54	4.5
55	1.5
56	0
57	0.4
58	0
59	4.7
60	0
61	4.7
62	0.4
63	4.5
64	4.5
65	0
66	4.7
67	4.7
68	4.7
69	0
70	4.5
71	4.5
72	0
73	5.2
74	4.7
75	4.7
76	4.7
77	0
78	4.5
79	4.5
80	0
Q301	
E	3.8
C	9.0
B	4.6
Q302	
E	3.8
C	9.0
B	4.5
Q303	
E	3.8
C	9.0
B	4.5
Q307	
E	2.8
C	0
B	2.2

[P.2-15 - P.2-16]

MODE PIN NO.	DC (V)
IC6001	
1	8.8
2	4.0
3	0.4
4	0.5
5	4.1
6	4.2
7	0
8	0
9	4.1
10	4.0
11	0
12	0.2
13	4.1
14	0
IC6201	
1	13.4
2	2.8
3	12.2
4	2.5
5	0
IC6521	
1	6.1
2	6.2
3	6.1
4	6.1
5	6.1
6	6.1
7	6.1
8	6.1
9	0.9
10	6.2
11	3.1
12	3.1
13	5.0
14	5.1
15	0
16	12.0
17	0
18	0
19	5.9
20	6.1
21	6.1
22	6.1
23	6.1
24	6.2
25	6.2
26	6.1
27	6.1
28	6.1
29	6.2
30	6.1
IC6551	
1	6.4
2	6.3
3	6.2
4	0
5	6.2
6	6.3
7	6.4
8	12.2
IC6552	
1	6.3
2	6.3
3	6.2
4	0
5	6.2
6	6.3
7	6.3
8	12.2
IC6621	
1	-7.0
2	0
3	0
4	-13.4
5	0
6	0
7	-7.0
8	12.7
IC6661	
1	-7.0
2	-7.3
3	0.1
4	0.3
5	13.3
6	11.8
7	0
8	-13.4
9	-0.7
10	-13.4
11	0
12	11.9
13	13.3
14	0.4
15	-2.9
16	-7.4
17	-7.0

MODE PIN NO.	DC (V)
Q6301	
E	5.3
C	12.2
B	5.9
Q6302	
E	5.3
C	12.2
B	5.9
Q6421	
E	0
C	5.3
B	0.2
Q6431	
E	8.9
C	-0.1
B	9.0
Q6521	
E	0
C	0
B	0
Q6522	
E	0
C	0
B	0
Q6523	
E	0
C	0
B	0
Q6531	
E	0
C	2.8
B	0
Q6532	
E	0
C	0
B	0.7
Q6533	
E	0
C	0
B	0.6
Q6534	
E	0.8
C	0.6
B	0.1
Q6538	
E	0
C	0
B	0
Q6539	
E	0
C	0
B	0
Q6661	
E	13.4
C	-13.4
B	13.3
Q6662	
E	-13.4
C	0.3
B	-13.4
Q6663	
E	0
C	13.3
B	0
Q6672	
E	0
C	8.9
B	0
Q6673	
E	8.5
C	0
B	9.0

[P.2-17 - P.2-18]

MODE PIN NO.	DC (V)
IC902	
1	5.0
2	0
3	3.3
IC903	
1	12.0
2	0
3	9.0
Q901	
1	11.9
2	0
3	9.0
Q902	
E	6.0
C	5.3
B	5.3

<DIGITAL SIGNAL>
[P.2-19 - P.2-20]

MODE PIN NO.	DC (V)
IC1502	
1	4.3
2	0
3	4.4
4	0
5	3.6
6	0
7	3.6
8	0

[P.2-21 - P.2-22]

MODE PIN NO.	DC (V)
IC0401	
1	3.2
2	0.2
3	0
4	3.2
5	3.3
Q0101	
E	2.8
C	8.0
B	3.8
Q0102	
E	8.7
C	3.7
B	8.0
Q0104	
E	4.4
C	0
B	3.7
Q0107	
E	1.6
C	0
B	0.8
Q0108	
E	0.8
C	9.1
B	1.5
Q0109	
1	1.4
2	0
3	0
4	1.5
5	0
6	1.5
Q0110	
1	0
2	0.6
3	0
4	0
5	0.6
6	0
Q0201	
E	3.0
C	7.9
B	3.7
Q0202	
E	8.7
C	3.9
B	7.9
Q0203	
E	0
C	2.0
B	0
Q0204	
E	4.7
C	0
B	4.0
Q0207	
E	2.5
C	0
B	2.0
Q0208	
E	1.8
C	9.1
B	2.4
Q0209	
1	2.4
2	0.1
3	0
4	2.5
5	0
6	0
Q0210	
1	0
2	0.6
3	0.1
4	0.1
5	0.5
6	0.1
Q0301	
E	3.1
C	7.9
B	3.8
Q0302	
E	8.7
C	3.9
B	7.8
Q0303	
E	0
C	2.0
B	0
Q0304	
E	4.7
C	0
B	4.0

MODE PIN NO.	DC (V)
Q0307	
E	2.5
C	0
B	2.0
Q0308	
E	1.8
C	9.1
B	2.4
Q0309	
1	0
2	0.1
3	2.4
4	2.5
5	0.1
6	2.5
Q0310	
1	0
2	0
3	0.6
4	0.1
5	0.3
6	0.1

[P.2-23 - P.2-24]

MODE PIN NO.	DC (V)
IC1001	
1	2.5
2	1.0
3	1.2
4	0
5	3.3
6	1.7
7	1.6
8	0
9	0
10	1.5
11	0.2
12	0.2
13	0.2
14	0
15	0.2
16	0.2
17	1.5
18	0.2
19	0.2
20	0
21	1.5
22	0.2
23	0.2
24	3.3
25	0.2
26	0.1
27	0
28	0
29	0
30	3.2
31	3.2
32	3.2
33	0
34	0
35	0
36	1.5
37	0
38	0
39	0
40	0
41	0
42	3.3
43	0.7
44	0.9
45	0
46	0.7
47	1.9
48	1.9
49	0
50	0
51	1.5
52	0
53	2.5
54	1.3
55	1.4
56	0
57	0
58	1.3
59	1.5
60	0
61	0
62	0
63	1.1
64	3.3
65	1.0
66	0.8
67	0
68	1.0
69	1.0
70	1.5
71	0.9
72	0.8
73	0
74	2.3
75	0.2
76	0
77	1.6
78	1.5
79	0
80	1.1
81	0.9
82	1.7
83	1.3
84	0
85	1.1
86	0
87	0.8
88	0.8
89	1.7
90	1.2
91	2.5
92	1.1
93	0
94	1.2
95	0.8
96	2.5

MODE PIN NO.	DC (V)
97	2.0
98	0
99	1.1
100	1.5
IC1002	
1	3.3
2	0
3	3.3
4	1.0
5	2.4
Q1001	
E	0
C	3.3
B	0
Q1003	
E	1.4
C	2.5
B	2.0
Q1004	
E	4.3
C	0
B	3.7
Q1101	
E	3.0
C	9.0
B	3.7
Q1103	
E	1.8
C	0
B	1.2
Q1201	
E	3.8
C	9.1
B	4.5
Q1203	
E	2.1
C	0
B	1.4
Q1301	
E	3.9
C	9.1
B	4.6
Q1303	
E	2.6
C	0
B	2.0
Q1401	
E	4.0
C	9.1
B	4.6
Q1403	
E	2.6
C	0
B	1.9

[P.2-27 - P.2-28]

MODE PIN NO.	DC (V)
IC3403	
1	0
2	3.3
3	0
4	3.3
IC3501	
1	1.2
2	2.4
3	1.2
4	1.2
5	0
6	1.2
7	1.2
8	2.4
9	1.2
10	1.2
11	0
12	1.2
13	1.2
14	2.4
15	2.4
16	0
17	1.2
18	1.2
19	0
20	1.2
21	1.2
22	2.5
23	0.4
24	0.4
25	1.7
26	1.7
27	1.7
28	0
29	0.7
30	0.7
31	0.7
32	0.7
33	0.7
34	0.7
35	2.4
36	0.7
37	0
38	0
39	0
40	0
41	0
42	0
43	0
44	0
45	0.7
46	0
47	0.7
48	0.7
49	0.7
50	0.7
51	0.7
52	0
53	1.7
54	1.3
55	1.2
56	0.4
57	0.4
58	1.2
59	2.5
60	1.2
61	1.2
62	0
63	1.2
64	1.2
65	2.4
66	0
67	2.4
68	1.2
69	1.2
70	0
71	1.2
72	1.2
73	2.4
74	1.2
75	1.2
76	0
77	1.2
78	1.2
79	2.5
80	1.2
81	1.2
82	0
83	1.2
84	1.2
85	0
86	0
87	0
88	0
89	0
90	0
91	0

MODE PIN NO.	DC (V)
92	0
93	0
94	1.2
95	2.4
96	0
97	1.2
98	1.2
99	0
100	1.2
IC3502	
1	1.2
2	2.4
3	1.2
4	1.2
5	0
6	1.2
7	1.2
8	2.4
9	1.2
10	1.2
11	0
12	1.2
13	1.2
14	2.4
15	2.4
16	0
17	1.2
18	1.2
19	0
20	1.2
21	1.2
22	2.5
23	0.4
24	0.4
25	1.7
26	1.7
27	1.7
28	0
29	0.7
30	0.6
31	0.7
32	0.7
33	0.7
34	0.7
35	2.4
36	0.7
37	0
38	0
39	0
40	0
41	0
42	0
43	0
44	0
45	0.7
46	0
47	0.7
48	0.7
49	0.7
50	0.7
51	0.7
52	0
53	1.7
54	1.3
55	1.2
56	0.4
57	0.4
58	1.2
59	2.5
60	1.2
61	1.2
62	0
63	1.2
64	1.2
65	2.5
66	0
67	2.4
68	1.2
69	1.2
70	0
71	1.2
72	1.2
73	2.4
74	1.2
75	1.2
76	0
77	1.2
78	1.2
79	2.5
80	1.2
81	1.2
82	0
83	1.2
84	1.2
85	0
86	2.5
87	0

MODE PIN NO.	DC (V)
88	0
89	0
90	0
91	0
92	0
93	0
94	1.2
95	2.5
96	2.5
97	1.2
98	1.2
99	0
100	0
IC3503	
1	0
2	2.4
3	1.2
4	1.2
5	2.5
6	2.4
7	2.5
8	1.2
Q3001	
E	2.2
C	3.3
B	2.8
Q3002	
E	2.9
C	0
B	2.2
Q3003	
E	0.7
C	3.3
B	1.4
Q3004	
E	1.4
C	0
B	0.7

[P.2-29 - P.2-30]

MODE PIN NO.	DC (V)
IC4003	
1	0
2	0
3	0
4	0
5	0
6	0
7	3.2
8	3.3
9	0
10	0
11	0
12	0
13	0
14	0
15	0
16	0
17	0
18	0
19	0
20	0
21	0.3
22	0.5
23	0.4
24	0
25	0.5
26	0.5
27	0.5
28	0.5
29	0.4
30	3.3
31	0
32	3.3
IC4004	
1	0
2	0
3	0
4	0
5	3.3
6	3.2
7	0
8	3.3

[P.2-31 - P.2-32]

MODE PIN NO.	DC (V)
IC6502	
1	3.3
2	0.8
3	1.4
4	0
5	0
6	0.3
7	0
8	0
9	3.2
10	0.9
11	0
12	0.3
13	0
14	1.5
15	1.1
16	0
17	0
18	0.6
19	0.7
20	0.8
21	0
22	0.4
23	0.4
24	0
25	1.6
26	3.2
27	3.3
28	0
29	0
30	2.7
31	1.2
32	3.3
33	0
34	0
35	0
36	0
37	1.1
38	1.3
39	1.2
40	1.2
41	1.2
42	1.2
43	0
44	3.3
45	1.1
46	1.3
47	1.1
48	1.3
49	0
50	0.7
51	0.9
52	0.8
53	0
54	0.4
55	0.4
56	0.7
Q6501	
E	0
C	4.7
B	0
Q6502	
E	0
C	3.0
B	0.2
CN000W	
1	2.9
2	3.3
3	0
4	0
5	3.0
6	3.0
7	3.0
8	4.5
9	4.9
10	0
11	0.2
12	0
CN0LV2	
1	0
2	0
3	1.3
4	1.1
5	0
6	0
7	1.3
8	0.1
9	0
10	0
11	1.2
12	1.2
13	0
14	0
15	1.2
16	1.3
17	0
18	0

MODE PIN NO.	DC (V)
19	1.2
20	1.2
21	0
22	0
23	0
24	3.3
25	3.3
26	0
27	4.9
28	4.9
29	4.9
30	4.9
31	3.3

[P.2-35 - P.2-36]

MODE PIN NO.	DC (V)
IC7602	
1	0
2	0
3	0
4	0
5	3.2
6	3.2
7	0
8	3.2

[P.2-37 - P.2-38]

MODE PIN NO.	
IC7001	
1	3.2
2	0
3	0
4	2.8
5	0
6	0
7	3.1
8	0
9	0
10	3.2
11	3.2
12	3.2
13	3.2
14	0
15	3.2
16	0
17	3.2
18	0
19	0
20	3.2
21	3.2
22	3.2
23	1.5
24	1.4
25	3.2
26	0
27	0
28	0
29	0
30	3.2
31	0
32	0
33	0
34	3.2
35	0
36	3.1
37	0
38	3.2
39	0
40	3.2
41	0
42	3.2
43	0
44	0
45	1.9
46	0
47	0
48	3.2
49	0
50	2.0
51	3.2
52	0
53	3.2
54	3.2
55	3.2
56	3.2
57	3.2
58	3.2
59	0
60	0
61	0
62	0
63	0
64	0
65	0
66	3.3
67	0
68	3.2
69	3.2
70	3.2
71	3.2
72	0
73	3.2
74	3.2
75	3.2
76	3.2
77	3.4
78	0
79	3.3
80	0
81	0
82	3.2
83	3.2
84	3.2
85	3.2
86	3.2
87	3.2
88	0
89	0
90	2.8
91	0
92	0
93	3.2
94	0
95	3.2
96	3.2

MODE PIN NO.	DC (V)
97	0
98	0
99	3.2
100	2.4
IC7002	
1	0
2	0
3	0
4	0
5	3.2
6	3.2
7	0
8	3.2
IC7401	
1	3.2
2	3.2
3	0
4	0
Q7201	
E	4.7
C	0.3
B	4.2
Q7202	
E	3.9
C	4.1
B	2.3
Q7203	
E	3.9
C	4.7
B	4.2
Q7204	
E	0
C	4.5
B	0
Q7205	
E	0
C	0
B	0
Q7206	
E	0
C	2.0
B	1.0
Q7207	
E	3.2
C	3.2
B	0

[P.2-39 - P.2-40]

MODE PIN NO.	DC (V)
IC7501	
1	3.3
2	0.2
3	0.2
4	3.3
5	0
6	0
7	0
8	0
9	0
10	0
11	0.3
12	3.2
13	0
14	3.3
15	0
16	0
17	0
18	0
19	0
20	0
21	2.4
22	0
23	0
24	2.5
25	0
26	0.8
27	2.4
28	0
29	0
30	1.1
31	0
32	0
33	0.8
34	0.8
35	1.6
36	0.9
37	0
38	1.0
39	2.9
40	2.5
41	0
42	3.2
43	1.6
44	2.5
45	3.3
46	3.3
47	3.2
48	0
49	0
50	3.3
51	1.5
52	0
53	3.3
54	0.7
55	0.1
56	2.1
57	0.1
58	1.1
59	1.1
60	0
61	3.3
62	0.3
63	0.2
64	1.1
65	1.5
66	0.8
67	0.5
68	0
69	3.3
70	0.5
71	0.7
72	1.0
73	3.3
74	3.3
75	3.2
76	2.0
77	1.2
78	0
79	0
80	0
81	0
82	3.2
83	0
84	0
85	3.3
86	0
87	2.4
88	0
89	3.2
90	0
91	3.2
92	0
93	0
94	0
95	0
96	0

MODE PIN NO.	DC (V)
97	0
98	3.3
99	3.2
100	0
101	3.2
102	3.3
103	3.3
104	0
105	0
106	3.2
107	0
108	0.6
109	0.3
110	0
111	2.5
112	0.3
113	0.3
114	0.2
115	0
116	2.4
117	0
118	0
119	2.5
120	0
121	0.7
122	0
123	2.4
124	2.4
125	2.4
126	1.7
127	0.5
128	0
IC7502	
1	3.3
2	3.2
3	0
4	0
IC7503	
1	3.3
2	0.2
3	3.3
4	1.2
5	1.6
6	0
7	0.7
8	0.6
9	3.3
10	1.0
11	0.9
12	0
13	0.8
14	3.3
15	0
16	3.2
17	2.5
18	2.9
19	2.4
20	1.2
21	1.1
22	0
23	0
24	0.9
25	1.6
26	0
27	3.3
28	0
29	0.7
30	2.3
31	0.8
32	2.5
33	0
34	0
35	0
36	0
37	3.2
38	1.58
39	0
40	0
41	0
42	0.3
43	3.3
44	0.2
45	0.6
46	0
47	1.0
48	0.9
49	3.3
50	0.3
51	2.0
52	0
53	1.2
54	0

MODE PIN NO.	DC (V)
IC7505	
1	4.7
2	0
3	1.3
4	2.4
5	3.3
IC7506	
1	0.2
2	3.3
3	0.1
4	0.1
5	0.1
6	0
7	0
8	0
9	0
10	0
11	0
12	3.3
13	0.4
14	3.2
15	3.3
16	3.3
IC9001	
1	8.1
2	11.9
3	3.3
4	0
5	1.2
6	1.3
7	5.3
8	0
IC9101	
1	7.3
2	11.8
3	2.4
4	0
5	1.2
6	1.4
7	5.3
8	0
IC9201	
1	6.4
2	11.8
3	1.5
4	0
5	1.2
6	1.3
7	5.1
8	0
Q7501	
E	2.6
C	0
B	2.1
Q7508	
E	0
C	0
B	0

<CONNECT>
[P.2-41 - P.2-42]

MODE PIN NO.	DC (V)
IC4201	
1	0.6
2	0.6
3	0
4	0.2
5	3.3

<FRONT CONTROL>
[P.2-43 - P.2-44]

MODE PIN NO.	DC (V)
Q7701	
E	0
C	0
B	3.2
Q7705	
E	3.0
C	2.9
B	0
Q7706	
E	0
C	0
B	0
Q7709	
E	0
C	0
B	0

<FRONT SENSOR>
[P.2-45 - P.2-46]

MODE PIN NO.	DC (V)
IC8751	
1	4.4
2	2.0
3	0
4	5.1
IC8752	
1	3.7
2	5.0
3	0

<POWER>
[P.2-47 - P.2-48]

MODE PIN NO.	DC (V)
IC9141	
1	5.7
2	0
3	5.0
IC9211	
1	2.5
2	0
3	0.7
4	0
5	2.6
6	0
7	13.1
8	20.2
Q9021	
E	0
C	0.1
B	3.1
Q9211	
S	0
D	87.8
G	13.1
Q9212	
E	0
C	10.2
B	0
Q9213	
1	20.2
2	0
3	0
4	0
5	0
6	20.2
Q9215	
E	0
C	0
B	0.6
Q9216	
E	0
C	10.7
B	0.1
Q9251	
E	0
C	10.2
B	0.5
Q9252	
E	0
C	0
B	10.7

[P.2-49 - P.2-50]

MODE PIN NO.	DC (V)
IC9501	
4	0
7	20.3
8	0
10	4.9
11	1.1
12	4.9
13	3.0
14	0.8
15	5.0
16	1.3
19	256.5
20	255.3
23	378.2
IC9541	
1	2.4
2	0
3	9.0
IC9602	
1	0
2	4.9
3	4.9
4	5.3
5	0
6	5.3
7	0
8	0
9	0
10	0
11	0
12	0
13	5.3
14	0
15	0
16	0
IC9603	
1	0
2	2.1
3	12.0
4	2.5
5	16.2
IC9901	
1	13.4
2	11.9
3	9.1
4	0
5	1.2
6	1.2
7	3.1
8	0
Q9501	
E	0
C	0
B	0.6
Q9502	
S	0
D	0.4
G	378.2
Q9503	
E	0
C	0
B	0.6
Q9504	
S	22.6
D	20.9
G	39.8
Q9506	
E	0
C	9.9
B	0.1
Q9541	
E	0
C	0
B	3.2
Q9602	
E	11.2
C	11.8
B	11.9
Q9603	
E	0
C	0
B	5.2
Q9901	
E	0
C	0
B	0.6
CN000P	
1	12.0
2	12.0
3	12.0
4	12.0
5	12.0
6	0
7	0
8	0
9	0
10	0

MODE PIN NO.	DC (V)
CN000Q	
1	12.0
2	12.0
3	12.0
4	12.0
5	12.0
6	0
7	0
8	0
9	0
10	0


<REGULATOR>
[P.2-51 - P.2-52]

MODE PIN NO.	DC (V)
IC9802	
1	10.0
2	11.9
3	5.2
4	0
5	1.2
6	1.2
7	3.1
8	0
IC9803	
1	9.6
2	11.9
3	5.2
4	0
5	1.2
6	1.5
7	5.1
8	1.6
Q9802	
E	0
C	0
B	0.6
Q9803	
E	0
C	0
B	0.6

WAVEFORMS

RECEIVER PWB (SHEET1)


TU3001-16



1.8 Vp-p


ANALOG SIGNAL PWB (1/5) (SHEET2)

IC501-41




2.1 Vp-p

IC501-44




2.1 Vp-p

IC501-49




2.1 Vp-p

IC501-53




2.1 Vp-p

IC501-56



2.1 Vp-p


IC501-63



1.8 Vp-p


ANALOG SIGNAL PWB (2/5) (SHEET3)

IC801-1




1.0 Vp-p

IC801-3




2.1 Vp-p

IC801-4




5.0 Vp-p

IC801-5




0.7 Vp-p

IC801-7




0.3 Vp-p

IC801-9




4.6 Vp-p

IC801-11




0.8 Vp-p

IC801-21




0.5 Vp-p

IC801-22




0.6 Vp-p

IC801-23




0.6 Vp-p

IC801-38




0.3 Vp-p

IC801-46




0.8 Vp-p

IC802-7




1.0 Vp-p

IC802-19




0.4 Vp-p

IC802-25



1.5 Vp-p


IC802-27



0.5 Vp-p


ANALOG SIGNAL PWB (3/5) (SHEET4)

IC201-1




4.6 Vp-p

IC201-2




5.0 Vp-p

IC201-9




0.2 Vp-p

IC201-19




3.0 Vp-p

IC201-26




0.8 Vp-p

IC201-29




3.0 Vp-p

IC301-35




1.5 Vp-p

IC301-36




1.5 Vp-p

IC301-38




1.5 Vp-p

IC301-43




1.5 Vp-p

IC301-44




1.5 Vp-p

IC301-46




1.5 Vp-p

IC301-74




0.5 Vp-p

IC301-75



0.4 Vp-p


IC301-76



0.4 Vp-p


DIGITAL SIGNAL PWB (1/11) (SHEET7)

IC1502-1



2.1 Vp-p

IC1502-5



1.5 Vp-p

IC1502-7

1.5 Vp-p

DIGITAL SIGNAL PWB (3/11) (SHEET9)

IC1001-7

5.2 Vp-p

IC1001-58

4.8 Vp-p

IC1001-75

3.4 Vp-p

IC1001-76

3.4 Vp-p

IC1001-85

0.6 Vp-p

IC1001-92

0.7 Vp-p

IC1001-94

0.7 Vp-p

DIGITAL SIGNAL PWB (7/11) (SHEET13)

IC6502-27

3.2 Vp-p

IC6502-28

3.2 Vp-p

IC6502-31

5.0 Vp-p

DIGITAL SIGNAL PWB (11/11) (SHEET17)

IC7501-102

3.4 Vp-p

IC7501-103

3.4 Vp-p

IC7501-108

1.4 Vp-p

IC7501-121

0.8 Vp-p

IC7506-1

4.2 Vp-p

IC7506-2

3.2 Vp-p

IC7506-12

3.2 Vp-p

IC7506-13

3.0 Vp-p

IC7506-14

3.2 Vp-p

IC7506-15

3.4 Vp-p

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY VIDEO DISPLAY CATEGORY 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.YA208)

Printed in Japan
VPT

PARTS LIST

CAUTION

- The parts identified by the ⚠ symbol are important for the safety . Whenever replacing these parts, be sure to use specified ones to secure the safety.
- The parts not indicated in this Parts List and those which are filled with lines --- in the Parts No. columns will not be supplied.
- P.W. BOARD Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
CR	Carbon Resistor	C CAP.	Ceramic Capacitor
FR	Fusible Resistor	E CAP.	Electrolytic Capacitor
PR	Plate Resistor	M CAP.	Mylar Capacitor
VR	Variable Resistor	CH CAP.	Chip Capacitor
HV R	High Voltage Resistor	HV CAP.	High Voltage Capacitor
MF R	Metal Film Resistor	MF CAP.	Metalized Film Capacitor
MG R	Metal Glazed Resistor	MM CAP.	Metalized Mylar Capacitor
MP R	Metal Plate Resistor	MP CAP.	Metalized Polystyrol Capacitor
OM R	Metal Oxide Film Resistor	PP CAP.	Polypropylene Capacitor
CMF R	Coating Metal Film Resistor	PS CAP.	Polystyrol Capacitor
UNF R	Non-Flammable Resistor	TF CAP.	Thin Film Capacitor
CH V R	Chip Variable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH MG R	Chip Metal Glazed Resistor	TAN. CAP.	Tantalum Capacitor
COMP. R	Composition Resistor	CH C CAP.	Chip Ceramic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
		CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

RESISTORS									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% -10%	+50% -10%	+80% -20%	+100% -0%

CONTENTS

USING P.W. BOARD & REMOTE CONTROL UNIT 3-2
EXPLODED VIEW PARTS LIST 3-3
EXPLODED VIEW 3-4

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B] 3-6
ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2) 3-6
CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2) 3-10
FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2) 3-10
FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2) 3-10
POWER P.W. BOARD ASS'Y (SFL-9013A-H2) 3-10
REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2) 3-12
DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D301A-H2) 3-12
RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2) 3-18

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B/A] 3-20
ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2) 3-20
CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2) 3-20
FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2) 3-20
FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2) 3-20
POWER P.W. BOARD ASS'Y (SFL-9013A-H2) 3-20
REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2) 3-20
DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D303A-H2) 3-20
RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2) 3-26

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B/S, LT-Z26SX4S/S] 3-27
ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2) 3-27
CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2) 3-27
FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2) 3-27
FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2) 3-27
POWER P.W. BOARD ASS'Y (SFL-9013A-H2) 3-27
REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2) 3-27
DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D302A-H2) 3-27
RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2) 3-33

REMOTE CONTROL UNIT PARTS LIST (RM-C1830-1C) 3-33
PACKING PARTS LIST 3-33
PACKING 3-34


USING P.W. BOARD & REMOTE CONTROL UNIT


P.W.B ASS'Y	LT-Z26SX4B	LT-Z26SX4B/A	LT-Z26SX4B/S	LT-Z26SX4S/S
ANALOG SIGNAL P.W.B	SFL-1032A-H2	←	←	←
CONNECTOR P.W.B	SFL-4031A-H2	←	←	←
FRONT CONTROL P.W.B	SFL-7031A-H2	←	←	←
FRONT SENSOR P.W.B	SFL-8031A-H2	←	←	←
POWER P.W.B	SFL-9013A-H2	←	←	←
REGULATOR P.W.B	SFL-9113A-H2	←	←	←
DIGITAL SIGNAL P.W.B	SFL0D301A-H2	SFL0D303A-H2	SFL0D302A-H2	←
RECEIVER P.W.B	SFL0F301A-H2	←	←	←
REMOTE CONTROL UNIT	RM-C1830-1C	←	←	←

EXPLODED VIEW PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description	Local
	101	LC11981-002A-H	JACK COVER	(x2)	
⚠	102	LC21503-004A-H	RATING LABEL		LT-Z26SX4B
⚠	102	LC21503-003A-H	RATING LABEL		LT-Z26SX4B/A
⚠	102	LC21503-002A-H	RATING LABEL		LT-Z26SX4B/S,LT-Z26SX4S/S
⚠	103	LC42090-002A-H	LICENSE LABEL		
	104	LC32748-004A-H	OPERATION SHEET		
	105	LC32749-003A-H	OPERATION SHEET		
⚠	106	LC41999-004A-H	CAUTION LABEL		
⚠	107	LC41967-001C-C	STAND ASSY	Inc.No.107A/107B	
	107A	128-023	STAND COVER		
	107B	128-020	CORD COVER		
	108	LC42002-002B-C	STAND SHEET		
	109	QYSPSPD5014MA	SCREW	M5 x 14mm(x4)	
	110	QYSPSPD3016ZA	SCREW	M3 x 16mm(x2)	
⚠	111	LC11972-003A-H	REAR COVER		
	112	LC32864-001A-C	STICK SHEET	(x2)	
	113	QYSBSFG4016MA	TAP SCREW	M4 x 16mm(x7)	
	114	QYSBSF3010MA	TAP SCREW	M3 x 10mm(x4)	
	115	QYSPSPD3008MA	SCREW	M3 x 8mm	
⚠	116	LC32760-001A-H	SERVICE COVER		
	117	QYSBSF3010MA	TAP SCREW	M3 x 10mm	
⚠	118	QMPK300-170-JC	POWER CORD(EU)	1.7m BLACK	LT-Z26SX4B
⚠	118	QMPG110-170-JC	POWER CORD(AST)	1.7m BLACK	LT-Z26SX4B/A
⚠	118	QMPN260-170-JC	POWER CORD(EK)	1.7m BLACK	LT-Z26SX4B/S,LT-Z26SX4S/S
⚠	119	LC21348-001D-H	POWER CORD HOLDER		
⚠	120	QQR0491-001	FERRITE CORE		LT-Z26SX4B/S,LT-Z26SX4S/S
⚠	121	LC21596-001B-H	TERMINAL BASE		
	122	QNB0036-001	HEX SCREW	(x2)	
	123	QUQ105-5009AE	FFC WIRE	50pin 9cm(x2)	
	124	QUQ212-1906CH	FFC WIRE	19pin 6cm	
⚠	125	LC32351-011A-0K	CONTROL KNOB ASSY		
	126	QUQ105-4006AL	FFC WIRE	40pin 6cm	
	127	QUQ105-3004AA	FFC WIRE	30pin 4cm	
	128	QUQ105-5004AA	FFC WIRE	50pin 4cm	
⚠	129	LC32698-002B-HK	SIDE BASE		
⚠	130	QQR0490-001	NOISE FILTER		LT-Z26SX4B/S,LT-Z26SX4S/S
⚠	131	LC21597-003B-H	TUNER BASE		
⚠	132	QUB190-12FXHM	SIN TWIST WIRE		
⚠	133	QLD0342-001	LCD PANEL UNIT		
	134	LC11633-001B-0K	SPEAKER BOX		
	135	QAS0142-001	SPEAKER	SP01/SP02(x2)	
	136	LC42001-002B-C	DUCT SHEET	(x2)	
	137	LC21339-001A-H	DUCT BASE	(x2)	
	138	LC21340-001B-H	DUCT COVER	(x2)	
⚠	139	LC12032-005A-UK	FRONT PANEL ASSY		LT-Z26SX4B,LT-Z26SX4B/A,LT-Z26SX4B/S
⚠	139	LC12032-006A-UK	FRONT PANEL ASSY		LT-Z26SX4S/S
	140	LC32747-001C-H	SENSOR WINDOW		LT-Z26SX4B,LT-Z26SX4B/A,LT-Z26SX4B/S
	140	LC32747-002C-HK	SENSOR WINDOW		LT-Z26SX4S/S
	141	LC41901-001C-H	LED LENS		
	142	LC41852-001A	JVC MARK ASSY		
⚠	201	SFL-9113A-H2	REGULATOR PWB		
⚠	202	SFL-9013A-H2	POWER PWB		
⚠	203	SFL0F301A-H2	RECEIVER PWB		
⚠	204	SFL-4031A-H2	CONNECTOR PWB		
⚠	205	SFL-1032A-H2	ANALOG SIGNAL PWB		
⚠	206	SFL-7031A-H2	FRONT CONTROL PWB		
⚠	207	SFL-8031A-H2	FRONT SENSOR PWB		
⚠	208	SFL0D301A-H2	DIGITAL SIGNAL PWB		LT-Z26SX4B
⚠	208	SFL0D303A-H2	DIGITAL SIGNAL PWB		LT-Z26SX4B/A
⚠	208	SFL0D302A-H2	DIGITAL SIGNAL PWB		LT-Z26SX4B/S,LT-Z26SX4S/S

EXPLODED VIEW

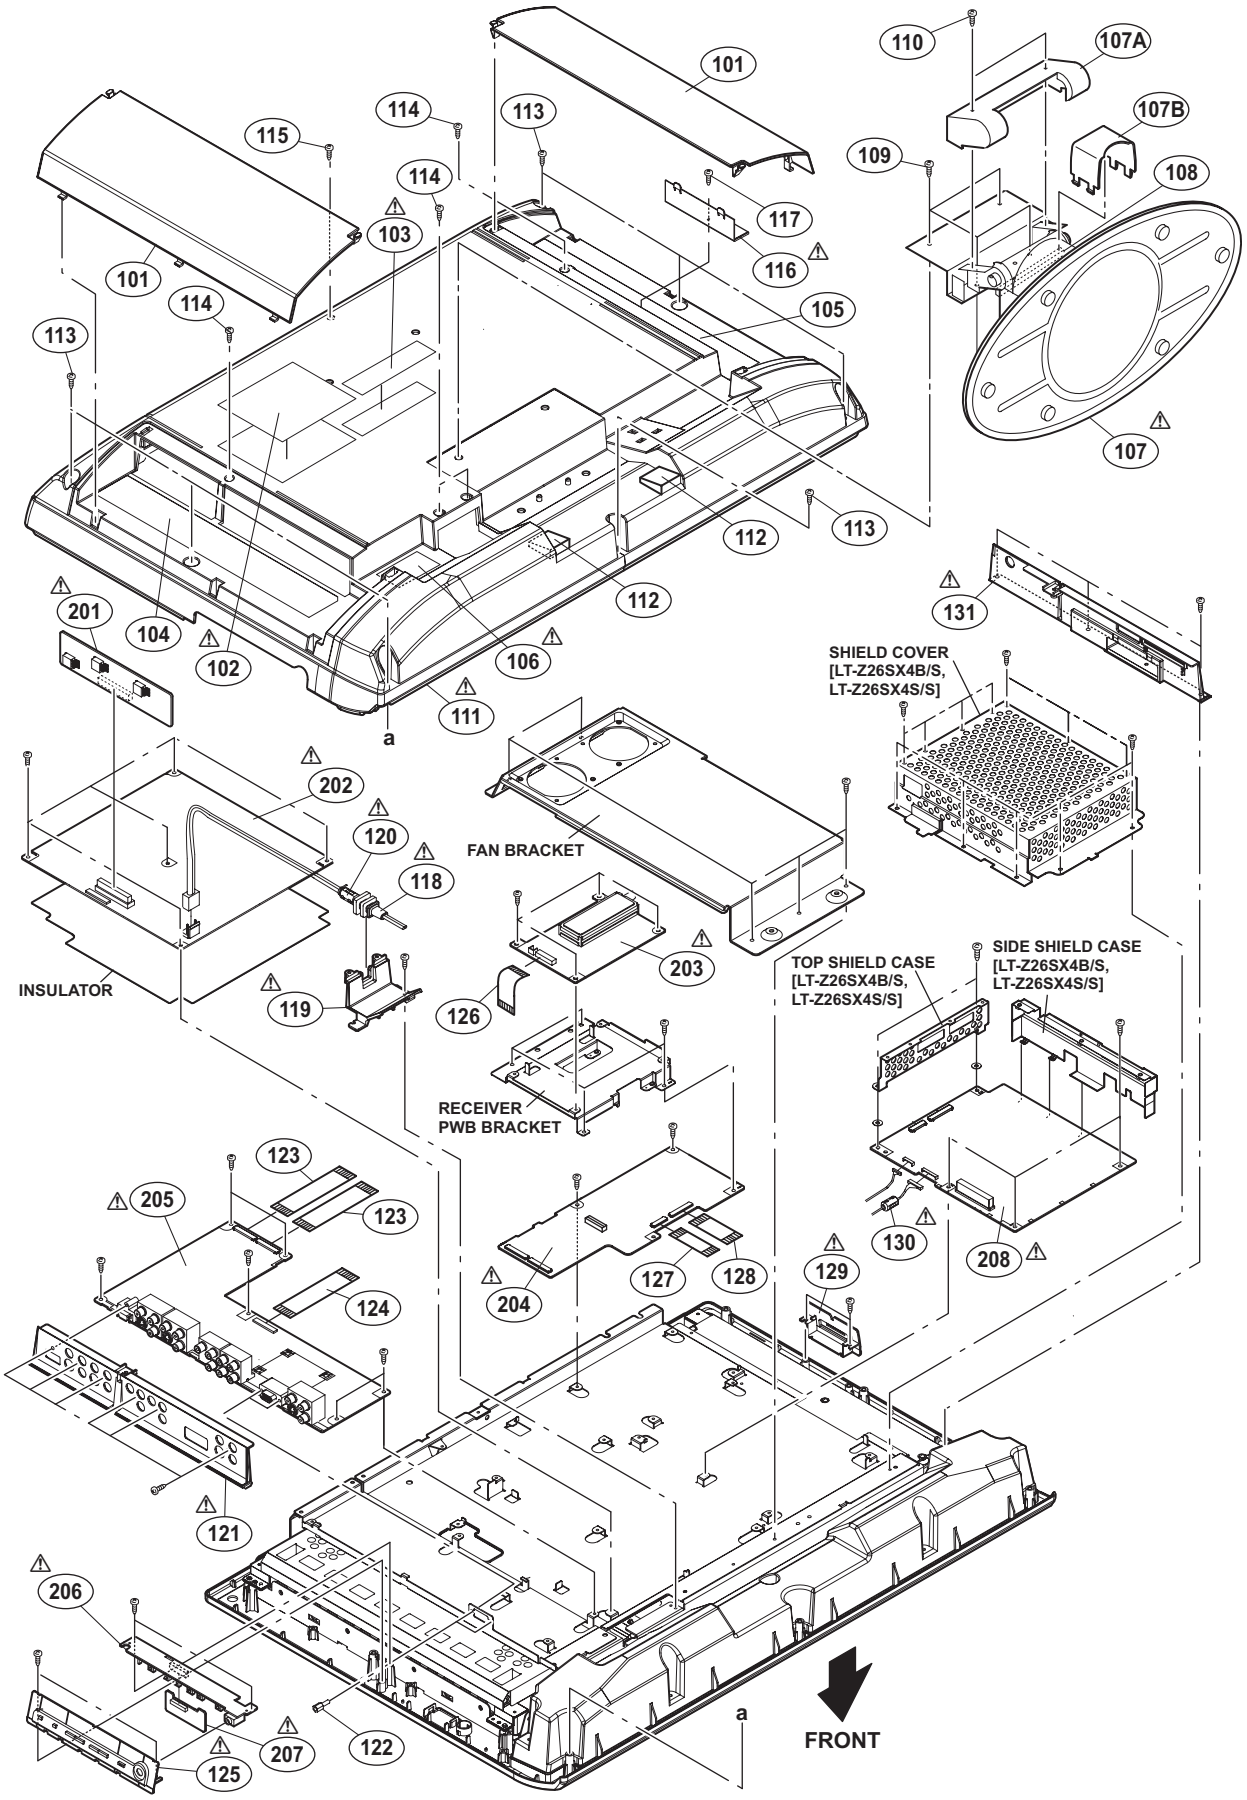

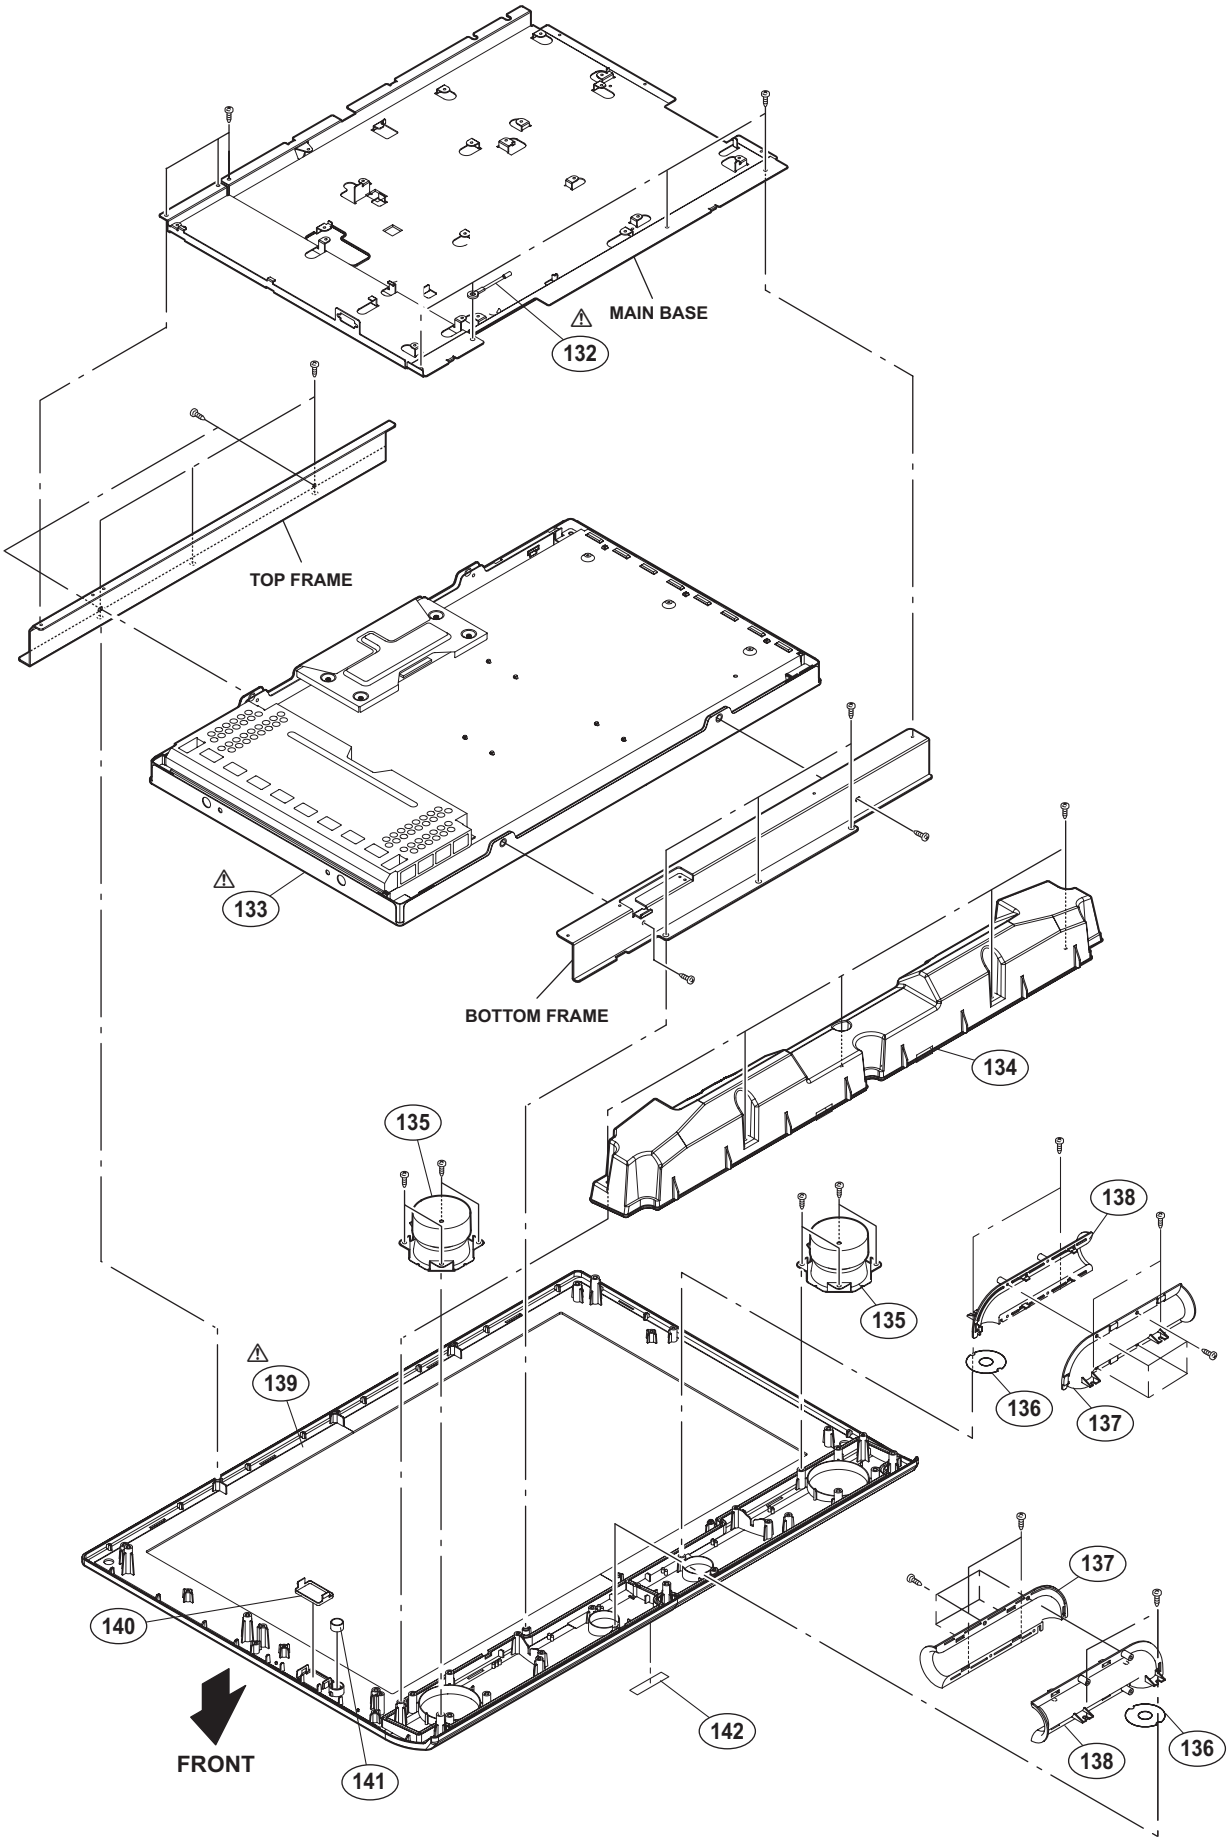
MAIN BASE
132
TOP FRAME
133
BOTTOM FRAME
134
135
135
138
136
137
139
137
140
142
138
136
141
FRONT

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B]

ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC201	TA1370FG-X	IC		
IC301	AN15852A	IC		
IC501	CXA2069Q	IC		
IC502	MM1510XN-X	IC		
IC503	MM1510XN-X	IC		
IC504	MM1510XN-X	IC		
IC711	CXA1875AM-X	IC		
IC801	TB1274AF	IC		
IC802	TC90A69AF-X	IC		
IC902	TA48M033F-X	IC		
IC903	BA90BC0FP-X	IC		
IC6001	NJM2777M-X	IC		
IC6201	PQ20WZ11-X	IC		
IC6521	NJW1137M-W	IC		
IC6551	RC4558D-X	IC		
IC6552	RC4558D-X	IC		
IC6621	LM393DR-X	IC		
IC6661	TDA8925ST/N1	IC		
Q301	2SC3837K/NP/-X	TRANSISTOR		
Q302	2SC3837K/NP/-X	TRANSISTOR		
Q303	2SC3837K/NP/-X	TRANSISTOR		
Q307	2SA1530A/QR/-X	TRANSISTOR		
Q402	2SK1374-X	MOS FET		
Q403	2SK1374-X	MOS FET		
Q404	2SK1374-X	MOS FET		
Q405	2SK1374-X	MOS FET		
Q507	2SA1530A/QR/-X	TRANSISTOR		
Q508	2SA1530A/QR/-X	TRANSISTOR		
Q509	2SA1530A/QR/-X	TRANSISTOR		
Q801	2SA1530A/QR/-X	TRANSISTOR		
Q802	2SA1530A/QR/-X	TRANSISTOR		
Q851	2SA1530A/QR/-X	TRANSISTOR		
Q853	2SC3928A/QR/-X	TRANSISTOR		
Q854	2SC3928A/QR/-X	TRANSISTOR		
Q855	2SA1530A/QR/-X	TRANSISTOR		
Q858	2SC3928A/QR/-X	TRANSISTOR		
Q859	2SA1530A/QR/-X	TRANSISTOR		
Q862	2SC3928A/QR/-X	TRANSISTOR		
Q863	2SC3928A/QR/-X	TRANSISTOR		
Q902	2SC3074/OY/-X	TRANSISTOR		
Q2051	UN2226-X	DIGI TRANSISTOR		
Q2052	UN2226-X	DIGI TRANSISTOR		
Q2055	UN2110-X	DIGI TRANSISTOR		
Q6301	2SC3928A/QR/-X	TRANSISTOR		
Q6302	2SC3928A/QR/-X	TRANSISTOR		
Q6421	2SC3928A/QR/-X	TRANSISTOR		
Q6431	2SA1530A/QR/-X	TRANSISTOR		
Q6521	2SC3928A/QR/-X	TRANSISTOR		
Q6522	2SC3928A/QR/-X	TRANSISTOR		
Q6523	2SA1530A/QR/-X	TRANSISTOR		
Q6531	2SC3928A/QR/-X	TRANSISTOR		
Q6532	2SC3928A/QR/-X	TRANSISTOR		
Q6533	2SC3928A/QR/-X	TRANSISTOR		
Q6534	2SA1530A/QR/-X	TRANSISTOR		
Q6538	2SC3928A/QR/-X	TRANSISTOR		
Q6539	2SC3928A/QR/-X	TRANSISTOR		
Q6661	UN2112-X	DIGI TRANSISTOR		
Q6662	2SC3928A/QR/-X	TRANSISTOR		
Q6663	UN2212-X	DIGI TRANSISTOR		
Q6672	2SC3928A/QR/-X	TRANSISTOR		
Q6673	2SA1530A/QR/-X	TRANSISTOR		
D901	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
D903	PTZ11B-X	Z DIODE		
D904	PTZ6.8B-X	Z DIODE		
D2001	MA8100/M/-X	Z DIODE		
D2002	MA8100/M/-X	Z DIODE		
D2003	MA8100/M/-X	Z DIODE		
D2004	MA8100/M/-X	Z DIODE		
D2005	MA8100/M/-X	Z DIODE		
D2006	MA8100/M/-X	Z DIODE		
D2007	MA8100/M/-X	Z DIODE		
D2008	MA8100/M/-X	Z DIODE		
D2009	MA8100/M/-X	Z DIODE		
D2010	MA8100/M/-X	Z DIODE		
D2011	MA8100/M/-X	Z DIODE		
D2012	MA8100/M/-X	Z DIODE		
D2013	MA8100/M/-X	Z DIODE		
D2014	MA8100/M/-X	Z DIODE		
D2015	MA8100/M/-X	Z DIODE		
D2016	MA8100/M/-X	Z DIODE		
D2017	MA8100/M/-X	Z DIODE		
D2201	MA8100/M/-X	Z DIODE		
D2202	MA8100/M/-X	Z DIODE		
D2203	MA8100/M/-X	Z DIODE		
D2204	MA8100/M/-X	Z DIODE		
D2205	MA8100/M/-X	Z DIODE		
D2206	MA8100/M/-X	Z DIODE		
D2207	MA8100/M/-X	Z DIODE		
D6001	MA111-X	SI DIODE		
D6002	MA111-X	SI DIODE		
D6201	MA111-X	SI DIODE		
D6431	MA111-X	SI DIODE		
D6432	MA111-X	SI DIODE		
D6433	MA111-X	SI DIODE		
D6501	MA111-X	SI DIODE		
D6502	MA111-X	SI DIODE		
D6503	MA111-X	SI DIODE		
D6504	MA111-X	SI DIODE		
D6601	MA8062/M/-X	Z DIODE		
D6663	MA8033-X	Z DIODE		
D6664	MA111-X	SI DIODE		
D6671	MA8200-X	Z DIODE		
D6672	MA8200-X	Z DIODE		
D6673	MA8200-X	Z DIODE		
D6674	MA8200-X	Z DIODE		
D6681	MA111-X	SI DIODE		
D6682	MA111-X	SI DIODE		
D6683	MA111-X	SI DIODE		
DB201	MA8033-X	Z DIODE		
C201	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C202	NEH71HM-225X	E CAPACITOR	2.2uF 50V M	
C203	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C204	NEZ0022-157X	E CAPACITOR	150uF 10V M	
C205	NEH71HM-105X	E CAPACITOR	1uF 50V M	
C206	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C207	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C301	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C302	NEH71CM-476X	E CAPACITOR	47uF 16V M	
C303	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
C304	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
C305	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
C306	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C307	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C308	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C309	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C310	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C313	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C314	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C315	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C316	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C317	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C318	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C319	NEH71CM-476X	E CAPACITOR	47uF 16V M	
C320	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C321	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C322	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C323	QETM1AM-228	E CAPACITOR	2200uF 10V M	
C324	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C325	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C326	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C327	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C328	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C329	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C330	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C341	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C342	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C344	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C345	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C349	NEN51EM-106X	BP E CAPACITOR	10uF 25V M	
C372	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C382	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C392	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C501	NEH71CM-476X	E CAPACITOR	47uF 16V M	
C502	NEH71CM-476X	E CAPACITOR	47uF 16V M	
C503	NEN51EM-106X	BP E CAPACITOR	10uF 25V M	
C505	NEN51EM-106X	BP E CAPACITOR	10uF 25V M	
C506	NDC31HJ-270X	C CAPACITOR	27pF 50V J	
C515	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C516	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C518	NEH71AM-107X	E CAPACITOR	100uF 10V M	
C519	NEH71CM-106X	E CAPACITOR	10uF 16V M	

⚠Ref No.	Part No.	Part Name	Description Local
C520	NCB11CK-105X	C CAPACITOR	1uF 16V K
C521	NEH71CM-106X	E CAPACITOR	10uF 16V M
C522	NEH71AM-107X	E CAPACITOR	100uF 10V M
C523	NEH71CM-106X	E CAPACITOR	10uF 16V M
C524	NCB11CK-105X	C CAPACITOR	1uF 16V K
C525	NEH71CM-106X	E CAPACITOR	10uF 16V M
C526	NEH71AM-107X	E CAPACITOR	100uF 10V M
C527	NEH71CM-106X	E CAPACITOR	10uF 16V M
C541	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C542	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C543	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C544	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C545	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C711	NEH71CM-106X	E CAPACITOR	10uF 16V M
C712	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C801	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C802	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C803	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C804	NEH71CM-476X	E CAPACITOR	47uF 16V M
C805	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C806	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C807	NEH71CM-476X	E CAPACITOR	47uF 16V M
C808	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C809	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C813	NEH71CM-476X	E CAPACITOR	47uF 16V M
C814	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C818	NEH71HM-106X	E CAPACITOR	10uF 50V M
C819	NDC31HJ-100X	C CAPACITOR	10pF 50V J
C820	NCB31AK-474X	C CAPACITOR	0.47uF 10V K
C821	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C822	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C823	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C824	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C825	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C826	NEH71EM-226X	E CAPACITOR	22uF 25V M
C827	NEH70JM-107X	E CAPACITOR	100uF 6.3V M
C835	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C850	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C851	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C852	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C853	NEH71CM-476X	E CAPACITOR	47uF 16V M
C854	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C855	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C856	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C857	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C858	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C859	NCB31AK-474X	C CAPACITOR	0.47uF 10V K
C860	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C861	NDC31HJ-681X	C CAPACITOR	680pF 50V J
C862	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C863	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C864	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C865	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C866	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C868	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C869	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C870	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C872	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C873	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C874	NDC31HJ-150X	C CAPACITOR	15pF 50V J
C875	NDC31HJ-100X	C CAPACITOR	10pF 50V J
C876	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C877	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C878	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C879	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C880	NEH71AM-107X	E CAPACITOR	100uF 10V M
C881	NEH71AM-107X	E CAPACITOR	100uF 10V M
C882	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C883	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C884	NEH71AM-107X	E CAPACITOR	100uF 10V M
C885	NEH71AM-107X	E CAPACITOR	100uF 10V M
C886	NEH71HM-106X	E CAPACITOR	10uF 50V M
C887	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C888	NEH71AM-107X	E CAPACITOR	100uF 10V M
C889	NEH71HM-106X	E CAPACITOR	10uF 50V M
C890	NEH71HM-106X	E CAPACITOR	10uF 50V M
C891	NEH71CM-476X	E CAPACITOR	47uF 16V M
C892	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C894	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C895	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C904	NCB11AK-106X	C CAPACITOR	10uF 10V K
C905	NEHM1CM-476X	E CAPACITOR	47uF 16V M
C906	NEHM1CM-476X	E CAPACITOR	47uF 16V M
C912	NEHM1CM-476X	E CAPACITOR	47uF 16V M
C913	NEX51CM-335X	E CAPACITOR	3.3uF 16V M
C914	NEX50JM-156X	E CAPACITOR	15uF 6.3V M
C915	NEHM1CM-476X	E CAPACITOR	47uF 16V M
C916	NEX50JM-156X	E CAPACITOR	15uF 6.3V M
C2001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C2003	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2005	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2006	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2007	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C2009	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2011	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2012	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2014	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2015	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2016	NCB11AK-106X	C CAPACITOR	10uF 10V K
C2017	NCB11AK-106X	C CAPACITOR	10uF 10V K
C2018	NCB11AK-106X	C CAPACITOR	10uF 10V K
C2019	NCB11AK-106X	C CAPACITOR	10uF 10V K
C2020	NCB11AK-106X	C CAPACITOR	10uF 10V K
C2051	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2052	NCB11CK-225X	C CAPACITOR	2.2uF 16V K
C2055	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2201	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2202	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2203	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2204	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2205	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2206	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2241	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2242	NCB31CK-105X	C CAPACITOR	1uF 16V K
C2243	NCB31CK-105X	C CAPACITOR	1uF 16V K
C6001	NCF31AZ-105X	C CAPACITOR	1uF 10V Z
C6002	NCF31AZ-105X	C CAPACITOR	1uF 10V Z
C6003	NEH71AM-107X	E CAPACITOR	100uF 10V M
C6004	NEH71AM-107X	E CAPACITOR	100uF 10V M
C6005	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6006	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6007	QETM1CM-477	E CAPACITOR	470uF 16V M
C6008	NEH71HM-106X	E CAPACITOR	10uF 50V M
C6009	NCF31AZ-105X	C CAPACITOR	1uF 10V Z
C6201	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6202	NEH71EM-336X	E CAPACITOR	33uF 25V M
C6203	NEH71EM-336X	E CAPACITOR	33uF 25V M
C6204	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6205	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6301	NEN51CM-475X	BP E CAPACITOR	4.7uF 16V M
C6302	NEN51CM-475X	BP E CAPACITOR	4.7uF 16V M
C6421	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6431	NEH71CM-476X	E CAPACITOR	47uF 16V M
C6505	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6510	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6517	NDC31HJ-100X	C CAPACITOR	10pF 50V J
C6518	NDC31HJ-100X	C CAPACITOR	10pF 50V J
C6521	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6522	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C6523	NCB31HK-333X	C CAPACITOR	0.033uF 50V K
C6525	NCB31HK-472X	C CAPACITOR	4700pF 50V K
C6526	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6527	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6528	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6529	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C6530	NCB31HK-333X	C CAPACITOR	0.033uF 50V K
C6532	NCB31HK-472X	C CAPACITOR	4700pF 50V K
C6533	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6534	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6535	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6536	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6537	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6538	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6539	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6540	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6541	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6542	NEH71EM-475X	E CAPACITOR	4.7uF 25V M
C6543	NEH71CM-476X	E CAPACITOR	47uF 16V M
C6544	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6545	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6546	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6551	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6552	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6553	NCB31CK-683X	C CAPACITOR	0.068uF 16V K
C6554	NCB31CK-683X	C CAPACITOR	0.068uF 16V K
C6555	NCB31CK-683X	C CAPACITOR	0.068uF 16V K
C6556	NCB31CK-683X	C CAPACITOR	0.068uF 16V K
C6557	NEH71CM-476X	E CAPACITOR	47uF 16V M
C6559	NEH71CM-476X	E CAPACITOR	47uF 16V M
C6561	NEH71HM-105X	E CAPACITOR	1uF 50V M
C6562	NEH71HM-225X	E CAPACITOR	2.2uF 50V M
C6563	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6564	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6567	NCB11EK-105X	C CAPACITOR	1uF 25V K

⚠Ref No.	Part No.	Part Name	Description Local
C6568	NCB11EK-105X	C CAPACITOR	1uF 25V K
C6585	NEH71CM-106X	E CAPACITOR	10uF 16V M
C6586	NEH71CM-106X	E CAPACITOR	10uF 16V M
C6601	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C6602	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C6605	NEH71CM-476X	E CAPACITOR	47uF 16V M
C6621	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C6622	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6623	NEH71EM-226X	E CAPACITOR	22uF 25V M
C6624	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C6625	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6626	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C6627	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6628	NEH71EM-226X	E CAPACITOR	22uF 25V M
C6629	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C6630	NCB31EK-104X	C CAPACITOR	0.1uF 25V K
C6631	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C6632	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C6661	NCB11EK-105X	C CAPACITOR	1uF 25V K
C6662	NCB11EK-105X	C CAPACITOR	1uF 25V K
C6663	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6664	QETM1HM-226	E CAPACITOR	22uF 50V M
C6665	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6666	QETM1HM-226	E CAPACITOR	22uF 50V M
C6667	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6668	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C6669	QFV21HJ-224	MF CAPACITOR	0.22uF 50V J
C6670	QFVE1HJ-474	MF CAPACITOR	0.47uF 50V J
C6671	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C6672	QETM1EM-477	E CAPACITOR	470uF 25V M
C6673	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6674	QETM1EM-477	E CAPACITOR	470uF 25V M
C6675	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6676	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C6677	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C6678	QFV21HJ-224	MF CAPACITOR	0.22uF 50V J
C6679	QFVE1HJ-474	MF CAPACITOR	0.47uF 50V J
C6680	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C6681	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C6682	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6683	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6684	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6685	QETM1EM-477	E CAPACITOR	470uF 25V M
C6687	QETM1EM-477	E CAPACITOR	470uF 25V M
C6688	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C6691	NEH71HM-106X	E CAPACITOR	10uF 50V M
C6692	NEH71CM-106X	E CAPACITOR	10uF 16V M
C6693	QETM1CM-477	E CAPACITOR	470uF 16V M
CB501	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB502	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB503	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB504	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB505	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB506	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB507	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
CB508	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
R201	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R202	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R203	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R204	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R207	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R208	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R210	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R211	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R212	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R214	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R216	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R218	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R219	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R220	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R302	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R303	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R307	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R308	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R316	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R318	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R321	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R322	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R323	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R326	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R327	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R328	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R334	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R335	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R336	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R372	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R374	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R375	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R382	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R384	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R385	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R392	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R394	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R395	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R402	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R403	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R404	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R405	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R409	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R410	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R513	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R514	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R516	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R517	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R518	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R519	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R520	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R521	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R522	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R523	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R524	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R526	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R527	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R528	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R529	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R530	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R531	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R532	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R534	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R538	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R539	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R540	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R541	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R573	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R574	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R575	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R576	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R577	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R578	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R579	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R580	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R581	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R582	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R583	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R584	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R711	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R713	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R714	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R715	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R716	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R717	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R718	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R719	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R720	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R722	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R801	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R802	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R803	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R804	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R805	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R806	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R807	NRSA63J-752X	MG RESISTOR	7.5kΩ 1/16W J
R808	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R809	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R816	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R817	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R818	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R819	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R851	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R852	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R853	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J
R854	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R855	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R856	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
R859	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R860	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R861	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R862	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R863	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R864	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R865	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description	Local
R866	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R867	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R869	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R873	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J	
R874	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J	
R876	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R877	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J	
R879	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R883	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R884	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R885	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R886	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R887	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R888	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R889	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R893	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R907	NRS12BJ-0R0W	MG RESISTOR	0Ω 1/2W J	
R908	NRS12BJ-471W	MG RESISTOR	470Ω 1/2W J	
R2001	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2002	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2003	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2004	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2005	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2006	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2007	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2008	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2009	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2010	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2011	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2012	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2013	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R2051	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2052	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2053	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2054	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2055	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2058	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2059	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J	
R2060	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J	
R2061	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J	
R2062	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J	
R2065	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2066	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2069	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2071	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R2202	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2203	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2204	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2205	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2207	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2208	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2209	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2241	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2242	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2243	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R2245	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R2246	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R6001	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R6002	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R6003	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6004	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R6005	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R6006	QRL039J-330	OMF RESISTOR	33Ω 3W J	
R6201	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R6202	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R6203	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R6204	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R6205	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R6301	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6302	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6303	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6304	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6305	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6306	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6307	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6308	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6309	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6310	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6409	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6423	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R6424	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6425	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6431	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R6432	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6515	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R6516	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R6517	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6518	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R6519	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R6520	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6521	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6522	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6523	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6524	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6525	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6526	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6527	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6528	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6529	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6530	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6531	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6532	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6533	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6534	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6535	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6536	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6537	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6538	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6539	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6540	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6541	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6542	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6543	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6551	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R6552	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R6553	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R6554	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R6555	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R6556	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R6557	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R6558	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J	
R6559	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R6560	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J	
R6563	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R6564	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6567	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	
R6568	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6569	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R6577	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R6578	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R6579	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R6580	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R6601	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6602	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6603	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6605	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6606	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R6607	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6617	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R6621	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R6622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6623	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R6624	QRJ149J-102	UNF C RESISTOR	1kΩ 1/4W J	
R6625	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6626	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R6627	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R6629	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R6630	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R6631	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6632	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R6633	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R6634	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6661	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6662	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6663	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R6664	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6665	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R6666	QRK129J-5R6	UNF C RESISTOR	5.6Ω 1/2W J	
R6667	QRK129J-220	UNF C RESISTOR	22Ω 1/2W J	
R6668	QRK129J-5R6	UNF C RESISTOR	5.6Ω 1/2W J	
R6669	QRK129J-220	UNF C RESISTOR	22Ω 1/2W J	
R6670	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R6671	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6673	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R6674	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6675	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R6676	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6677	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6680	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R6681	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R6682	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R6683	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6684	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R6685	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	

⚠Ref No.	Part No.	Part Name	Description	Local
R6686	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R6688	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6691	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
RB203	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J	
RB801	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L201	NQL914K-101X	COIL	100uH K	
L807	NQR0413-003X	FERRITE BEADS		
L808	NQR0413-003X	FERRITE BEADS		
L809	NQR0413-003X	FERRITE BEADS		
L851	NQL092K-6R8X	COIL	6.8uH K	
L852	NQL092K-6R8X	COIL	6.8uH K	
L853	NQL092K-6R8X	COIL	6.8uH K	
L854	NQL092M-270X	P COIL	27uH M	
L855	NQL904J-560X	COIL	56uH J	
L861	NQL914K-220X	COIL	22uH K	
L862	NQL914K-101X	COIL	100uH K	
L863	NQL914K-101X	COIL	100uH K	
L864	NQL914K-101X	COIL	100uH K	
L865	NQL914K-220X	COIL	22uH K	
L866	NQL914K-220X	COIL	22uH K	
L867	NQL914K-220X	COIL	22uH K	
L902	NQL52EM-220X	COIL	22uH M	
L903	NQL52EM-220X	COIL	22uH M	
L904	NQL52EM-220X	COIL	22uH M	
L6661	QQL28AK-560	COIL	56uH K	
L6662	QQL28AK-560	COIL	56uH K	
CN000H	QGF1201C2-19	CONNECTOR	FFC/FPC (1-19)	
CN0011	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
CN0012	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
J2001	QNZ0726-001	AV JACK	INPUT-1(S/V/L/R)	
J2002	QNZ0693-001	D CONNECTOR	INPUT-1(COMPONENT)	
J2003	QNZ0726-001	AV JACK	INPUT-2(S/V/L/R)	
J2004	QNN0651-001	PIN JACK	INPUT-3(V/L/R)	
J2006	QNN0650-001	PIN JACK	INPUT-3(COMPONENT)	
J2007	QNZ0561-001	D CONNECTOR	PC IN(RGD)	
J2008	QNZ0726-001	AV JACK	MONITOR OUT(V/L/R)	
K6601	NQR0413-002X	FERRITE BEADS		
K6602	NQR0413-002X	FERRITE BEADS		
K6661	NQR0413-002X	FERRITE BEADS		
K6662	NQR0413-002X	FERRITE BEADS		
K6663	NQR0413-002X	FERRITE BEADS		
K6664	NQR0413-002X	FERRITE BEADS		
TH6661	NAD0035-471X	P THERMISTOR	470Ω	
X201	CSB503F30-T2	C RESONATOR		
X801	NAX0621-001X	CRYSTAL	16.200MHz	

CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC4201	SN74AHC1G08V-X	IC		
D4201	MA8033-X	Z DIODE		
C4202	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
R4202	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J	
R4203	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J	
CN0001	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
CN0002	QGF0508F1-30X	CONNECTOR	FFC/FPC (1-30)	
CN000T	QGF0540C1-40X	CONNECTOR	FFC/FPC (1-40)	
CN1011	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
CN1012	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	

FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
Q7701	UN2212-X	DIGI TRANSISTOR		
Q7705	UN2110-X	DIGI TRANSISTOR		
Q7706	UN2110-X	DIGI TRANSISTOR		
Q7709	UN2212-X	DIGI TRANSISTOR		
D7011	MA8062/M/-X	Z DIODE		
D7702	HLMPNS30J00-T16	LED	POWER	
C7011	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C7012	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
R7011	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R7012	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R7013	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R7014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R7015	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R7016	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R7018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R7701	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R7702	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R7703	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R7704	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R7711	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R7714	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
L7001	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L7002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
CN0008	QGB2542K1-08	CONNECTOR	B-B (1-8)	
J7001	QMS3004-C01	H.P.JACK	HEADPHONE	
K7001	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
S7701	QSW0797-001	TACT SWITCH	CH-	
S7702	QSW0797-001	TACT SWITCH	CH+	
S7703	QSW0797-001	TACT SWITCH	MENU	
S7704	QSW0797-001	TACT SWITCH	INPUT	
S7705	QSW0797-001	TACT SWITCH	VOL+	
S7706	QSW0797-001	TACT SWITCH	VOL-	
S7707	QSW0797-001	TACT SWITCH	POWER	

FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC8751	S9066-11	PHOTO CONDUCTOR		
IC8752	GP1UM281QKVF	IR DETECT UNIT		
C8751	NEH71HM-105X	E CAPACITOR	1uF 50V M	
C8752	NEH71CM-476X	E CAPACITOR	47uF 16V M	
R8751	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R8752	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R8753	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R8754	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R8757	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R8759	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
CN1008	QGB2542J1-08	CONNECTOR	B-B (1-8)	

POWER P.W. BOARD ASS'Y (SFL-9013A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC9141	BA50BC0FP-X	IC		
⚠IC9211	FA5500AN-W	IC		
IC9501	F9222L-F219	IC		
⚠IC9541	UTCTL431-T	IC		
IC9602	M62320FP-X	IC		
IC9603	SI-3025B-F1	IC		
IC9901	MP1580HS-X	IC		
Q9021	UN2211-X	TRANSISTOR		
Q9211	2SK3522-01-F1	POWER MOS FET		
Q9212	2SD601A/QR/-X	TRANSISTOR		
Q9213	IMD3A-W	DIGI TRANSISTOR		
Q9215	2SD601A/QR/-X	TRANSISTOR		
Q9216	UN2212-X	DIGI TRANSISTOR		
Q9251	UN2213-X	DIGI TRANSISTOR		
Q9252	UN2212-X	DIGI TRANSISTOR		
Q9501	2SD601A/QR/-X	TRANSISTOR		
Q9502	2SK2071-01S-W	POWER MOS FET		
Q9503	2SD601A/QR/-X	TRANSISTOR		
Q9504	2SK2018-01S-W	POWER MOS FET		
Q9506	UN2213-X	DIGI TRANSISTOR		
Q9541	UN2212-X	DIGI TRANSISTOR		
Q9602	2SB1188/QR/-W	TRANSISTOR		
Q9603	UN2212-X	DIGI TRANSISTOR		
Q9901	2SD601A/QR/-X	TRANSISTOR		

⚠Ref No.	Part No.	Part Name	Description Local
D9021	MA111-X	SI DIODE	
D9111	S1WB/A/60-4101	BRIDGE DIODE	
⚠D9201	D25XB60	BRIDGE DIODE	
D9202	MA111-X	SI DIODE	
D9211	YG972S6R	SI DIODE	
D9213	MA111-X	SI DIODE	
D9214	MA111-X	SI DIODE	
D9215	D1FL20U-X	SI DIODE	
D9251	MA3100/M/-X	Z DIODE	
D9252	MA111-X	SI DIODE	
D9253	MA111-X	SI DIODE	
D9254	D1FL20U-X	SI DIODE	
D9501	MA8220/M/-X	Z DIODE	
D9502	MA8110/H/-X	Z DIODE	
D9503	D1FL20U-X	SI DIODE	
D9504	D1FL20U-X	SI DIODE	
D9505	MA8220/M/-X	Z DIODE	
D9507	D1FL20U-X	SI DIODE	
D9508	MA8056/M/-X	Z DIODE	
D9509	SD883-04-X	SB DIODE	
D9510	RD27E/B2/-T5	Z DIODE	
D9511	RD27E/B2/-T5	Z DIODE	
D9512	D1FS4-X	SB DIODE	
D9542	FMB-2306	SB DIODE	
D9543	FMB-2306	SB DIODE	
D9544	FME-220A	SB DIODE	
D9545	FME-220A	SB DIODE	
D9546	FMB-2306	SB DIODE	
D9605	D1FS4-X	SB DIODE	
D9901	EC30HA03L-X	SB DIODE	
D9902	MA111-X	SI DIODE	
D9905	D1FL20U-X	SI DIODE	
D9906	PTZ11B-X	Z DIODE	
D9907	RD16E/B/-T5	Z DIODE	
D9908	RD16E/B/-T5	Z DIODE	
D9909	D1FL20U-X	SI DIODE	
D9910	MA111-X	SI DIODE	
⚠C9001	QFZ9072-105	MM CAPACITOR	1uF AC250V K
⚠C9002	QFZ9072-105	MM CAPACITOR	1uF AC250V K
⚠C9011	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C9013	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C9101	QCZ9082-472Z	C CAPACITOR	4700pF AC250V M
⚠C9102	QCZ9082-472Z	C CAPACITOR	4700pF AC250V M
⚠C9103	QCZ9082-472Z	C CAPACITOR	4700pF AC250V M
C9111	QEZ0709-106	E CAPACITOR	10uF 450V M
C9141	QECR1CM-477Z	E CAPACITOR	470uF 16V M
C9142	QEHR1AM-337Z	E CAPACITOR	330uF 10V M
C9143	QEHR1CM-107Z	E CAPACITOR	100uF 16V M
⚠C9197	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C9198	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C9201	QCZ9082-222Z	C CAPACITOR	2200pF AC250V M
⚠C9203	QCZ9082-222Z	C CAPACITOR	2200pF AC250V M
⚠C9204	QCZ9082-222Z	C CAPACITOR	2200pF AC250V M
⚠C9205	QCZ9082-222Z	C CAPACITOR	2200pF AC250V M
C9211	QFZ0222-105	MM CAPACITOR	1uF 450V K
C9212	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9213	NCB11CK-105X	C CAPACITOR	1uF 16V K
C9214	NDC31HJ-102X	C CAPACITOR	1000pF 50V J
C9215	QEHR1VM-476Z	E CAPACITOR	47uF 35V M
C9216	QEZ0650-227	E CAPACITOR	220uF 450V M
C9218	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9221	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9251	QEHR1HM-107Z	E CAPACITOR	100uF 50V M
C9252	NCB21HK-104X	C CAPACITOR	0.1uF 50V K
C9501	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C9502	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C9503	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C9504	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C9505	NCB11EK-474X	C CAPACITOR	0.47uF 25V K
C9506	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C9507	NCB31HK-472X	C CAPACITOR	4700pF 50V K
C9508	NCB11AK-335X	C CAPACITOR	3.3uF 10V K
C9509	QECR1VM-227Z	E CAPACITOR	220uF 35V M
C9510	QEHR2AM-107Z	E CAPACITOR	100uF 100V M
C9511	QFZ0209-473	MPP CAPACITOR	0.047uF 1000V H
C9541	QECQ1EM-188	E CAPACITOR	1800uF 25V M
C9544	QECQ1EM-188	E CAPACITOR	1800uF 25V M
C9545	QECQ1EM-188	E CAPACITOR	1800uF 25V M
C9546	QECR1EM-687Z	E CAPACITOR	680uF 25V M
C9547	QECR1EM-687Z	E CAPACITOR	680uF 25V M
C9550	QEHQ1EM-228	E CAPACITOR	2200uF 25V M
C9551	NCB11EK-474X	C CAPACITOR	0.47uF 25V K
C9552	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C9606	QEHR1HM-106Z	E CAPACITOR	10uF 50V M
C9608	QEHR1EM-107Z	E CAPACITOR	100uF 25V M
C9609	NCB31HK-104X	C CAPACITOR	0.1uF 50V K

⚠Ref No.	Part No.	Part Name	Description Local
C9610	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C9611	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C9902	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9903	QECR1CM-477Z	E CAPACITOR	470uF 16V M
C9904	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9906	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9907	NCB31EK-273X	C CAPACITOR	0.027uF 25V K
C9908	QEHR2AM-106Z	E CAPACITOR	10uF 100V M
C9909	QEHR1HM-106Z	E CAPACITOR	10uF 50V M
C9910	QECR1VM-227Z	E CAPACITOR	220uF 35V M
C9911	QRK126J-151X	UNF C RESISTOR	150Ω 1/2W J
C9912	QEHR1CM-477Z	E CAPACITOR	470uF 16V M
C9913	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9914	QTNC1HM-106Z	E CAPACITOR	10uF 50V M
C9915	NCB11EK-104X	C CAPACITOR	0.1uF 25V K
C9917	NCB31HK-222X	C CAPACITOR	2200pF 50V K
⚠R9001	QRZ9046-105Z	C RESISTOR	1MΩ 1/2W K
R9101	QRZ0216-4R7	UNF WW RESISTOR	4.7Ω 7W K
R9141	QRT01EJ-1R0X	MF RESISTOR	1Ω 1W J
R9142	QRT01EJ-R82X	MF RESISTOR	0.82Ω 1W J
⚠R9199	QRZ0107-685Z	C RESISTOR	6.8MΩ 1/2W K
⚠R9202	QRZ9055-8R2	FUSI RESISTOR	8.2Ω 2W K
R9203	MTZJ8.2C-T2	Z DIODE	
R9211	NRS12BJ-474W	MG RESISTOR	470kΩ 1/2W J
R9212	NRS12BJ-474W	MG RESISTOR	470kΩ 1/2W J
R9213	NRS12BJ-334W	MG RESISTOR	330kΩ 1/2W J
R9214	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R9215	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R9216	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R9217	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R9218	NRSA63D-183X	MG RESISTOR	18kΩ 1/16W D
R9219	NRS12BJ-223W	MG RESISTOR	22kΩ 1/2W J
R9220	QRM059J-R27	MP RESISTOR	0.27Ω 5W J
R9221	QRM059J-R15	MP RESISTOR	0.15Ω 5W J
R9222	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9223	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9224	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9225	NRS12BJ-334W	MG RESISTOR	330kΩ 1/2W J
R9226	NRS12BJ-334W	MG RESISTOR	330kΩ 1/2W J
R9227	NRS12BJ-394W	MG RESISTOR	390kΩ 1/2W J
R9228	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9229	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R9233	NRS181J-0R0X	MG RESISTOR	0Ω 1/8W J
R9236	NRS12BJ-474W	MG RESISTOR	470kΩ 1/2W J
R9237	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9238	NRS12BJ-220W	MG RESISTOR	22Ω 1/2W J
R9239	NRS12BJ-1R0W	MG RESISTOR	1Ω 1/2W J
R9251	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R9253	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R9254	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9255	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R9256	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R9257	NRS12BJ-102W	MG RESISTOR	1kΩ 1/2W J
R9501	QRL03EJ-822X	OMF RESISTOR	8.2kΩ 3W J
R9502	QRL03EJ-822X	OMF RESISTOR	8.2kΩ 3W J
R9503	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9504	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9505	NRS181J-824X	MG RESISTOR	820kΩ 1/8W J
R9506	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9507	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9508	QRT029J-2R7	MF RESISTOR	2.7Ω 2W J
R9509	QRM059J-R39	MP RESISTOR	0.39Ω 5W J
R9510	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9511	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R9512	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R9513	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R9514	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R9515	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
⚠R9516	QRZ9009-2R2	FUSI RESISTOR	2.2Ω 1/2W J
R9517	NRS12BJ-332W	MG RESISTOR	3.3kΩ 1/2W J
R9518	QRK126J-271X	UNF C RESISTOR	270Ω 1/2W J
R9519	NRSA02J-180X	MG RESISTOR	18Ω 1/10W J
R9520	QRE121J-105Y	C RESISTOR	1MΩ 1/2W J
R9521	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R9525	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R9526	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R9529	QRL039J-561	OMF RESISTOR	560Ω 3W J
R9541	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9542	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R9543	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R9544	NRSA63D-153X	MG RESISTOR	15kΩ 1/16W D
R9545	NRSA63D-221X	MG RESISTOR	220Ω 1/16W D
R9546	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R9548	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D
R9549	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R9551	QRE141J-0R0Y	C RESISTOR	0Ω 1/4W J

⚠Ref No.	Part No.	Part Name	Description	Local
R9552	QRE141J-0R0Y	C RESISTOR	0Ω 1/4W J	
R9602	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9615	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R9616	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R9617	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R9618	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R9620	NRSA63D-822X	MG RESISTOR	8.2kΩ 1/16W D	
R9622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9623	NRSA63D-122X	MG RESISTOR	1.2kΩ 1/16W D	
R9624	NRSA63D-331X	MG RESISTOR	330Ω 1/16W D	
R9625	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D	
R9629	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R9631	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R9632	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R9635	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R9636	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9638	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9640	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R9643	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R9645	NRS12BJ-0R0W	MG RESISTOR	0Ω 1/2W J	
R9647	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R9901	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9902	NRSA63D-104X	MG RESISTOR	100kΩ 1/16W D	
R9903	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D	
R9904	NRSA63D-184X	MG RESISTOR	180kΩ 1/16W D	
R9905	QRK126J-332X	UNF C RESISTOR	3.3kΩ 1/2W J	
R9906	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R9907	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R9908	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9910	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R9911	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R9913	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9916	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R9923	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L9141	NQL52EN-4R7X	COIL	4.7uH N	
L9201	QQR1399-001	CHOKE COIL		
L9202	QQR1513-001	CHOKE COIL		
L9541	NQL71EM-150X	COIL	15uH M	
L9902	NQL80CL-100X	COIL	10uH L	
L9903	NQL80CL-100X	COIL	10uH L	
L9904	NQL63EM-470X	COIL	47uH M	
⚠T9121	QAL0425-001	POWER TRANSF		
⚠T9501	QQS0319-001	SW TRANSF		
⚠T9502	QQS0319-001	SW TRANSF		
CN0006	QGB2501J1-13	CONNECTOR	B-B (1-13)	
CN000H	QGF1201C2-19	CONNECTOR	FFC/FPC (1-19)	
CN00E1	CE41507-001P	LV CONNECTOR		
⚠CP9121	QMFZ052-2R0-E	FUSE	2A AC250V	
⚠CP9211	QMFZ043-2R0Z-J1	FUSE	2A AC250V	
⚠F9001	QMF51D2-6R3-J1	FUSE	6.3A AC250V	
K9001	QRN143J-0R0X	C RESISTOR	0Ω 1/4W J	
K9212	QQR0621-002Z	FERRITE BEADS		
K9501	NQR0413-002X	FERRITE BEADS		
K9502	NQR0413-002X	FERRITE BEADS		
K9503	NQR0413-002X	FERRITE BEADS		
K9504	NQR0413-002X	FERRITE BEADS		
K9505	NQR0413-002X	FERRITE BEADS		
K9508	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K9541	NQR0413-003X	FERRITE BEADS		
⚠LF9001	QQR1514-001	LINE FILTER		
⚠LF9002	QQR1467-001	LINE FILTER		
⚠LF9003	QQR1514-001	LINE FILTER		
⚠PC9541	PS2581AL1/QW/	PHOTO COUPLER		
⚠PC9542	PS2581AL1/QW/	PHOTO COUPLER		
⚠RY9021	QSK0119-001	RELAY		
⚠RY9201	QSK0117-001	RELAY		
⚠VA9001	QAF0060-621	VARISTOR	620V	

REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC9802	MP1580HS-X	IC		
IC9803	MP1583DN-X	IC		
Q9802	2SD601A/QR/-X	TRANSISTOR		
Q9803	2SD601A/QR/-X	TRANSISTOR		
D9803	SD883-04-X	SB DIODE		
D9804	MA111-X	SI DIODE		
D9805	MA3051/M/-X	Z DIODE		
D9806	SD883-04-X	SB DIODE		
D9807	PTZ6.8B-X	Z DIODE		
D9808	MA111-X	SI DIODE		
D9810	PTZ6.8B-X	Z DIODE		
D9813	MA111-X	SI DIODE		
C9805	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K	
C9806	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C9809	NEHM1HM-105X	E CAPACITOR	1uF 50V M	
C9810	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K	
C9812	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K	
C9813	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C9814	NEHM0JM-107X	E CAPACITOR	100uF 6.3V M	
C9818	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C9819	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C9821	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K	
C9822	NDC31HJ-121X	C CAPACITOR	120pF 50V J	
C9823	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C9824	NCB11EK-104X	C CAPACITOR	0.1uF 25V K	
C9826	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
R9810	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9811	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9812	NRVA02D-473X	CMF RESISTOR	47kΩ 1/10W D	
R9813	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D	
R9814	NRSA63D-124X	MG RESISTOR	120kΩ 1/16W D	
R9815	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R9816	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R9817	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R9818	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9819	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R9820	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R9821	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R9822	NRSA63D-473X	MG RESISTOR	47kΩ 1/16W D	
R9823	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D	
R9824	NRSA63D-124X	MG RESISTOR	120kΩ 1/16W D	
R9825	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9826	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R9827	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R9828	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R9830	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R9831	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
L9804	NQL71EM-150X	COIL	15uH M	
L9806	NQL71EM-150X	COIL	15uH M	
L9807	NQL80CL-100X	COIL	10uH L	
CN1006	QGB2501K2-13	CONNECTOR	B-B (1-13)	

DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D301A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC0401	SN74AHCT1G32V-X	IC		
IC1001	TC90A92AFG	IC		
IC1002	MM1572FN-X	IC		
IC1502	NJM2235V-X	IC		
IC3001	JCC5055	IC		
IC3403	S-80928CLNB-W	IC		
IC3501	K4D263238F-UC50	IC		
IC3502	K4D263238F-UC50	IC		
IC3503	LP2996MR-X	IC		
IC4001	JCC5057	IC		
IC4003	AT29LV01-26D50BJ	IC(MICRO C ROM)	(SERVICE)	
IC4004	ATE256-Z26SX4B1	IC	(SERVICE)	
IC6502	THC63LVDM83R-W	IC		
IC7001	MN120H60KKC	IC(MCU)		
IC7002	ATE256-Z26SX4B2	IC	(SERVICE)	
IC7401	S-80828CLNB-W	IC		
IC7501	SDA6000-B12	IC		
IC7502	S-80828CNNB-W	IC		
IC7503	K4S641632H-UC75	IC		
IC7504	MBV160-Z26SX4B	IC(MICRO C ROM)	(SERVICE)	
IC7505	PQ2L3252MS-X	IC		
IC7506	CD74HC4053PW-X	IC		
IC7602	ATE32-Z26SX4B	IC	(SERVICE)	
IC9001	MP1580HS-X	IC		
IC9101	MP1580HS-X	IC		
IC9201	MP1580HS-X	IC		
Q0101	2SC3837K/NP/-X	TRANSISTOR		
Q0102	2SA1022/BC/-X	TRANSISTOR		
Q0104	2SA1022/BC/-X	TRANSISTOR		

⚠Ref No.	Part No.	Part Name	Description Local
Q0105	2SC3928A/QR/-X	TRANSISTOR	
Q0107	2SA1530A/QR/-X	TRANSISTOR	
Q0108	2SC3928A/QR/-X	TRANSISTOR	
Q0109	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q0110	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q0201	2SC3837K/NP/-X	TRANSISTOR	
Q0202	2SA1022/BC/-X	TRANSISTOR	
Q0203	2SC3928A/QR/-X	TRANSISTOR	
Q0204	2SA1022/BC/-X	TRANSISTOR	
Q0205	2SC3928A/QR/-X	TRANSISTOR	
Q0207	2SA1530A/QR/-X	TRANSISTOR	
Q0208	2SC3928A/QR/-X	TRANSISTOR	
Q0209	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q0210	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q0301	2SC3837K/NP/-X	TRANSISTOR	
Q0302	2SA1022/BC/-X	TRANSISTOR	
Q0303	2SC3928A/QR/-X	TRANSISTOR	
Q0304	2SA1022/BC/-X	TRANSISTOR	
Q0305	2SC3928A/QR/-X	TRANSISTOR	
Q0307	2SA1530A/QR/-X	TRANSISTOR	
Q0308	2SC3928A/QR/-X	TRANSISTOR	
Q0309	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q0310	HN1C01F/Y/-X	PAIR TRANSISTOR	
Q1001	UN2213-X	DIGI TRANSISTOR	
Q1003	2SC3928A/QR/-X	TRANSISTOR	
Q1004	2SA1530A/QR/-X	TRANSISTOR	
Q1101	2SC3928A/QR/-X	TRANSISTOR	
Q1103	2SA1530A/QR/-X	TRANSISTOR	
Q1201	2SC3928A/QR/-X	TRANSISTOR	
Q1203	2SA1530A/QR/-X	TRANSISTOR	
Q1301	2SC3928A/QR/-X	TRANSISTOR	
Q1303	2SA1530A/QR/-X	TRANSISTOR	
Q1401	2SC3928A/QR/-X	TRANSISTOR	
Q1403	2SA1530A/QR/-X	TRANSISTOR	
Q3001	2SC3928A/QR/-X	TRANSISTOR	
Q3002	2SA1530A/QR/-X	TRANSISTOR	
Q3003	2SC3928A/QR/-X	TRANSISTOR	
Q3004	2SA1530A/QR/-X	TRANSISTOR	
Q6501	2SC3928A/QR/-X	TRANSISTOR	
Q6502	2SC3928A/QR/-X	TRANSISTOR	
Q7206	UN2213-X	DIGI TRANSISTOR	
Q7207	DTA144EKA-X	DIGI TRANSISTOR	
Q7501	2SA1162/YG/-X	TRANSISTOR	
Q7508	DTC114EKA-X	DIGI TRANSISTOR	
D1001	EC30HA03L-X	SB DIODE	
D1002	EC30HA03L-X	SB DIODE	
D7001	MA111-X	SI DIODE	
D7003	MA111-X	SI DIODE	
D7005	MA8082/M/-X	Z DIODE	
D7006	MA8082/M/-X	Z DIODE	
D7007	MA8082/M/-X	Z DIODE	
D7008	MA8082/M/-X	Z DIODE	
D7009	MA8082/M/-X	Z DIODE	
D7010	MA111-X	SI DIODE	
D7203	MA111-X	SI DIODE	
D7210	RB501V-40-X	SB DIODE	
D7501	MA111-X	SI DIODE	
D7502	MA111-X	SI DIODE	
D9001	EC30HA03L-X	SB DIODE	
D9003	PTZ3.9B-X	Z DIODE	
D9101	EC30HA03L-X	SB DIODE	
D9102	EC30HA03L-X	SB DIODE	
D9103	PTZ3.9B-X	Z DIODE	
D9104	MA111-X	SI DIODE	
D9201	EC30HA03L-X	SB DIODE	
D9203	PTZ3.9B-X	Z DIODE	
D9204	MA111-X	SI DIODE	
C0103	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C0105	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C0107	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0109	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0110	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0111	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0112	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0113	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0114	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0115	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0116	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0117	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C0118	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C0203	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C0205	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C0207	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0209	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0210	NCB11AK-106X	C CAPACITOR	10uF 10V K

⚠Ref No.	Part No.	Part Name	Description Local
C0211	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0212	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0213	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0214	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0215	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0217	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C0218	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C0303	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C0305	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C0307	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0309	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0310	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0311	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0312	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0313	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0314	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0315	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0317	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C0318	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C0401	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C1001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1005	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C1006	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1009	NDC31HJ-220X	C CAPACITOR	22pF 50V J
C1010	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C1011	NDC31HJ-102X	C CAPACITOR	1000pF 50V J
C1012	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1014	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1015	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1016	NCB11AK-106X	C CAPACITOR	10uF 10V K
C1017	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1018	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1019	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1021	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1023	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1025	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1026	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1028	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1029	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1030	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1031	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1032	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1033	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1034	NDC31HJ-390X	C CAPACITOR	39pF 50V J
C1035	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C1037	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1038	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1039	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1040	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1041	NCB10JK-106X	C CAPACITOR	10uF 6.3V K
C1042	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1043	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1045	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1046	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1047	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1048	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1049	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1050	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1051	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1061	NDC31HJ-4R0X	C CAPACITOR	4pF 50V J
C1062	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M
C1063	NCB21AK-225X	C CAPACITOR	2.2uF 10V K
C1064	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1065	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
C1066	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M
C1102	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1103	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1104	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1105	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1106	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1109	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1202	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1203	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1204	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1205	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1206	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1209	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1302	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1303	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1304	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1305	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1306	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1309	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1402	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1403	NDC31HJ-330X	C CAPACITOR	33pF 50V J

⚠Ref No.	Part No.	Part Name	Description Local
C1404	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1405	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1406	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1409	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1502	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C1508	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1509	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1511	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
C3004	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3006	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3008	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3009	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3010	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3016	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3018	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3019	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3021	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3022	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3023	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3028	NDC31HJ-221X	C CAPACITOR	220pF 50V J
C3030	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3031	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3032	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3037	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3040	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C3041	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C3042	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3043	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C3044	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3045	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3047	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3049	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3051	NCB31HK-472X	C CAPACITOR	4700pF 50V K
C3052	NCB31AK-334X	C CAPACITOR	0.33uF 10V K
C3056	NCB31AK-334X	C CAPACITOR	0.33uF 10V K
C3059	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C3060	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C3063	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3065	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3066	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3067	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3068	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3069	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3070	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3071	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3072	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3074	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3076	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3097	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3101	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3105	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3111	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3126	NDC31HJ-390X	C CAPACITOR	39pF 50V J
C3406	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C3501	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3503	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3506	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3507	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3508	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3509	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3511	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3516	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3517	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3518	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3519	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3524	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3527	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3531	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3532	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3533	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3535	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3539	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3540	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3542	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3543	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3548	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3549	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3550	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3551	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3552	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C4002	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4003	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4005	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4006	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4008	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z

⚠Ref No.	Part No.	Part Name	Description Local
C4009	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4010	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4011	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C4012	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4013	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4016	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4020	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4022	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4023	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4029	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4030	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4901	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4902	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4906	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4907	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4908	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4909	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4910	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4911	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4913	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4914	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4915	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4916	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4917	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4919	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4920	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4921	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4922	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4923	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4925	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4926	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4931	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4932	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4933	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4934	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4935	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4936	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4937	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4938	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4939	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4940	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4941	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4942	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6013	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6014	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6015	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6512	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6513	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6514	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6515	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6516	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6521	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6522	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6523	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7001	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7002	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7003	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C7006	NDC31HJ-150X	C CAPACITOR	15pF 50V J
C7007	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7010	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7011	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7012	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C7013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7017	NDC31HJ-391X	C CAPACITOR	390pF 50V J
C7018	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7025	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7203	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7401	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7402	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7501	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7502	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7503	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7504	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7505	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7506	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7507	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7508	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7509	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7510	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7511	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7512	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7513	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7514	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7516	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C7517	NDC31HJ-270X	C CAPACITOR	27pF 50V J

⚠Ref No.	Part No.	Part Name	Description Local
C7518	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C7520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7521	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7522	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7523	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7524	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7525	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7526	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7527	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7528	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7529	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7531	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7532	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7533	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7534	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7535	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7541	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7542	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7543	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7544	NEH70JM-107X	E CAPACITOR	100uF 6.3V M
C7545	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7546	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7547	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7548	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7550	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7552	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7553	NCB31HK-471X	C CAPACITOR	470pF 50V K
C7616	NCB11CK-105X	C CAPACITOR	1uF 16V K
C9002	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9005	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9007	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9008	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9010	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9012	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9102	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9104	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9105	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9106	NDC31HJ-121X	C CAPACITOR	120pF 50V J
C9107	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9108	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9111	NCB31HK-822X	C CAPACITOR	8200pF 50V K
C9112	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9202	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9204	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9205	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9207	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9209	NEZ0022-157X	E CAPACITOR	150uF 10V M
C9211	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C9212	NCB31HK-222X	C CAPACITOR	2200pF 50V K
R0105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0106	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0107	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0109	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0110	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0114	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0116	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0121	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0122	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0125	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0126	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0127	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0128	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0129	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0131	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0132	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0133	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0134	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0137	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0138	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0140	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0141	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0205	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0207	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0208	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0209	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0210	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0211	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0214	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0216	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0219	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0221	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0222	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0225	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0226	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0227	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0228	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0229	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0231	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0232	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0233	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0234	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0237	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0238	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0240	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0241	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0305	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0307	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0308	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0309	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0310	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0311	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0314	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0316	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0319	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0321	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0322	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0325	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0326	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0327	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0328	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0329	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0331	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0332	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0333	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0334	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0337	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0338	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0340	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0341	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0504	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0506	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0508	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0516	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0517	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0520	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0522	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0523	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0524	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0527	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1001	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R1002	NRSA63D-101X	MG RESISTOR	100Ω 1/16W D
R1003	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1004	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R1005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1010	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J
R1011	NQL093K-R10X	P COIL	0.1uH K
R1012	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J
R1013	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1017	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1018	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1021	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1101	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1102	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1104	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1105	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1106	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1107	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1113	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1201	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1203	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1204	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1205	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1207	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1213	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1301	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1303	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1304	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1305	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R1307	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1313	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1401	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1403	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1404	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1405	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1406	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1407	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1413	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1523	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
R1524	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J
R1525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1584	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R2010	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3001	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3008	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3009	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3018	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3019	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3020	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3021	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3022	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3023	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3024	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3028	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3029	NRSA63D-392X	MG RESISTOR	3.9kΩ 1/16W D
R3030	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3031	NRSA63D-151X	MG RESISTOR	150Ω 1/16W D
R3032	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3033	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3034	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3036	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3037	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3038	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R3040	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3041	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3042	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3043	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3044	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3045	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3047	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3048	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3053	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R3054	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3056	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3063	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3064	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3089	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3090	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3091	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3092	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3093	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3094	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3095	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3096	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3097	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3098	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3099	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3100	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3101	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3102	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3103	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3104	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3105	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3106	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3122	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3126	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3131	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3132	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3151	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3153	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3155	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3157	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3160	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3161	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3163	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3164	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3165	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3166	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3167	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3168	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3169	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3170	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3171	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3178	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3181	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3207	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3502	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3503	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3505	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3507	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3509	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3511	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3514	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3516	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3518	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3520	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3522	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3524	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3525	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3527	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3529	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3531	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3533	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3536	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3538	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3540	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3542	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3544	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R4004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4016	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4023	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4024	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4027	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4035	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4037	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4039	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4041	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4042	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4044	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4055	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4056	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R4057	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4058	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4060	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R4061	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4065	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4068	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4101	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4102	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4103	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4104	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4106	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4108	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6025	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6028	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6031	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6034	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6036	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6038	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6039	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6040	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6043	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6057	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6058	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6510	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6512	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R6513	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6514	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6515	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6521	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6529	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R6531	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6532	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6534	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6536	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6537	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6538	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6540	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6541	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6542	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6544	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6548	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6550	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6558	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7001	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7002	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7004	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7005	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7010	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7011	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7016	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7017	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7021	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7022	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7023	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7024	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7025	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7026	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7029	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7031	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7033	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7034	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7035	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7038	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7039	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7040	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7041	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7042	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7043	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7047	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7049	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7057	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7058	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7059	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7060	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7061	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7063	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J
R7064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7067	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R7068	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7077	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7080	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7081	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7082	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7085	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7086	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7087	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7088	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7089	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7090	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7091	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7092	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7093	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7094	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7095	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7096	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7097	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7098	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7099	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7100	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7101	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7106	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7107	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7108	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7109	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7110	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7111	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7112	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7115	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7117	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7118	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7120	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7123	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7132	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7134	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7135	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7136	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7137	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7140	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7143	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7144	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7145	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7146	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7148	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7149	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7150	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7151	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7152	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7153	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7158	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7214	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7215	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7216	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7401	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7404	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7501	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7510	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7511	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7514	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7515	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7518	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7553	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7556	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7557	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7558	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7559	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7560	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7561	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7565	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7566	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7567	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7568	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7576	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7588	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7590	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7599	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7602	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7603	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7692	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7701	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7705	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7706	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7707	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7708	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J
R7709	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7710	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7711	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7712	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7713	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7714	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7715	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7716	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7717	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7718	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7719	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J
R7720	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9001	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9003	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D

⚠Ref No.	Part No.	Part Name	Description Local
R9004	NRSA63D-124X	MG RESISTOR	120kΩ 1/16W D
R9005	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9006	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9008	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9101	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9103	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D
R9104	NRSA63D-223X	MG RESISTOR	22kΩ 1/16W D
R9105	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9106	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9107	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9108	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9109	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9201	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9202	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9204	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D
R9205	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9206	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9207	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9208	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
R9209	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9210	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
RA1001	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1003	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3004	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3013	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3014	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3015	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3016	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3018	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3020	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3022	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3023	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3024	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3025	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3026	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3028	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3030	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3032	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3502	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3506	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3508	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3512	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3516	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3518	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3521	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3523	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3526	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3530	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3531	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3536	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3540	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3542	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3545	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3547	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA4007	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4008	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4009	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4010	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4011	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4012	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA6515	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
RA7007	NRZ0040-0R0X	NET RESISTOR	0Ω 1/16W J x4
RB2001	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2002	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2003	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
L0101	NQL092K-2R2X	COIL	2.2uH K
L0102	NQL092K-1R0X	P COIL	1uH K
L0201	NQL092K-2R2X	COIL	2.2uH K
L0202	NQL092K-1R0X	P COIL	1uH K
L0301	NQL092K-2R2X	COIL	2.2uH K
L0302	NQL092K-1R0X	P COIL	1uH K
L0401	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1001	NQR0489-002X	FERRITE BEADS	
L1002	NQR0489-002X	FERRITE BEADS	
L1003	NQL092K-1R5X	COIL	1.5uH K
L1004	NQR0489-002X	FERRITE BEADS	
L1005	NQR0489-002X	FERRITE BEADS	
L1006	NQR0489-002X	FERRITE BEADS	
L1008	NQL79GM-220X	COIL	22uH M
L1010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1011	NQL79GM-470X	COIL	47uH M
L1101	NQL092K-6R8X	COIL	6.8uH K
L1102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1103	NQL092K-1R0X	P COIL	1uH K
L1201	NQL092K-6R8X	COIL	6.8uH K
L1203	NQL092K-1R0X	P COIL	1uH K
L1301	NQL092K-6R8X	COIL	6.8uH K
L1303	NQL092K-1R0X	P COIL	1uH K
L1401	NQL092K-6R8X	COIL	6.8uH K
L1403	NQL092K-1R0X	P COIL	1uH K
L1501	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3001	NQR0489-002X	FERRITE BEADS	
L3005	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3006	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3008	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3009	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3012	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L3501	NQR0413-003X	FERRITE BEADS	
L4001	NQR0413-003X	FERRITE BEADS	
L4002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L4003	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L6501	NQR0351-001X	FERRITE BEADS	
L6502	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L6508	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
L6509	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
L6510	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
L7001	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7002	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7004	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7005	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
L7501	NQL092K-4R7X	COIL	4.7uH K
L7502	NQL092K-4R7X	COIL	4.7uH K
L7503	NQL092K-4R7X	COIL	4.7uH K
L7504	NQL092K-4R7X	COIL	4.7uH K
L7505	NQL092K-4R7X	COIL	4.7uH K
L7506	NQL914M-4R7X	COIL	4.7uH M
L7507	NQL092K-4R7X	COIL	4.7uH K
L7508	NQL092K-4R7X	COIL	4.7uH K
L7509	NQL092K-4R7X	COIL	4.7uH K
L7510	NQL092K-4R7X	COIL	4.7uH K
L7511	NQL092K-4R7X	COIL	4.7uH K
L7512	NQL914M-4R7X	COIL	4.7uH M
L7513	NQL914M-4R7X	COIL	4.7uH M
L7514	NQL092K-4R7X	COIL	4.7uH K
L9001	NQL71EM-150X	COIL	15uH M
L9101	NQL71EM-150X	COIL	15uH M
L9201	NQL71EM-150X	COIL	15uH M
CN001	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)
CN002	QGF0508F1-30X	CONNECTOR	FFC/FPC (1-30)
K1001	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
K1004	NQR0489-002X	FERRITE BEADS	
K3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
K3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
K7002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
K7501	NRSA63J-390X	MG RESISTOR	39Ω 1/16W J
K7502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
K7503	NQR0389-003X	FERRITE BEADS	
LC0102	NQR0483-005X	EMI FILTER	100uF 25V Z
LC0519	NQR0416-001X	EMI FILTER	240pF 16V M
LC0524	NQR0415-005X	EMI FILTER	0.1uF 25V M
LC0525	NQR0470-003X	EMI FILTER	100pF 50V +50%-20%
LC6501	NQR0479-001X	EMI FILTER	
LC7501	NQR0313-007X	EMI FILTER	1000pF 50V M
LC7502	NQR0431-001X	EMI FILTER	0.22uF 50V Z
SL7001	NAX0613-001X	C RESONATOR	
X1001	NAX0642-001X	CRYSTAL	
X3001	NAX0635-001X	CXO	
X3003	NAX0668-001X	CXO	
X4001	NAX0669-001X	C RESONATOR	
X7501	NAX0618-001X	CRYSTAL	

RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2)

⚠Ref No.	Part No.	Part Name	Description Local
IC3101	M62320FP-X	IC	
IC3501	MSP3415GQGB8V3M	IC	
IC3504	BA80BC0FP-X	IC	
IC3601	AN5285K	IC	
IC3651	HA17558AF-X	IC	

⚠Ref No.	Part No.	Part Name	Description	Local
Q3001	2SC3928A/QR/-X	TRANSISTOR		
Q3502	2SC3928A/QR/-X	TRANSISTOR		
Q3503	UN2213-X	DIGI TRANSISTOR		
C3003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3004	NEH71AM-107X	E CAPACITOR	100uF 10V M	
C3007	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C3008	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3009	NEH71HM-106X	E CAPACITOR	10uF 50V M	
C3010	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3011	NEH71HM-106X	E CAPACITOR	10uF 50V M	
C3012	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3101	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C3501	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C3502	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3503	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3504	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3505	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C3511	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3512	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3513	NDC31HJ-2R0X	C CAPACITOR	2pF 50V J	
C3514	NDC31HJ-2R0X	C CAPACITOR	2pF 50V J	
C3515	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3516	NEH71AM-107X	E CAPACITOR	100uF 10V M	
C3517	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3518	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C3523	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C3524	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C3525	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C3526	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3527	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3528	NEH71AM-107X	E CAPACITOR	100uF 10V M	
C3529	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C3530	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C3531	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3532	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C3533	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C3534	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C3535	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C3536	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C3537	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3544	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3545	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3546	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3547	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3601	NEH71EM-475X	E CAPACITOR	4.7uF 25V M	
C3602	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3603	NEH71AM-107X	E CAPACITOR	100uF 10V M	
C3604	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C3605	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C3607	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3608	NEH71CM-106X	E CAPACITOR	10uF 16V M	
C3609	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3610	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3651	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3652	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C3653	NEH71CM-476X	E CAPACITOR	47uF 16V M	
C3654	NEH71CM-476X	E CAPACITOR	47uF 16V M	
R3004	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3005	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3008	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3009	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R3010	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3011	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3014	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3016	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3101	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3102	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3103	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3104	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3111	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3501	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3508	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3511	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3512	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3513	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3514	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3515	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3516	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3517	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3522	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3523	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3546	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R3547	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R3601	NRSA63J-225X	MG RESISTOR	2.2MΩ 1/16W J	
R3602	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R3605	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R3606	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R3607	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R3608	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R3611	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R3651	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3652	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R3653	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3654	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3655	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R3656	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3657	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R3658	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R3701	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R3702	QRE141J-0R0Y	C RESISTOR	0Ω 1/4W J	
L3001	NQL79GM-220X	COIL	22uH M	
L3002	NQL79GM-100X	COIL	10uH M	
L3503	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3504	NQL79GM-4R7X	COIL	4.7uH M	
L3506	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3507	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K3501	NQR0389-003X	FERRITE BEADS		
K3502	NQR0389-003X	FERRITE BEADS		
LC3501	NQR0431-001X	EMI FILTER	0.22uF 50V Z	
⚠TU3001	QAU0390-001	TUNER		
X3501	QAX0773-001Z	CRYSTAL	18.432000MHz	

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B/A]

ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2)

REFER TO PARTS LIST IN PAGE 3-6 FOR THIS P.W. BOARD.

CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

POWER P.W. BOARD ASS'Y (SFL-9013A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2)

REFER TO PARTS LIST IN PAGE 3-12 FOR THIS P.W. BOARD.

DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D303A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC0401	SN74AHCT1G32V-X	IC		
IC1001	TC90A92AFG	IC		
IC1002	MM1572FN-X	IC		
IC1502	NJM2235V-X	IC		
IC3001	JCC5055	IC		
IC3403	S-80928CLNB-W	IC		
IC3501	K4D263238F-UC50	IC		
IC3502	K4D263238F-UC50	IC		
IC3503	LP2996MR-X	IC		
IC4001	JCC5057	IC		
IC4003	AT29LV01-26D50BJ	IC(MICRO C ROM)	(SERVICE)	
IC4004	ATE256-Z26SX4B1	IC	(SERVICE)	
IC6502	THC63LVDM83R-W	IC		
IC7001	MN120H60KKC	IC(MCU)		
IC7002	ATE256-Z26SX4B2	IC	(SERVICE)	
IC7401	S-80828CLNB-W	IC		
IC7501	SDA6000-B12	IC		
IC7502	S-80828CNNB-W	IC		
IC7503	K4S641632H-UC75	IC		
IC7504	MBV160-Z26SX4B	IC(MICRO C ROM)	(SERVICE)	
IC7505	PQ2L3252MS-X	IC		
IC7506	CD74HC4053PW-X	IC		
IC7602	ATE32-Z26SX4B	IC	(SERVICE)	
IC9001	MP1580HS-X	IC		
IC9101	MP1580HS-X	IC		
IC9201	MP1580HS-X	IC		
Q0101	2SC3837K/NP/-X	TRANSISTOR		
Q0102	2SA1022/BC/-X	TRANSISTOR		
Q0104	2SA1022/BC/-X	TRANSISTOR		
Q0105	2SC3928A/QR/-X	TRANSISTOR		
Q0107	2SA1530A/QR/-X	TRANSISTOR		
Q0108	2SC3928A/QR/-X	TRANSISTOR		
Q0109	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0110	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0201	2SC3837K/NP/-X	TRANSISTOR		
Q0202	2SA1022/BC/-X	TRANSISTOR		
Q0203	2SC3928A/QR/-X	TRANSISTOR		
Q0204	2SA1022/BC/-X	TRANSISTOR		
Q0205	2SC3928A/QR/-X	TRANSISTOR		
Q0207	2SA1530A/QR/-X	TRANSISTOR		
Q0208	2SC3928A/QR/-X	TRANSISTOR		
Q0209	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0210	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0301	2SC3837K/NP/-X	TRANSISTOR		
Q0302	2SA1022/BC/-X	TRANSISTOR		
Q0303	2SC3928A/QR/-X	TRANSISTOR		
Q0304	2SA1022/BC/-X	TRANSISTOR		
Q0305	2SC3928A/QR/-X	TRANSISTOR		
Q0307	2SA1530A/QR/-X	TRANSISTOR		
Q0308	2SC3928A/QR/-X	TRANSISTOR		
Q0309	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0310	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q1001	UN2213-X	DIGI TRANSISTOR		
Q1003	2SC3928A/QR/-X	TRANSISTOR		
Q1004	2SA1530A/QR/-X	TRANSISTOR		
Q1101	2SC3928A/QR/-X	TRANSISTOR		
Q1103	2SA1530A/QR/-X	TRANSISTOR		
Q1201	2SC3928A/QR/-X	TRANSISTOR		
Q1203	2SA1530A/QR/-X	TRANSISTOR		
Q1301	2SC3928A/QR/-X	TRANSISTOR		
Q1303	2SA1530A/QR/-X	TRANSISTOR		
Q1401	2SC3928A/QR/-X	TRANSISTOR		
Q1403	2SA1530A/QR/-X	TRANSISTOR		
Q3001	2SC3928A/QR/-X	TRANSISTOR		
Q3002	2SA1530A/QR/-X	TRANSISTOR		
Q3003	2SC3928A/QR/-X	TRANSISTOR		
Q3004	2SA1530A/QR/-X	TRANSISTOR		
Q6501	2SC3928A/QR/-X	TRANSISTOR		
Q6502	2SC3928A/QR/-X	TRANSISTOR		
Q7206	UN2213-X	DIGI TRANSISTOR		
Q7207	DTA144EKA-X	DIGI TRANSISTOR		
Q7501	2SA1162/YG/-X	TRANSISTOR		
Q7508	DTC114EKA-X	DIGI TRANSISTOR		
D1001	EC30HA03L-X	SB DIODE		
D1002	EC30HA03L-X	SB DIODE		
D7001	MA111-X	SI DIODE		
D7003	MA111-X	SI DIODE		
D7005	MA8082/M/-X	Z DIODE		
D7006	MA8082/M/-X	Z DIODE		
D7007	MA8082/M/-X	Z DIODE		
D7008	MA8082/M/-X	Z DIODE		
D7009	MA8082/M/-X	Z DIODE		
D7010	MA111-X	SI DIODE		
D7203	MA111-X	SI DIODE		
D7210	RB501V-40-X	SB DIODE		
D7501	MA111-X	SI DIODE		
D7502	MA111-X	SI DIODE		
D9001	EC30HA03L-X	SB DIODE		
D9003	PTZ3.9B-X	Z DIODE		
D9101	EC30HA03L-X	SB DIODE		
D9102	EC30HA03L-X	SB DIODE		
D9103	PTZ3.9B-X	Z DIODE		
D9104	MA111-X	SI DIODE		
D9201	EC30HA03L-X	SB DIODE		
D9203	PTZ3.9B-X	Z DIODE		
D9204	MA111-X	SI DIODE		
C0103	NDC31HJ-330X	C CAPACITOR	33pF	50V J
C0105	NDC31HJ-270X	C CAPACITOR	27pF	50V J
C0107	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z
C0109	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0110	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0111	NDC31HJ-820X	C CAPACITOR	82pF	50V J
C0112	NDC31HJ-820X	C CAPACITOR	82pF	50V J
C0113	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0114	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z
C0115	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z
C0116	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0117	NDC31HJ-560X	C CAPACITOR	56pF	50V J
C0118	NDC31HJ-151X	C CAPACITOR	150pF	50V J
C0203	NDC31HJ-330X	C CAPACITOR	33pF	50V J
C0205	NDC31HJ-270X	C CAPACITOR	27pF	50V J
C0207	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z
C0209	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0210	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0211	NDC31HJ-820X	C CAPACITOR	82pF	50V J
C0212	NDC31HJ-820X	C CAPACITOR	82pF	50V J
C0213	NCB11AK-106X	C CAPACITOR	10uF	10V K
C0214	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z
C0215	NCF31CZ-104X	C CAPACITOR	0.1uF	16V Z

⚠Ref No.	Part No.	Part Name	Description	Local
C0217	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C0218	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C0303	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C0305	NDC31HJ-270X	C CAPACITOR	27pF 50V J	
C0307	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0309	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0310	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0311	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0312	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0313	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0314	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0315	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0317	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C0318	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C0401	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C1001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1005	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C1006	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1009	NDC31HJ-220X	C CAPACITOR	22pF 50V J	
C1010	NDC31HJ-180X	C CAPACITOR	18pF 50V J	
C1011	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C1012	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1014	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1015	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1016	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C1017	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1018	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1019	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1021	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1023	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1025	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1026	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1028	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1029	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1030	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1031	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1032	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1033	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1034	NDC31HJ-390X	C CAPACITOR	39pF 50V J	
C1035	NDC31HJ-680X	C CAPACITOR	68pF 50V J	
C1037	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1038	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1039	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1040	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1041	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C1042	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1043	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1045	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1046	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1047	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1048	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C1049	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1050	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C1051	NCB11CK-105X	C CAPACITOR	1uF 16V K	
C1061	NDC31HJ-4R0X	C CAPACITOR	4pF 50V J	
C1062	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M	
C1063	NCB21AK-225X	C CAPACITOR	2.2uF 10V K	
C1064	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1065	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1066	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M	
C1102	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1103	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1104	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C1105	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C1106	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1109	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C1202	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1203	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1204	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C1205	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C1206	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1209	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C1302	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1303	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1304	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C1305	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C1306	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1309	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C1402	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1403	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C1404	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C1405	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C1406	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C1409	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C1502	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K	
C1508	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C1509	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1511	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
C3004	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3006	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3008	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3009	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3010	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3016	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3018	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3019	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3021	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3022	NBZ0007-107X	SP E CAPACITOR	100uF 4V M	
C3023	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3028	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C3030	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3031	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3032	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3037	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3040	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3041	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C3042	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3043	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C3044	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3045	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3047	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3049	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3051	NCB31HK-472X	C CAPACITOR	4700pF 50V K	
C3052	NCB31AK-334X	C CAPACITOR	0.33uF 10V K	
C3056	NCB31AK-334X	C CAPACITOR	0.33uF 10V K	
C3059	NCB31HK-223X	C CAPACITOR	0.022uF 50V K	
C3060	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C3063	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3065	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3066	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3067	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3068	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3069	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3070	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3071	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3072	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3074	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3076	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3097	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3101	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3105	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3111	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3126	NDC31HJ-390X	C CAPACITOR	39pF 50V J	
C3406	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C3501	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3503	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3506	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3507	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3508	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3509	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3511	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3516	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3517	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3518	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3519	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3524	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3527	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3531	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3532	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3533	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K	
C3535	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3539	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3540	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3542	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z	
C3543	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3548	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3549	NBZ0007-107X	SP E CAPACITOR	100uF 4V M	
C3550	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C3551	NBZ0007-107X	SP E CAPACITOR	100uF 4V M	
C3552	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C4002	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C4003	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C4005	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C4006	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C4008	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C4009	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C4010	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C4011	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z	
C4012	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C4013	NCB31AK-105X	C CAPACITOR	1uF 10V K	

⚠Ref No.	Part No.	Part Name	Description Local
C4016	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4020	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4022	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4023	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4029	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4030	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4901	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4902	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4906	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4907	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4908	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4909	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4910	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4911	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4913	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4914	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4915	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4916	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4917	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4919	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4920	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4921	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4922	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4923	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4925	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4926	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4931	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4932	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4933	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4934	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4935	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4936	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4937	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4938	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4939	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4940	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4941	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4942	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6013	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6014	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6015	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6512	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6513	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6514	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6515	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6516	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6521	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6522	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6523	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7001	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7002	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7003	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C7006	NDC31HJ-150X	C CAPACITOR	15pF 50V J
C7007	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7010	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7011	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7012	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C7013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7017	NDC31HJ-391X	C CAPACITOR	390pF 50V J
C7018	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7025	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7203	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7401	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7402	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7501	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7502	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7503	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7504	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7505	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7506	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7507	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7508	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7509	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7510	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7511	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7512	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7513	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7514	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7516	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C7517	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C7518	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C7520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7521	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7522	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7523	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7524	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7525	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7526	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7527	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7528	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7529	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7531	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7532	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7533	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7534	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7535	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7541	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7542	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7543	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7544	NEH70JM-107X	E CAPACITOR	100uF 6.3V M
C7545	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7546	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7547	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7548	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7550	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7552	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7553	NCB31HK-471X	C CAPACITOR	470pF 50V K
C7616	NCB11CK-105X	C CAPACITOR	1uF 16V K
C9002	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9005	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9007	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9008	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9010	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9012	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9102	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9104	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9105	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9106	NDC31HJ-121X	C CAPACITOR	120pF 50V J
C9107	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9108	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9111	NCB31HK-822X	C CAPACITOR	8200pF 50V K
C9112	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9202	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9204	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9205	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9207	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9209	NEZ0022-157X	E CAPACITOR	150uF 10V M
C9211	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C9212	NCB31HK-222X	C CAPACITOR	2200pF 50V K
R0105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0106	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0107	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0109	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0110	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0114	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0116	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0121	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0122	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0125	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0126	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0127	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0128	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0129	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0131	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0132	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0133	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0134	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0137	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0138	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0140	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0141	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0205	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0207	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0208	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0209	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0210	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0211	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0214	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0216	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0219	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0221	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0222	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0225	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0226	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0227	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0228	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0229	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R0231	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0232	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0233	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0234	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0237	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0238	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0240	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0241	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0305	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0307	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0308	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0309	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0310	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0311	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0314	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0316	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0319	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0321	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0322	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0325	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0326	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0327	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0328	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0329	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0331	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0332	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0333	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0334	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0337	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0338	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0340	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0341	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0504	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0506	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0508	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0516	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0517	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0520	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0522	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0523	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0524	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0527	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1001	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R1002	NRSA63D-101X	MG RESISTOR	100Ω 1/16W D
R1003	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1004	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R1005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1010	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J
R1011	NQL093K-R10X	P COIL	0.1uH K
R1012	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J
R1013	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1017	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1018	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1021	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1101	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1102	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1104	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1105	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1106	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1107	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1113	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1201	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1203	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1204	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1205	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1207	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1213	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1301	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1303	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1304	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1305	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1307	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1313	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1401	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1403	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1404	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1405	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1406	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1407	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1413	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1523	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
R1524	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J
R1525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1584	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R2010	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3001	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3008	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3009	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3018	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3019	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3020	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3021	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3022	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3023	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3024	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3028	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3029	NRSA63D-392X	MG RESISTOR	3.9kΩ 1/16W D
R3030	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3031	NRSA63D-151X	MG RESISTOR	150Ω 1/16W D
R3032	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3033	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3034	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3036	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3037	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3038	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R3040	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3041	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3042	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3043	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3044	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3045	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3047	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3048	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3053	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R3054	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3056	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3063	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3064	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3089	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3090	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3091	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3092	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3093	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3094	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3095	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3096	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3097	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3098	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3099	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3100	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3101	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3102	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3103	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3104	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3105	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3106	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3122	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3126	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3131	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3132	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3151	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3153	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3155	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3157	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3160	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3161	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3163	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3164	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3165	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3166	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3167	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R3168	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3169	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3170	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3171	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3178	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3181	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3207	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3502	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3503	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3505	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3507	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3509	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3511	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3514	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3516	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3518	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3520	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3522	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3524	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3525	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3527	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3529	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3531	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3533	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3536	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3538	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3540	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3542	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3544	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R4004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4016	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4023	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4024	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4027	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4035	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4037	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4039	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4041	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4042	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4044	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4055	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4056	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R4057	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4058	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4060	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R4061	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4065	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4068	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4101	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4102	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4103	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4104	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4106	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4108	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6025	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6028	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6031	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6034	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6036	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6038	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6039	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6040	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6043	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6057	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6058	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6510	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6512	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6513	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6514	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6515	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6521	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6529	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R6531	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6532	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6534	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6536	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6537	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6538	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6540	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6541	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6542	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6544	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6548	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6550	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6558	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7001	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7002	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7004	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7005	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7010	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7011	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7016	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7017	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7021	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7022	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7023	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7024	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7025	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7026	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7029	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7031	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7033	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7034	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7035	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7038	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7039	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7040	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7041	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7042	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7043	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7047	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7049	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7057	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7058	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7059	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7060	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7061	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7063	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J
R7064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7067	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R7068	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7077	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7080	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7081	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7082	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7085	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7086	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7087	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7088	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7089	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7090	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7091	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7092	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7093	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7094	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7095	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7096	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7097	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7098	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7099	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7100	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7101	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7106	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R7107	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7108	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7109	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7110	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7111	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7112	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7115	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7117	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7118	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7120	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7123	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7132	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7134	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7135	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7136	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7137	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7140	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7143	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7144	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7145	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7146	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7148	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7149	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7150	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7151	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7152	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7153	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7158	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7214	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7215	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7216	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7401	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7404	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7501	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7510	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7511	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7514	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7515	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7518	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7553	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7556	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7557	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7558	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7559	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7560	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7561	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7565	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7566	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7567	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7568	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7576	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7588	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7590	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7599	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7602	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7603	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7692	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7701	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7705	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7706	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7707	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7708	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J
R7709	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7710	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7711	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7712	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7713	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7714	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7715	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7716	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7717	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7718	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7719	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J
R7720	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9001	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9003	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D
R9004	NRSA63D-124X	MG RESISTOR	120kΩ 1/16W D
R9005	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9006	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9008	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9101	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9103	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D
R9104	NRSA63D-223X	MG RESISTOR	22kΩ 1/16W D
R9105	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9106	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9107	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9108	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9109	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9201	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9202	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9204	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D
R9205	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9206	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9207	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9208	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
R9209	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9210	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
RA1001	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1003	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3004	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3013	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3014	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3015	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3016	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3018	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3020	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3022	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3023	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3024	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3025	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3026	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3028	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3030	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3032	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3502	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3506	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3508	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3512	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3516	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3518	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3521	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3523	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3526	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3530	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3531	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3536	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3540	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3542	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3545	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3547	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA4007	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4008	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4009	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4010	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4011	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4012	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA6515	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
RA7007	NRZ0040-0R0X	NET RESISTOR	0Ω 1/16W J x4
RB2001	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2002	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2003	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
L0101	NQL092K-2R2X	COIL	2.2uH K
L0102	NQL092K-1R0X	P COIL	1uH K
L0201	NQL092K-2R2X	COIL	2.2uH K
L0202	NQL092K-1R0X	P COIL	1uH K
L0301	NQL092K-2R2X	COIL	2.2uH K
L0302	NQL092K-1R0X	P COIL	1uH K
L0401	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1001	NQR0489-002X	FERRITE BEADS	
L1002	NQR0489-002X	FERRITE BEADS	
L1003	NQL092K-1R5X	COIL	1.5uH K
L1004	NQR0489-002X	FERRITE BEADS	
L1005	NQR0489-002X	FERRITE BEADS	
L1006	NQR0489-002X	FERRITE BEADS	
L1008	NQL79GM-220X	COIL	22uH M
L1010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1011	NQL79GM-470X	COIL	47uH M
L1101	NQL092K-6R8X	COIL	6.8uH K
L1102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1103	NQL092K-1R0X	P COIL	1uH K
L1201	NQL092K-6R8X	COIL	6.8uH K
L1203	NQL092K-1R0X	P COIL	1uH K
L1301	NQL092K-6R8X	COIL	6.8uH K

⚠Ref No.	Part No.	Part Name	Description	Local
L1303	NQL092K-1R0X	P COIL	1uH K	
L1401	NQL092K-6R8X	COIL	6.8uH K	
L1403	NQL092K-1R0X	P COIL	1uH K	
L1501	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3001	NQR0489-002X	FERRITE BEADS		
L3005	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3006	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3008	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3009	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3012	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3501	NQR0413-003X	FERRITE BEADS		
L4001	NQR0413-003X	FERRITE BEADS		
L4002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L4003	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L6501	NQR0351-001X	FERRITE BEADS		
L6502	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L6508	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L6509	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L6510	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L7001	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7002	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7004	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7005	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7501	NQL092K-4R7X	COIL	4.7uH K	
L7502	NQL092K-4R7X	COIL	4.7uH K	
L7503	NQL092K-4R7X	COIL	4.7uH K	
L7504	NQL092K-4R7X	COIL	4.7uH K	
L7505	NQL092K-4R7X	COIL	4.7uH K	
L7506	NQL914M-4R7X	COIL	4.7uH M	
L7507	NQL092K-4R7X	COIL	4.7uH K	
L7508	NQL092K-4R7X	COIL	4.7uH K	
L7509	NQL092K-4R7X	COIL	4.7uH K	
L7510	NQL092K-4R7X	COIL	4.7uH K	
L7511	NQL092K-4R7X	COIL	4.7uH K	
L7512	NQL914M-4R7X	COIL	4.7uH M	
L7513	NQL914M-4R7X	COIL	4.7uH M	
L7514	NQL092K-4R7X	COIL	4.7uH K	
L9001	NQL71EM-150X	COIL	15uH M	
L9101	NQL71EM-150X	COIL	15uH M	
L9201	NQL71EM-150X	COIL	15uH M	
CN001	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
CN002	QGF0508F1-30X	CONNECTOR	FFC/FPC (1-30)	
K1001	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K1004	NQR0489-002X	FERRITE BEADS		
K3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K7002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K7501	NRSA63J-390X	MG RESISTOR	39Ω 1/16W J	
K7502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K7503	NQR0389-003X	FERRITE BEADS		
LC0102	NQR0483-005X	EMI FILTER	100uF 25V Z	
LC0519	NQR0416-001X	EMI FILTER	240pF 16V M	
LC0524	NQR0415-005X	EMI FILTER	0.1uF 25V M	
LC0525	NQR0470-003X	EMI FILTER	100pF 50V +50%-20%	
LC6501	NQR0479-001X	EMI FILTER		
LC7501	NQR0313-007X	EMI FILTER	1000pF 50V M	
LC7502	NQR0431-001X	EMI FILTER	0.22uF 50V Z	
SL7001	NAX0613-001X	C RESONATOR		
X1001	NAX0642-001X	CRYSTAL		
X3001	NAX0635-001X	CXO		
X3003	NAX0668-001X	CXO		
X4001	NAX0669-001X	C RESONATOR		
X7501	NAX0618-001X	CRYSTAL		

RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2)

REFER TO PARTS LIST IN PAGE 3-18 FOR THIS P.W. BOARD.

PRINTED WIRING BOARD PARTS LIST [LT-Z26SX4B/S, LT-Z26SX4S/S]

ANALOG SIGNAL P.W. BOARD ASS'Y (SFL-1032A-H2)

REFER TO PARTS LIST IN PAGE 3-6 FOR THIS P.W. BOARD.

CONNECTOR P.W. BOARD ASS'Y (SFL-4031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

FRONT CONTROL P.W. BOARD ASS'Y (SFL-7031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

FRONT SENSOR P.W. BOARD ASS'Y (SFL-8031A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

POWER P.W. BOARD ASS'Y (SFL-9013A-H2)

REFER TO PARTS LIST IN PAGE 3-10 FOR THIS P.W. BOARD.

REGULATOR P.W. BOARD ASS'Y (SFL-9113A-H2)

REFER TO PARTS LIST IN PAGE 3-12 FOR THIS P.W. BOARD.

DIGITAL SIGNAL P.W. BOARD ASS'Y (SFL0D302A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC0401	SN74AHCT1G32V-X	IC		
IC1001	TC90A92AFG	IC		
IC1002	MM1572FN-X	IC		
IC1502	NJM2235V-X	IC		
IC3001	JCC5055	IC		
IC3403	S-80928CLNB-W	IC		
IC3501	K4D263238F-UC50	IC		
IC3502	K4D263238F-UC50	IC		
IC3503	LP2996MR-X	IC		
IC4001	JCC5057	IC		
IC4003	AT29LV01-26D50BJ	IC(MICRO C ROM)	(SERVICE)	
IC4004	ATE256-Z26SX4B1	IC	(SERVICE)	
IC6502	THC63LVDM83R-W	IC		
IC7001	MN120H60KKC	IC(MCU)		
IC7002	ATE256-Z26SX4B2	IC	(SERVICE)	
IC7401	S-80828CLNB-W	IC		
IC7501	SDA6000-B12	IC		
IC7502	S-80828CNNB-W	IC		
IC7503	K4S641632H-UC75	IC		
IC7504	MBV160-Z26SX4B	IC(MICRO C ROM)	(SERVICE)	
IC7505	PQ2L3252MS-X	IC		
IC7506	CD74HC4053PW-X	IC		
IC7602	ATE32-Z26SX4B	IC	(SERVICE)	
IC9001	MP1580HS-X	IC		
IC9101	MP1580HS-X	IC		
IC9201	MP1580HS-X	IC		
Q0101	2SC3837K/NP/-X	TRANSISTOR		
Q0102	2SA1022/BC/-X	TRANSISTOR		
Q0104	2SA1022/BC/-X	TRANSISTOR		
Q0105	2SC3928A/QR/-X	TRANSISTOR		
Q0107	2SA1530A/QR/-X	TRANSISTOR		
Q0108	2SC3928A/QR/-X	TRANSISTOR		
Q0109	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0110	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0201	2SC3837K/NP/-X	TRANSISTOR		
Q0202	2SA1022/BC/-X	TRANSISTOR		
Q0203	2SC3928A/QR/-X	TRANSISTOR		
Q0204	2SA1022/BC/-X	TRANSISTOR		
Q0205	2SC3928A/QR/-X	TRANSISTOR		
Q0207	2SA1530A/QR/-X	TRANSISTOR		
Q0208	2SC3928A/QR/-X	TRANSISTOR		
Q0209	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0210	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0301	2SC3837K/NP/-X	TRANSISTOR		
Q0302	2SA1022/BC/-X	TRANSISTOR		
Q0303	2SC3928A/QR/-X	TRANSISTOR		
Q0304	2SA1022/BC/-X	TRANSISTOR		
Q0305	2SC3928A/QR/-X	TRANSISTOR		
Q0307	2SA1530A/QR/-X	TRANSISTOR		
Q0308	2SC3928A/QR/-X	TRANSISTOR		
Q0309	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q0310	HN1C01F/Y/-X	PAIR TRANSISTOR		
Q1001	UN2213-X	DIGI TRANSISTOR		
Q1003	2SC3928A/QR/-X	TRANSISTOR		
Q1004	2SA1530A/QR/-X	TRANSISTOR		
Q1101	2SC3928A/QR/-X	TRANSISTOR		
Q1103	2SA1530A/QR/-X	TRANSISTOR		
Q1201	2SC3928A/QR/-X	TRANSISTOR		
Q1203	2SA1530A/QR/-X	TRANSISTOR		
Q1301	2SC3928A/QR/-X	TRANSISTOR		
Q1303	2SA1530A/QR/-X	TRANSISTOR		
Q1401	2SC3928A/QR/-X	TRANSISTOR		
Q1403	2SA1530A/QR/-X	TRANSISTOR		
Q3001	2SC3928A/QR/-X	TRANSISTOR		
Q3002	2SA1530A/QR/-X	TRANSISTOR		
Q3003	2SC3928A/QR/-X	TRANSISTOR		
Q3004	2SA1530A/QR/-X	TRANSISTOR		
Q6501	2SC3928A/QR/-X	TRANSISTOR		
Q6502	2SC3928A/QR/-X	TRANSISTOR		
Q7206	UN2213-X	DIGI TRANSISTOR		
Q7207	DTA144EKA-X	DIGI TRANSISTOR		
Q7501	2SA1162/YG/-X	TRANSISTOR		
Q7508	DTC114EKA-X	DIGI TRANSISTOR		
D1001	EC30HA03L-X	SB DIODE		
D1002	EC30HA03L-X	SB DIODE		
D7001	MA111-X	SI DIODE		
D7003	MA111-X	SI DIODE		
D7005	MA8082/M/-X	Z DIODE		
D7006	MA8082/M/-X	Z DIODE		
D7007	MA8082/M/-X	Z DIODE		
D7008	MA8082/M/-X	Z DIODE		
D7009	MA8082/M/-X	Z DIODE		
D7010	MA111-X	SI DIODE		
D7203	MA111-X	SI DIODE		
D7210	RB501V-40-X	SB DIODE		
D7501	MA111-X	SI DIODE		
D7502	MA111-X	SI DIODE		
D9001	EC30HA03L-X	SB DIODE		
D9003	PTZ3.9B-X	Z DIODE		
D9101	EC30HA03L-X	SB DIODE		
D9102	EC30HA03L-X	SB DIODE		
D9103	PTZ3.9B-X	Z DIODE		
D9104	MA111-X	SI DIODE		
D9201	EC30HA03L-X	SB DIODE		
D9203	PTZ3.9B-X	Z DIODE		
D9204	MA111-X	SI DIODE		
C0103	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C0105	NDC31HJ-270X	C CAPACITOR	27pF 50V J	
C0107	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0109	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0110	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0111	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0112	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0113	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0114	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0115	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0116	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0117	NDC31HJ-560X	C CAPACITOR	56pF 50V J	
C0118	NDC31HJ-151X	C CAPACITOR	150pF 50V J	
C0203	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C0205	NDC31HJ-270X	C CAPACITOR	27pF 50V J	
C0207	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0209	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0210	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0211	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0212	NDC31HJ-820X	C CAPACITOR	82pF 50V J	
C0213	NCB11AK-106X	C CAPACITOR	10uF 10V K	
C0214	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C0215	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z	

⚠Ref No.	Part No.	Part Name	Description Local
C0217	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C0218	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C0303	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C0305	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C0307	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0309	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0310	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0311	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0312	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C0313	NCB11AK-106X	C CAPACITOR	10uF 10V K
C0314	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0315	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C0317	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C0318	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C0401	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C1001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1005	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C1006	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1009	NDC31HJ-220X	C CAPACITOR	22pF 50V J
C1010	NDC31HJ-180X	C CAPACITOR	18pF 50V J
C1011	NDC31HJ-102X	C CAPACITOR	1000pF 50V J
C1012	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1014	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1015	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1016	NCB11AK-106X	C CAPACITOR	10uF 10V K
C1017	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1018	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1019	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1021	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1023	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1025	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1026	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1028	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1029	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1030	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1031	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1032	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1033	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1034	NDC31HJ-390X	C CAPACITOR	39pF 50V J
C1035	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C1037	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1038	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1039	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1040	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1041	NCB10JK-106X	C CAPACITOR	10uF 6.3V K
C1042	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1043	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1045	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1046	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1047	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1048	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1049	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1050	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1051	NCB11CK-105X	C CAPACITOR	1uF 16V K
C1061	NDC31HJ-4R0X	C CAPACITOR	4pF 50V J
C1062	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M
C1063	NCB21AK-225X	C CAPACITOR	2.2uF 10V K
C1064	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1065	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
C1066	NBE40JM-476X	TA E CAPACITOR	47uF 6.3V M
C1102	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1103	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1104	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1105	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1106	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1109	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1202	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1203	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1204	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1205	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1206	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1209	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1302	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1303	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1304	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1305	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1306	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1309	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1402	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1403	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C1404	NDC31HJ-560X	C CAPACITOR	56pF 50V J
C1405	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1406	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C1409	NDC31HJ-151X	C CAPACITOR	150pF 50V J
C1502	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C1508	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C1509	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C1511	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
C3004	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3006	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3008	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3009	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3010	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3016	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3018	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3019	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3021	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3022	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3023	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3028	NDC31HJ-221X	C CAPACITOR	220pF 50V J
C3030	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3031	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3032	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3037	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3040	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C3041	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C3042	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3043	NDC31HJ-101X	C CAPACITOR	100pF 50V J
C3044	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3045	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3047	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3049	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3051	NCB31HK-472X	C CAPACITOR	4700pF 50V K
C3052	NCB31AK-334X	C CAPACITOR	0.33uF 10V K
C3056	NCB31AK-334X	C CAPACITOR	0.33uF 10V K
C3059	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C3060	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C3063	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3065	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3066	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3067	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3068	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3069	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3070	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3071	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3072	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3074	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3076	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3097	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3101	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3105	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3111	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3126	NDC31HJ-390X	C CAPACITOR	39pF 50V J
C3406	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C3501	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3503	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3506	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3507	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3508	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3509	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3511	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3516	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3517	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3518	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3519	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3524	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3527	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3531	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3532	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3533	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C3535	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3539	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3540	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3542	NCF31CZ-474X	C CAPACITOR	0.47uF 16V Z
C3543	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3548	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3549	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3550	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C3551	NBZ0007-107X	SP E CAPACITOR	100uF 4V M
C3552	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C4002	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4003	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4005	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4006	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4008	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C4009	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4010	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4011	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C4012	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4013	NCB31AK-105X	C CAPACITOR	1uF 10V K

⚠Ref No.	Part No.	Part Name	Description Local
C4016	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4020	NCB31AK-105X	C CAPACITOR	1uF 10V K
C4022	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4023	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C4029	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4030	NDC31HJ-470X	C CAPACITOR	47pF 50V J
C4901	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4902	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4906	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4907	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4908	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4909	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4910	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4911	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4913	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4914	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4915	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4916	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4917	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4919	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4920	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4921	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4922	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4923	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4925	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4926	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4931	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4932	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4933	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4934	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4935	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4936	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4937	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4938	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4939	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4940	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4941	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C4942	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C6013	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6014	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6015	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6512	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6513	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6514	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6515	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6516	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C6520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6521	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6522	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C6523	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7001	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7002	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7003	NCF11CZ-475X	C CAPACITOR	4.7uF 16V Z
C7006	NDC31HJ-150X	C CAPACITOR	15pF 50V J
C7007	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7010	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7011	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7012	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C7013	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7017	NDC31HJ-391X	C CAPACITOR	390pF 50V J
C7018	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7025	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7203	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7401	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7402	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7501	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7502	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7503	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7504	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7505	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7506	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7507	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7508	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7509	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7510	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7511	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7512	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7513	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7514	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7515	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7516	NDC31HJ-330X	C CAPACITOR	33pF 50V J
C7517	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C7518	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C7520	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7521	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7522	NEH71CM-106X	E CAPACITOR	10uF 16V M
C7523	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7524	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7525	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7526	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7527	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7528	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7529	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7530	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7531	NEH71CM-476X	E CAPACITOR	47uF 16V M
C7532	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7533	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7534	NCB11AK-106X	C CAPACITOR	10uF 10V K
C7535	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7541	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7542	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7543	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7544	NEH70JM-107X	E CAPACITOR	100uF 6.3V M
C7545	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7546	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
C7547	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C7548	NEH70GM-227X	E CAPACITOR	220uF 4V M
C7550	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C7552	NCB31AK-105X	C CAPACITOR	1uF 10V K
C7553	NCB31HK-471X	C CAPACITOR	470pF 50V K
C7616	NCB11CK-105X	C CAPACITOR	1uF 16V K
C9002	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9005	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9007	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9008	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9010	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9012	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9102	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9104	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9105	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9106	NDC31HJ-121X	C CAPACITOR	120pF 50V J
C9107	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9108	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9111	NCB31HK-822X	C CAPACITOR	8200pF 50V K
C9112	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9202	NCJ41EK-106X-U	C CAPACITOR	10mF 25V K
C9204	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C9205	NCJ41CK-226X-U	C CAPACITOR	22mF 16V K
C9207	NCB31HK-222X	C CAPACITOR	2200pF 50V K
C9209	NEZ0022-157X	E CAPACITOR	150uF 10V M
C9211	NCB31HK-153X	C CAPACITOR	0.015uF 50V K
C9212	NCB31HK-222X	C CAPACITOR	2200pF 50V K
R0105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0106	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0107	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0109	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0110	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0114	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0116	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0121	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0122	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0125	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0126	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0127	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0128	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0129	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0131	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0132	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0133	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0134	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0137	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R0138	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0140	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0141	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0205	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0207	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0208	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0209	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0210	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0211	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0214	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0216	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0219	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0221	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0222	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0225	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0226	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0227	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0228	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0229	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R0231	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0232	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0233	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0234	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0237	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0238	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0240	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0241	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0305	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0307	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R0308	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J
R0309	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R0310	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0311	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0314	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0316	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0319	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0321	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R0322	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0325	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R0326	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0327	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R0328	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R0329	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R0331	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0332	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0333	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0334	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0337	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J
R0338	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R0340	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R0341	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R0501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0504	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0506	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0508	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0516	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0517	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0520	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0522	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0523	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0524	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R0527	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1001	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R1002	NRSA63D-101X	MG RESISTOR	100Ω 1/16W D
R1003	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1004	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R1005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R1006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1010	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J
R1011	NQL093K-R10X	P COIL	0.1uH K
R1012	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J
R1013	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1017	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1018	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1021	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1101	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1102	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1104	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1105	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1106	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R1107	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1113	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1201	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1203	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1204	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1205	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1206	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1207	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R1213	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1301	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1303	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1304	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1305	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1306	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1307	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1313	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1401	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R1403	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R1404	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R1405	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1406	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R1407	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R1413	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J
R1523	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z
R1524	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J
R1525	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R1584	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R2010	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3001	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3008	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3009	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3018	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3019	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3020	NRSA02J-3R3X	MG RESISTOR	3.3Ω 1/10W J
R3021	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3022	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3023	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D
R3024	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3028	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3029	NRSA63D-392X	MG RESISTOR	3.9kΩ 1/16W D
R3030	NRSA63D-102X	MG RESISTOR	1kΩ 1/16W D
R3031	NRSA63D-151X	MG RESISTOR	150Ω 1/16W D
R3032	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3033	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3034	NRSA63J-5R6X	MG RESISTOR	5.6Ω 1/16W J
R3036	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3037	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3038	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R3040	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3041	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R3042	NRSA63J-201X	MG RESISTOR	200Ω 1/16W J
R3043	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3044	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3045	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3047	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R3048	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R3053	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R3054	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3056	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3063	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3064	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R3069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3089	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3090	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3091	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3092	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3093	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3094	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3095	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3096	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3097	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3098	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3099	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3100	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3101	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3102	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3103	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3104	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3105	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3106	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3122	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R3126	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3131	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3132	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3151	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3153	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3155	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3157	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3160	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3161	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3163	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3164	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3165	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3166	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3167	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R3168	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3169	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3170	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3171	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3178	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R3181	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3207	NRS144J-0R0X	MG RESISTOR	0Ω 1/4W J
R3502	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3503	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3505	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3507	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3509	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3511	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3514	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3516	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3518	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3520	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3522	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3524	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3525	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3527	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3529	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3531	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3533	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3536	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3538	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3540	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3542	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R3544	NRSA63J-510X	MG RESISTOR	51Ω 1/16W J
R4004	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4005	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4007	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4016	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4023	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4024	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4027	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4035	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4037	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4039	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4041	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4042	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4044	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R4055	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4056	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R4057	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4058	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R4059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4060	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R4061	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4065	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4068	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4101	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4102	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4103	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4104	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4105	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4106	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R4108	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R4152	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6025	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6028	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6031	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6034	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6036	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6038	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6039	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6040	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6043	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6057	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6058	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6507	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6510	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6512	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6513	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6514	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6515	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R6521	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6529	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R6531	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6532	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6533	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6534	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6536	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6537	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6538	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6540	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6541	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6542	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6544	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R6548	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R6550	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R6558	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7001	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7002	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7004	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7005	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7006	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7007	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7008	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7010	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7011	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7014	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7016	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7017	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7018	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7019	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7021	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7022	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7023	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7024	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7025	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7026	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7029	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7031	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7033	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7034	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7035	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7038	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7039	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7040	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7041	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7042	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7043	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7047	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7048	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7049	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7057	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7058	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7059	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7060	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7061	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7063	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J
R7064	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7065	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7066	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7067	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R7068	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7069	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7070	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7071	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7077	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7080	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7081	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7082	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7085	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7086	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7087	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7088	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7089	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7090	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7091	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7092	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7093	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7094	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7095	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7096	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7097	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7098	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7099	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7100	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7101	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R7106	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R7107	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7108	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7109	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7110	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7111	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7112	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7115	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7117	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7118	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7119	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7120	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7123	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7132	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7134	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7135	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7136	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7137	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7140	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7143	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7144	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7145	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7146	NCB30JK-105X	C CAPACITOR	1uF 6.3V K
R7148	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7149	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7150	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7151	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7152	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R7153	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7158	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7214	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7215	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R7216	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7401	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7404	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7501	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7510	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7511	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7514	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7515	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7518	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7553	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7556	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7557	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7558	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7559	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7560	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R7561	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7565	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R7566	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7567	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7568	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R7576	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7588	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R7590	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7599	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7602	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7603	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7692	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7701	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R7702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7705	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7706	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7707	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7708	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J
R7709	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7710	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7711	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7712	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7713	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7714	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7715	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7716	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7717	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7718	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R7719	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J
R7720	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9001	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9003	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D
R9004	NRSA63D-124X	MG RESISTOR	120kΩ 1/16W D
R9005	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9006	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9008	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R9101	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9103	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D
R9104	NRSA63D-223X	MG RESISTOR	22kΩ 1/16W D
R9105	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9106	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R9107	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9108	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9109	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9201	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R9202	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9204	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D
R9205	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D
R9206	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R9207	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
R9208	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
R9209	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R9210	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
RA1001	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA1003	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3002	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3004	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J x4
RA3013	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3014	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3015	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3016	NRZ0034-220W	NET RESISTOR	22Ω 1/32W J x4
RA3018	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3020	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3022	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3023	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3024	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3025	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3026	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3028	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3030	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3032	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3502	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3506	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3508	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3512	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3516	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3518	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3521	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3523	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3526	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3530	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3531	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3536	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3540	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3542	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA3545	NRZ0080-510X	NET RESISTOR	51Ω 1/16W J
RA3547	NRZ0040-510X	NET RESISTOR	51Ω 1/16W J x4
RA4007	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4008	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4009	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4010	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4011	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA4012	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J x4
RA6515	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4
RA7007	NRZ0040-0R0X	NET RESISTOR	0Ω 1/16W J x4
RB2001	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2002	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
RB2003	NRZ0080-0R0X	NET RESISTOR	0Ω 1/16W J
L0101	NQL092K-2R2X	COIL	2.2uH K
L0102	NQL092K-1R0X	P COIL	1uH K
L0201	NQL092K-2R2X	COIL	2.2uH K
L0202	NQL092K-1R0X	P COIL	1uH K
L0301	NQL092K-2R2X	COIL	2.2uH K
L0302	NQL092K-1R0X	P COIL	1uH K
L0401	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1001	NQR0489-002X	FERRITE BEADS	
L1002	NQR0489-002X	FERRITE BEADS	
L1003	NQL092K-1R5X	COIL	1.5uH K
L1004	NQR0489-002X	FERRITE BEADS	
L1005	NQR0489-002X	FERRITE BEADS	
L1006	NQR0489-002X	FERRITE BEADS	
L1008	NQL79GM-220X	COIL	22uH M
L1010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1011	NQL79GM-470X	COIL	47uH M
L1101	NQL092K-6R8X	COIL	6.8uH K
L1102	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L1103	NQL092K-1R0X	P COIL	1uH K
L1201	NQL092K-6R8X	COIL	6.8uH K
L1203	NQL092K-1R0X	P COIL	1uH K
L1301	NQL092K-6R8X	COIL	6.8uH K

⚠Ref No.	Part No.	Part Name	Description	Local
L1303	NQL092K-1R0X	P COIL	1uH K	
L1401	NQL092K-6R8X	COIL	6.8uH K	
L1403	NQL092K-1R0X	P COIL	1uH K	
L1501	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3001	NQR0489-002X	FERRITE BEADS		
L3005	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3006	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3007	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3008	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3009	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3010	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3012	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L3501	NQR0413-003X	FERRITE BEADS		
L4001	NQR0413-003X	FERRITE BEADS		
L4002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L4003	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L6501	NQR0351-001X	FERRITE BEADS		
L6502	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L6508	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L6509	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L6510	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J x4	
L7001	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7002	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7004	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7005	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L7501	NQL092K-4R7X	COIL	4.7uH K	
L7502	NQL092K-4R7X	COIL	4.7uH K	
L7503	NQL092K-4R7X	COIL	4.7uH K	
L7504	NQL092K-4R7X	COIL	4.7uH K	
L7505	NQL092K-4R7X	COIL	4.7uH K	
L7506	NQL914M-4R7X	COIL	4.7uH M	
L7507	NQL092K-4R7X	COIL	4.7uH K	
L7508	NQL092K-4R7X	COIL	4.7uH K	
L7509	NQL092K-4R7X	COIL	4.7uH K	
L7510	NQL092K-4R7X	COIL	4.7uH K	

⚠Ref No.	Part No.	Part Name	Description	Local
L7511	NQL092K-4R7X	COIL	4.7uH K	
L7512	NQL914M-4R7X	COIL	4.7uH M	
L7513	NQL914M-4R7X	COIL	4.7uH M	
L7514	NQL092K-4R7X	COIL	4.7uH K	
L9001	NQL71EM-150X	COIL	15uH M	
L9101	NQL71EM-150X	COIL	15uH M	
L9201	NQL71EM-150X	COIL	15uH M	
CN001	QGF0508F1-50X	CONNECTOR	FFC/FPC (1-50)	
CN002	QGF0508F1-30X	CONNECTOR	FFC/FPC (1-30)	
K1001	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K1004	NQR0489-002X	FERRITE BEADS		
K3003	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K3006	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K7002	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
K7501	NRSA63J-390X	MG RESISTOR	39Ω 1/16W J	
K7502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K7503	NQR0389-003X	FERRITE BEADS		
LC0102	NQR0483-005X	EMI FILTER	100uF 25V Z	
LC0519	NQR0416-001X	EMI FILTER	240pF 16V M	
LC0524	NQR0415-005X	EMI FILTER	0.1uF 25V M	
LC0525	NQR0470-003X	EMI FILTER	100pF 50V +50%-20%	
LC6501	NQR0479-001X	EMI FILTER		
LC7501	NQR0313-007X	EMI FILTER	1000pF 50V M	
LC7502	NQR0431-001X	EMI FILTER	0.22uF 50V Z	
SL7001	NAX0613-001X	C RESONATOR		
X1001	NAX0642-001X	CRYSTAL		
X3001	NAX0635-001X	CXO		
X3003	NAX0668-001X	CXO		
X4001	NAX0669-001X	C RESONATOR		
X7501	NAX0618-001X	CRYSTAL		

RECEIVER P.W. BOARD ASS'Y (SFL0F301A-H2)

REFER TO PARTS LIST IN PAGE 3-18 FOR THIS P.W. BOARD.


REMOTE CONTROL UNIT PARTS LIST (RM-C1830-1C)

⚠	Ref No.	Part No.	Part Name	Description	Local
		2AA070311	BATTERY COVER		

PACKING PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description	Local
	001	LC10845-069A-H	PACKING CASE		
	002	LC21688-002A-H	CUSHION SPACE		
	003	LC11983-002B-H	CUSHION ASSY	4pcs in 1set	
	004	QPA01002305	POLY BAG	10cm x 23cm	LT-Z26SX4B,LT-Z26SX4B/A
	005	LCT1516-001A-H	CAUTION SHEET		
	006	GG30097-003A-H	POLY BAG		
	007	RM-C1830-1C	REMOCON UNIT		
	008	QAM0690-001	F CABLE		
	009	CP30966-001-H	POLY BAG		
	010	----------	WARRANTY CARD	BT-56012-1H	LT-Z26SX4B/A
⚠	011	LCT1732-001A-H	INST BOOK	English	
⚠	012	LCT1733-001A-H	INST BOOK	Traditional Chinese/Persian/Arabic/Russian/French	LT-Z26SX4B,LT-Z26SX4B/S,LT-Z26SX4S/S
	013	----------	BATTERY	R6P/AA(x2)	
	014	GG20025-001A-H	CORNER LABEL	2pcs in 1set	LT-Z26SX4B/A
	014	GG20025-003A-H	CORNER LABEL	2pcs in 1set	LT-Z26SX4B,LT-Z26SX4B/S,LT-Z26SX4S/S
	015	GG40016-002A-H	STICKER		LT-Z26SX4B/A

PACKING

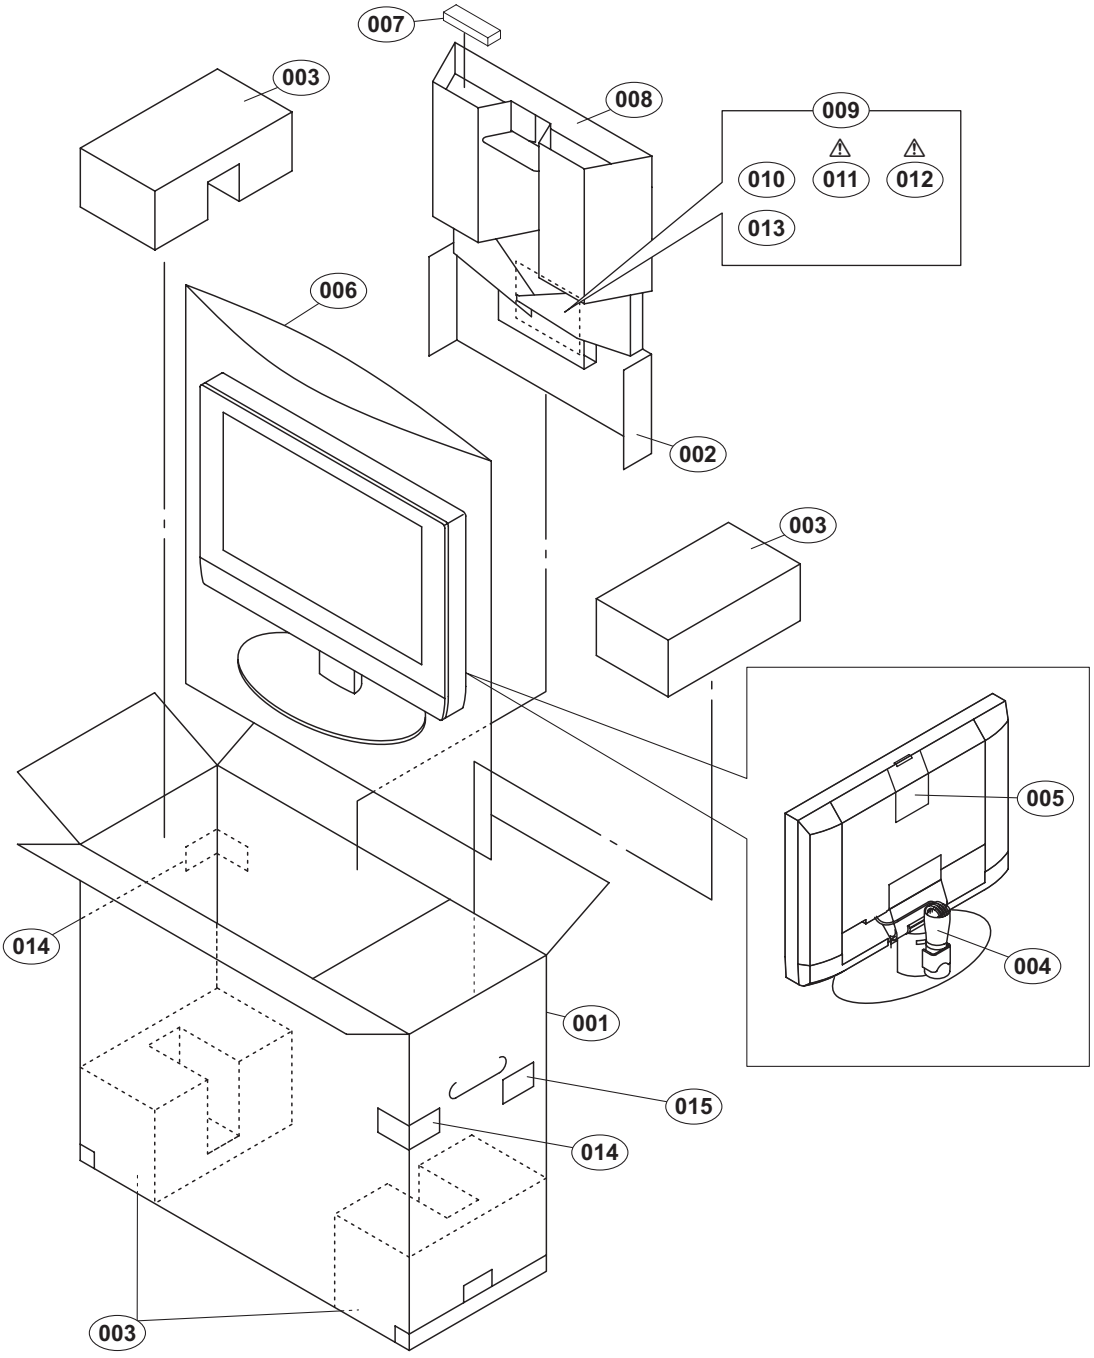
007
003
008
009
010
011
012
013
006
002
003
005
004
014
001
015
014
003